



Industrial Automation Headquarters

Delta Electronics, Inc.
Taoyuan Technology Center
No.18, Xinglong Rd., Taoyuan City,
Taoyuan County 33068, Taiwan
TEL: 886-3-362-6301 / FAX: 886-3-371-6301

Asia

Delta Electronics (Jiangsu) Ltd.
Wujiang Plant 3
1688 Jiangxing East Road,
Wujiang Economic Development Zone
Wujiang City, Jiang Su Province,
People's Republic of China (Post code: 215200)
TEL: 86-512-6340-3008 / FAX: 86-769-6340-7290

Delta Greentech (China) Co., Ltd.
238 Min-Xia Road, Pudong District,
ShangHai, P.R.C.
Post code : 201209
TEL: 86-21-58635678 / FAX: 86-21-58630003

Delta Electronics (Japan), Inc.
Tokyo Office
2-1-14 Minato-ku Shibadaimon,
Tokyo 105-0012, Japan
TEL: 81-3-5733-1111 / FAX: 81-3-5733-1211

Delta Electronics (Korea), Inc.
1511, Byucksan Digital Valley 6-cha, Gasan-dong,
Geumcheon-gu, Seoul, Korea, 153-704
TEL: 82-2-515-5303 / FAX: 82-2-515-5302

Delta Electronics Int'l (S) Pte Ltd
4 Kaki Bukit Ave 1, #05-05, Singapore 417939
TEL: 65-6747-5155 / FAX: 65-6744-9228

Delta Electronics (India) Pvt. Ltd.
Plot No 43 Sector 35, HSIIDC
Gurgaon, PIN 122001, Haryana, India
TEL : 91-124-4874900 / FAX : 91-124-4874945

Americas

Delta Products Corporation (USA)
Raleigh Office
P.O. Box 12173, 5101 Davis Drive,
Research Triangle Park, NC 27709, U.S.A.
TEL: 1-919-767-3800 / FAX: 1-919-767-8080

Delta Greentech (Brasil) S.A
Sao Paulo Office
Rua Itapeva, 26 - 3° andar Edificio Itapeva One-Bela Vista
01332-000-São Paulo-SP-Brazil
TEL: +55 11 3568-3855 / FAX: +55 11 3568-3865

Europe

Deltronics (The Netherlands) B.V.
Eindhoven Office
De Witbogt 20, 5652 AG Eindhoven, The Netherlands
TEL: 31-40-2592850 / FAX: 31-40-2592851

*We reserve the right to change the information in this catalogue without prior notice.

Delta Elevator Drive VFD-ED Series User Manual



Delta Elevator Drive VFD-ED Series User Manual



www.deltaww.com



Thank you for choosing DELTA's high-performance VFD-ED Series. The VFD-ED Series is manufactured with high-quality components and materials and incorporates the latest microprocessor technology available.

This manual is to be used for the installation, parameter setting, troubleshooting, and daily maintenance of the AC motor drive. To guarantee safe operation of the equipment, read the following safety guidelines before connecting power to the AC motor drive. Keep this operating manual at hand and distribute to all users for reference.

To ensure the safety of operators and equipment, only qualified personnel familiar with AC motor drive are to do installation, start-up and maintenance. Always read this manual thoroughly before using VFD-ED series AC Motor Drive, especially the WARNING, DANGER and CAUTION notes. Failure to comply may result in personal injury and equipment damage. If you have any question, please contact your dealer.

PLEASE READ PRIOR TO INSTALLATION FOR SAFETY.



1. AC input power must be disconnected before any wiring to the AC motor drive is made.
2. A charge may still remain in the DC-link capacitors with hazardous voltages, even if the power has been turned off. To prevent personal injury, please ensure that power has turned off before opening the AC motor drive and wait ten minutes for the capacitors to discharge to safe voltage levels.
3. Never reassemble internal components or wiring.
4. The AC motor drive may be destroyed beyond repair if incorrect cables are connected to the input/output terminals. Never connect the AC motor drive output terminals U/T1, V/T2, and W/T3 directly to the AC mains circuit power supply.
5. Ground the VFD-ED using the ground terminal. The grounding method must comply with the laws of the country where the AC motor drive is to be installed. Refer to the Basic Wiring Diagram.
6. VFD-ED series is used only to control variable speed of 3-phase induction motors, NOT for 1-phase motors or other purpose.
7. VFD-ED series shall NOT be used for life support equipment or any life safety situation.



1. DO NOT use Hi-pot test for internal components. The semi-conductor used in AC motor drive easily damage by high-voltage.
2. There are highly sensitive MOS components on the printed circuit boards. These components are especially sensitive to static electricity. To prevent damage to these components, do not touch these components or the circuit boards with metal objects or your bare hands.
3. Only qualified persons are allowed to install, wire and maintain AC motor drives.



1. Some parameters settings can cause the motor to run immediately after applying power.
2. DO NOT install the AC motor drive in a place subjected to high temperature, direct sunlight, high humidity, excessive vibration, corrosive gases or liquids, or airborne dust or metallic particles.
3. Only use AC motor drives within specification. Failure to comply may result in fire, explosion or electric shock.
4. To prevent personal injury, please keep children and unqualified people away from the equipment.
5. When the motor cable between AC motor drive and motor is too long, the layer insulation of the motor may be damaged. Please use a frequency inverter duty motor or add an AC output reactor to prevent damage to the motor. Refer to appendix B Reactor for details.
6. The rated voltage for AC motor drive must be $\leq 240V$ ($\leq 480V$ for 460V models) and the mains supply current capacity must be $\leq 5000A$ RMS ($\leq 10000A$ RMS for the $\geq 40hp$ (30kW) models)

Firmware version: 1.01

Chapter 1 Introduction


1-1 Receiving and Inspection

After receiving the AC motor drive, please check for the following:


- 1) Inspect the unit after unpacking to assure it was not damaged during shipment. Make sure that the part number printed on the package corresponds with the part number indicated on the nameplate.
- 2) Make sure that the voltage for the wiring lie within the range as indicated on the nameplate. Install the AC motor drive according to this manual.
- 3) Before applying the power, make sure that all the devices, including power, motor, control board and digital keypad, are connected correctly.
- 4) When wiring the AC motor drive, make sure that the wiring of input terminals “R/L1, S/L2, T/L3” and output terminals”U/T1, V/T2, W/T3” are correct to prevent drive damage.
- 5) When power is applied, select the language and set parameter groups via the digital keypad (KPED-LE01). When executing a trial run, begin with a low speed and then gradually increase the speed untill the desired speed is reached.

1-2 Nameplate Information


Using 15HP/11kW 230V, 3-Phase as an exemple.

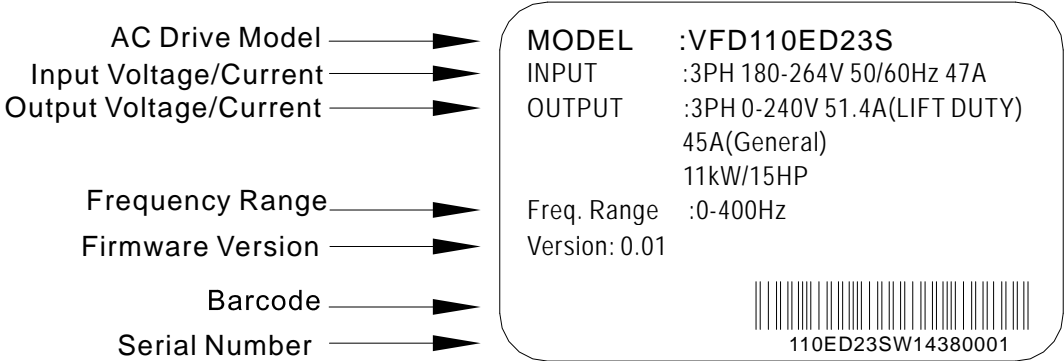

1-3 Model Name

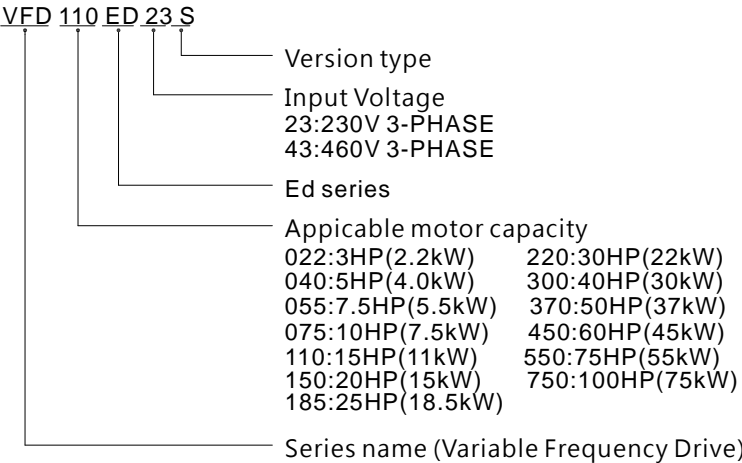


1-4 Serial Number

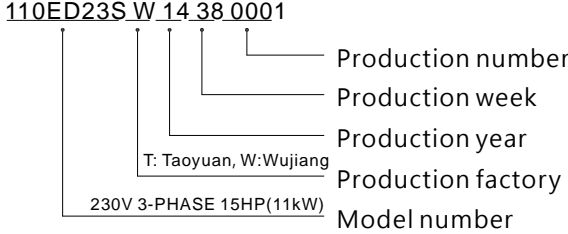

1-5 RFI Switch

The AC motor drive may emit the electrical noise. The RFI switch is used to suppress the interference (Radio Frequency Interference) on the power line. The RFI Switch of Frame C, D, E are at similar position (Frame B doesn't have a RFI Switch). Open the top cover to remove the RFI switch as shown in the image below.

Frame E

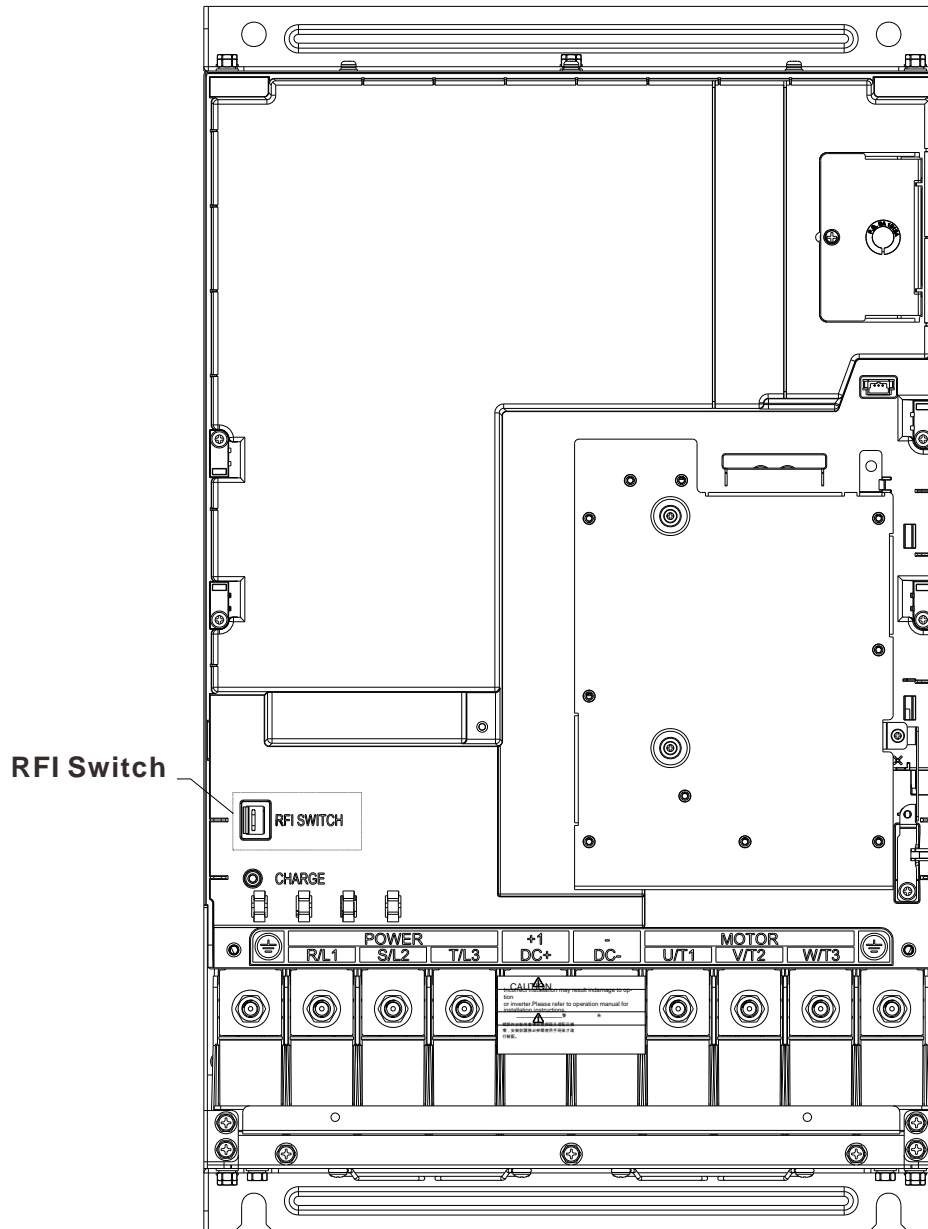


Isolating main power from ground:

When the power distribution system of the Power Regenerative Unit is a floating ground system (IT) or an asymmetric ground system (TN), the RFI short-circuit cable must be cut off. Cutting off the short-circuit cable also cuts off the internal RFI capacitor (filter capacitor) between the system's frame and the central circuits to avoid damaging the central circuits and (according to IEC 61800-3) reduce the ground leakage current.

Important points regarding ground connection

- ☑ To ensure the safety of personnel, proper operation, and to reduce electromagnetic radiation, the Power Regenerative Unit must be properly grounded during installation.
- ☑ The diameter of the cables must meet the size specified by safety regulations.
- ☑ The shielded cable must be connected to the ground of the Power Regenerative Unit to meet safety regulations.
- ☑ The shielded cable can only be used as the ground for equipment when the aforementioned points are met.
- ☑ When installing multiple sets of Power Regenerative Units, do not connect the grounds of the Power Regenerative Units in series. As shown below

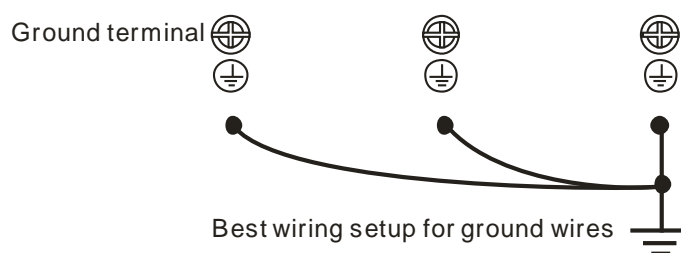

Pay particular attention to the following points:

- ☑ After turning on the main power, do not cut the RFI short-circuit cable while the power is on.
- ☑ Make sure the main power is turned off before cutting the RFI short-circuit cable.
- ☑ Cutting the RFI short-circuit cable will also cut off the conductivity of the capacitor. Gap discharge may occur once the transient voltage exceeds 1000V.

If the RFI short-circuit cable is cut, there will no longer be reliable electrical isolation. In other words, all controlled input and outputs can only be seen as low-voltage terminals with basic electrical isolation. Also, when the internal RFI capacitor is cut off, the Power Regenerative Unit will no longer be electromagnetic compatible.

- ☑ The RFI short-circuit cable may not be cut off if the main power is a grounded power system.
- ☑ The RFI short-circuit cable may not be cut off while conducting high voltage tests. When conducting a high voltage test to the entire facility, the main power and the motor must be disconnected if leakage current is too high.

Floating Ground System(IT Systems)





A floating ground system is also called IT system, ungrounded system, or high impedance/resistance (greater than 30Ω) grounding system.

- ☑ Disconnect the ground cable from the internal EMC filter.
- ☑ In situations where EMC is required, check whether there is excess electromagnetic radiation affecting nearby low-voltage circuits. In some situations, the adapter and cable naturally provide enough suppression. If in doubt, install an extra electrostatic shielded cable on the power supply side between the main circuit and the control terminals to increase security.
- ☑ Do not install an external RFI/EMC filter, the EMC filter will pass through a filter capacitor, thus connecting power input to ground. This is very dangerous and can easily damage the Power Regenerative Unit.

Asymmetric Ground System (Corner Grounded TN Systems)


Caution: Do not cut the RFI short-circuit cable while the input terminal of the Power Regenerative Unit carries power.

In the following four situations, the RFI short-circuit cable must be cut off. This is to prevent the system from grounding through the RFI capacitor, damaging the Power Regenerative Unit.

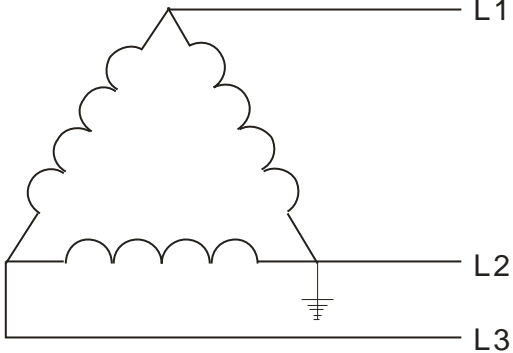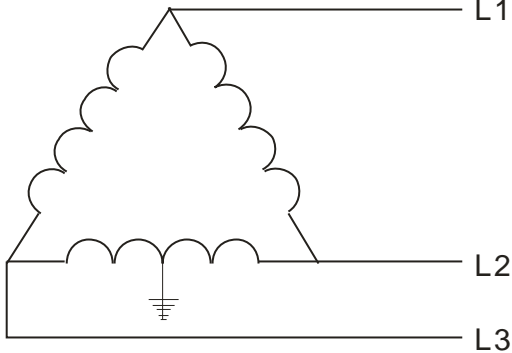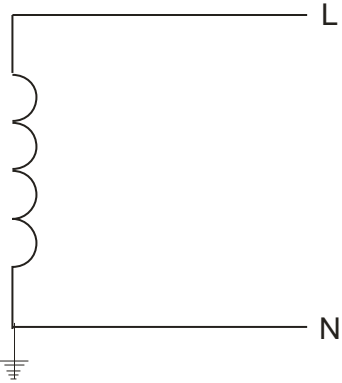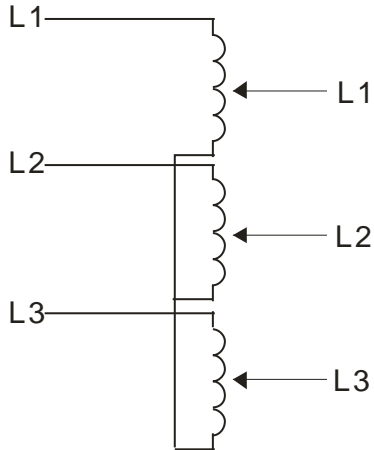RFI short-circuit cable must be cut off	
<p>1. Grounding at a corner in a triangle configuration</p> 	<p>2. Grounding at a midpoint in a polygonal configuration</p> 
<p>3. Grounding at one end in a single-phase configuration</p> 	<p>4. No stable neutral grounding in a three-phase autotransformer configuration</p> 

Use RFI short-circuit


Internal grounding through RFI capacitor, which reduces electromagnetic radiation. In a situation with higher requirements for electromagnetic compatibility, and using a symmetrical grounding power system, an EMC filter can be installed. For example, the diagram on the right is a symmetrical grounding power system.

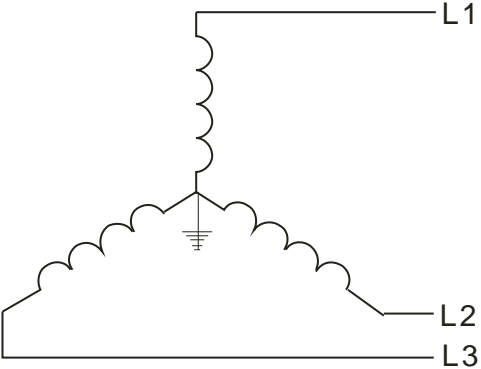

1-6 Dimensions

Frame B

VFD022ED21S, VFD037ED21S, VFD040ED23S/43S;

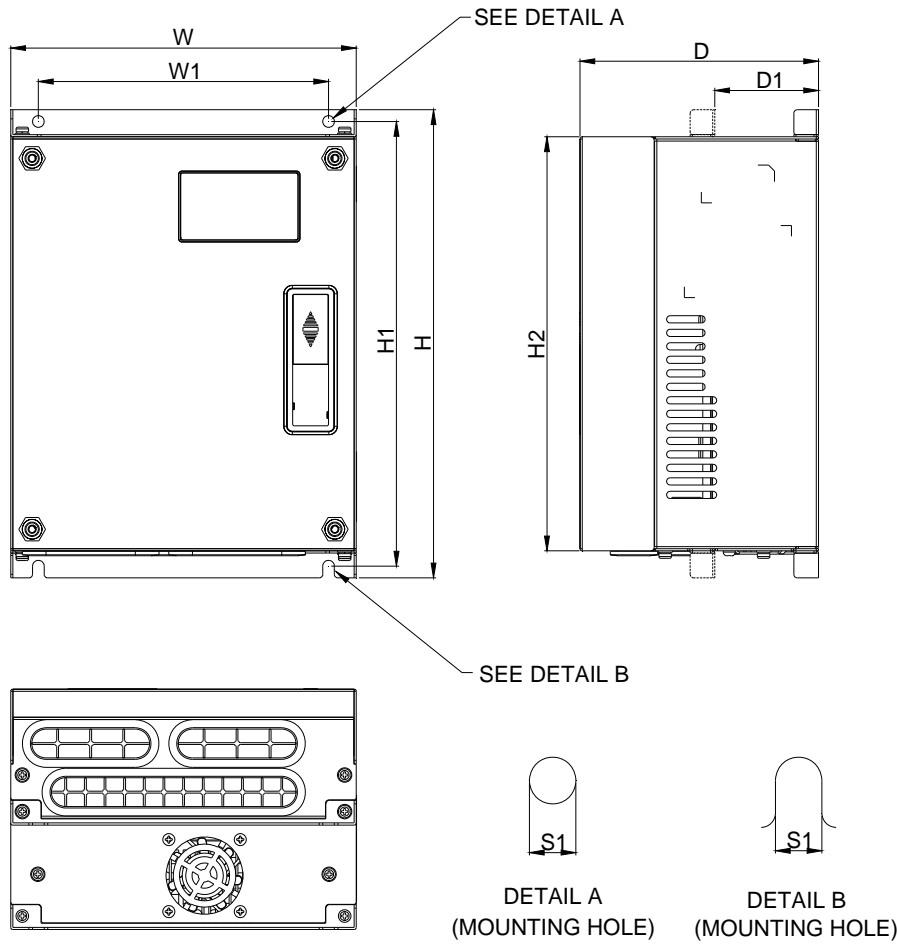

DIMENSIONAL


UNIT:mm[inch]

FRAME	W	W1	H	H1	H2	D	D1*	S1
B	193.5 [7.60]	162.5 [6.39]	260.0 [10.22]	247.0 [9.71]	230.0 [9.04]	133.5 [5.25]	58.0 [2.28]	6.5 [0.26]

*D1: This dimension is for flange mounting application reference.

Frame C

VFD055ED23S/43S, VFD075ED23S/43S, VFD110ED23S/43S, VFD150ED43S, VFD185ED43S;

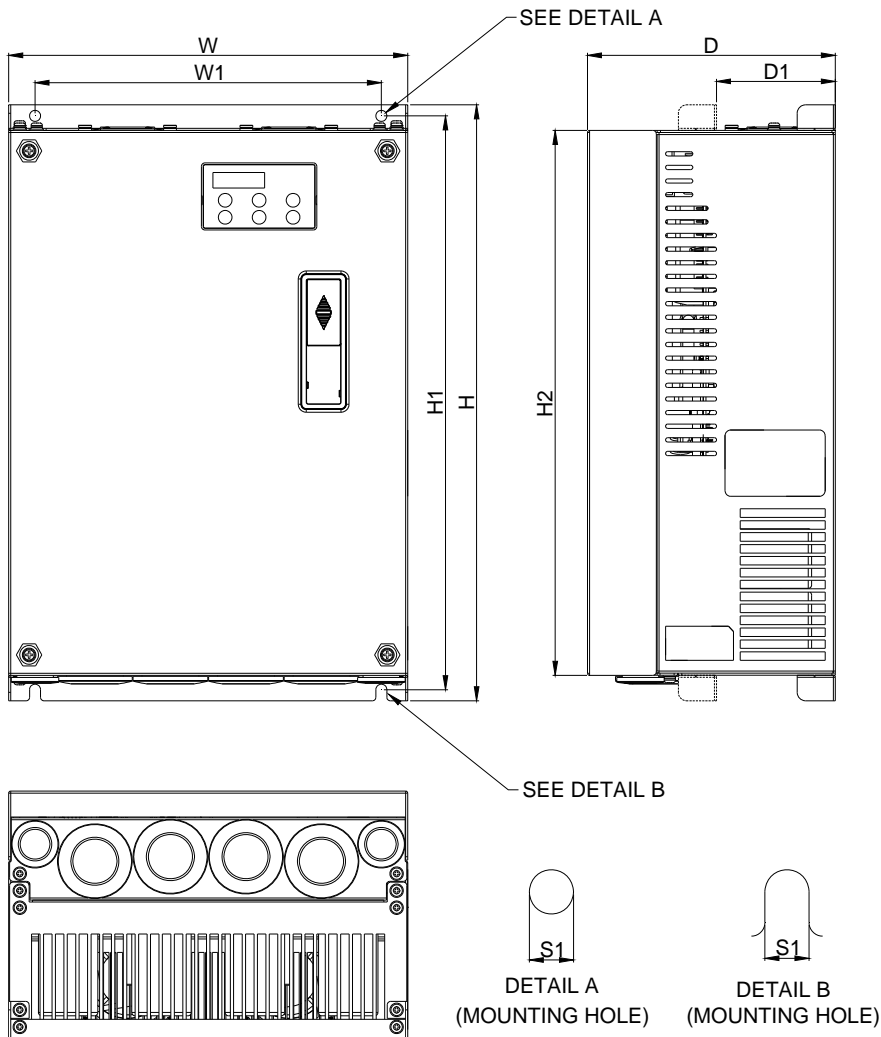

DIMENSIONAL


UNIT:mm[inch]

FRAME	W	W1	H	H1	H2	D	D1*	S1
C	235.0 [9.25]	204.0 [8.03]	350.0 [13.78]	337.0 [13.27]	320.0 [15.60]	146.0 [5.75]	70.0 [2.76]	6.5 [0.26]

*D1: This dimension is for flange mounting application reference.

Frame D

VFD150ED23S, VFD185ED23S, VFD220ED23S/43S, VFD300ED43S;

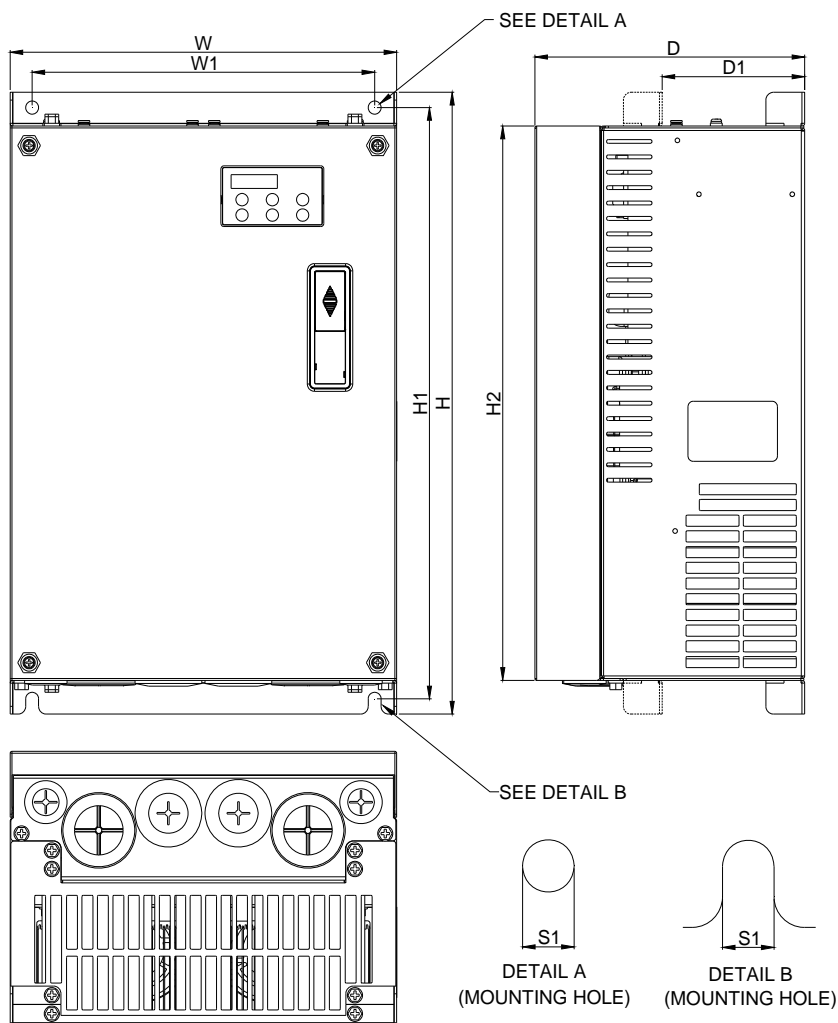

DIMENSIONAL


UNIT:mm[inch]

FRAME	W	W1	H	H1	H2	D	D1*	S1
D	255.0 [10.04]	226.0 [8.90]	403.8 [15.90]	384.0 [15.12]	360.0 [14.17]	178.0 [7.01]	94.0 [3.70]	8.5 [0.33]

*D1: This dimension is for flange mounting application reference.

Frame E

VFD300ED23S, VFD370ED23S/43S, VFD450ED43S, VFD550ED43S, VFD750ED43S;

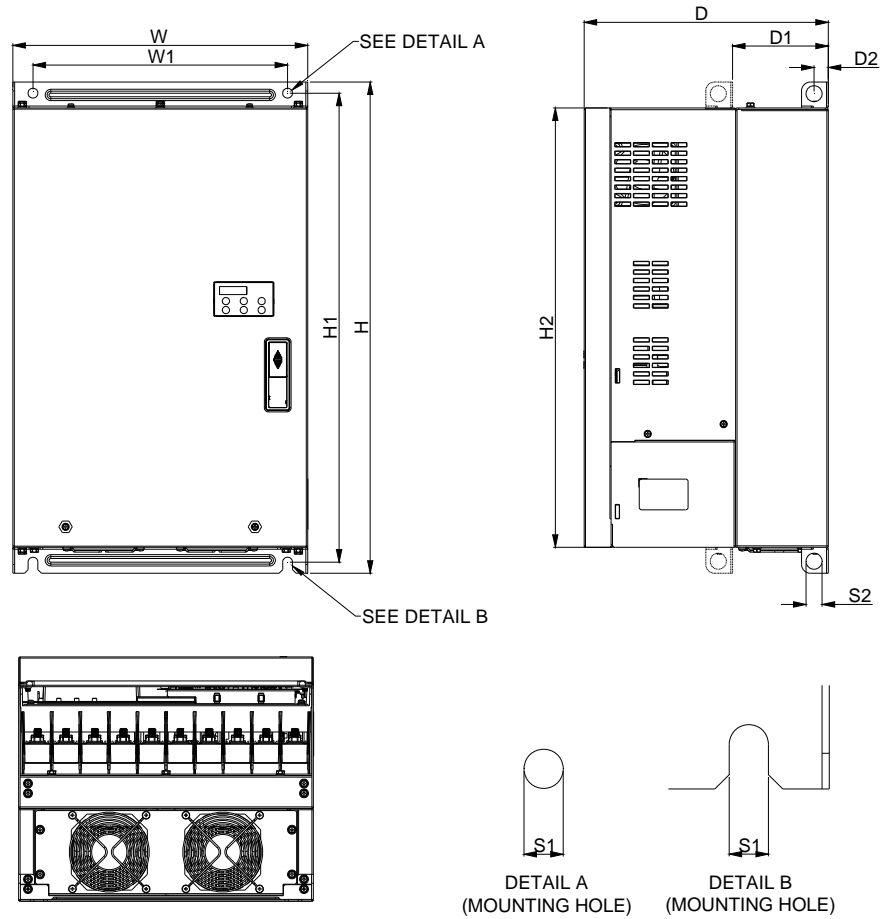


DIMENSIONAL

UNIT:mm[inch]

FRAME	W	W1	H	H1	H2	D	D1*	D2	S1	S2
E	330.0 [12.99]	285.0 [11.22]	550.0 [21.65]	525.0 [20.67]	492.0 [19.37]	273.4 [10.76]	107.2 [4.22]	16.0 [0.63]	11.0 [0.43]	18.0 [0.71]

*D1: This dimension is for flange mounting application reference.

Built-in Digital Keypad
KPED-LE01

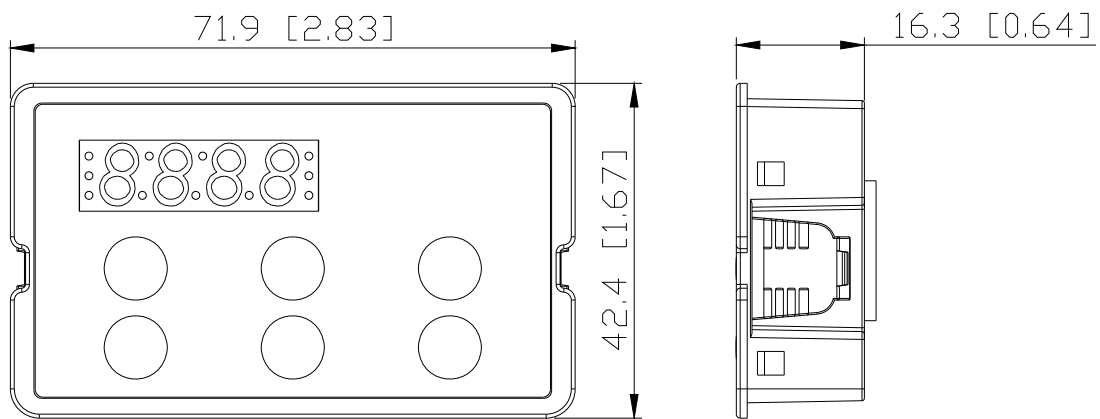


Chapter 2 Installation

2-1 Minimum Mounting Clearance and Installation

NOTE

- ☑ Prevent fiber particles, scraps of paper, shredded wood saw dust, metal particles, etc. from adhering to the heat sink
- ☑ Install the AC motor drive in a metal cabinet. When installing one drive below another one, use a metal separation between the AC motor drives to prevent mutual heating and to prevent the risk of fire accident.
- ☑ Install the AC motor drive in Pollution Degree 2 environments only: normally only nonconductive pollution occurs and temporary conductivity caused by condensation is expected.

The image below is for reference only.

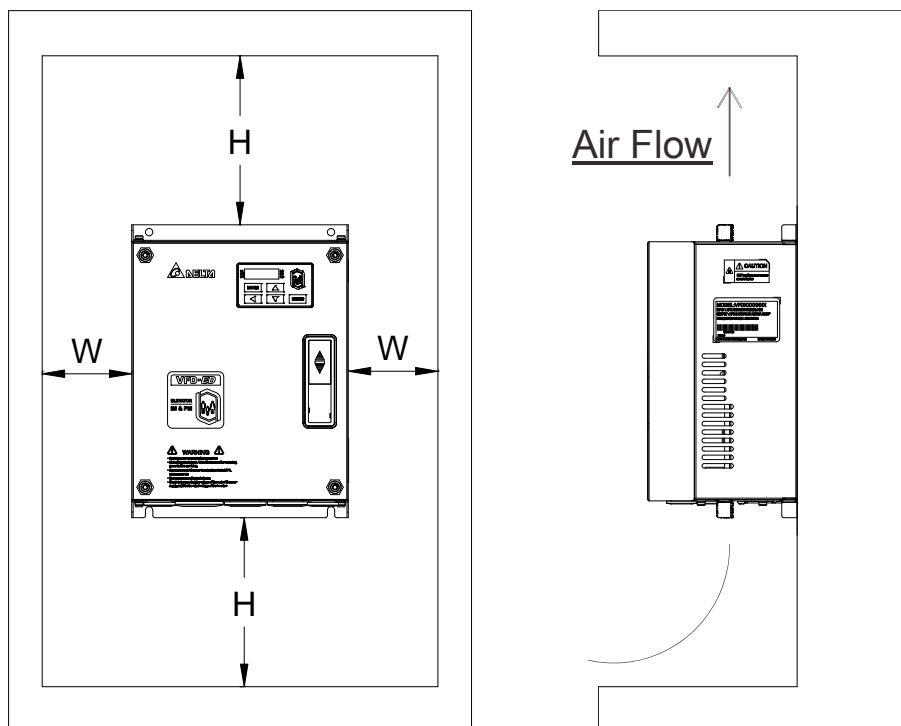

2-2 Minimum mounting clearance

Horsepower	Width	Height
	mm (inch)	mm (inch)
3-5HP	50 (2)	150 (6)
7.5-20HP	75 (3)	175 (7)
25-30HP	75 (3)	200 (8)

Frame	Capacity	Model No.
B	3.0-5.0HP (2.2-4kW)	VFD022ED21S, VFD037ED21S, VFD040ED23S/43S
C	7.5-15HP (5.5-11kW)	VFD055ED23S/43S, VFD075ED23S/43S, VFD110ED23S/43S, VFD150ED43S, VFD185ED43S
D	20-40HP (15-30kW)	VFD150ED23S, VFD185ED23S, VFD220ED23S/43S VFD300ED43S
E	40-100HP (30-75kW)	VFD300ED23S, VFD370ED23S/43S, VFD450ED43S, VFD550ED43S, VFD750ED43S

NOTE

The minimum mounting clearances stated in the table above applies to AC motor drives frame B,C,D and E. A drive which fails to follow the minimum mounting clearances may cause the fan to malfunction and heat dissipation problem.


Model No.	Air flow rate for cooling						Power Dissipation AC motor drive		
	Flow Rate(cfm)			Flow Rate(m3/hr)			Power Dissipation		
	External	Internal	Total	External	Internal	Total	Loss External (Heat Sink)	Internal	Total
VFD022ED21S	13.7	-	13.7	23.3	-	23.3	60	36	96
VFD037ED21S	23.9	-	23.9	40.7	-	40.7	84	46	130
VFD040ED23S	23.9	-	23.9	40.7	-	40.7	133	49	182
VFD055ED23S	48.5	-	48.5	82.4	-	82.4	212	67	279
VFD075ED23S	48.5	-	48.5	82.4	-	82.4	292	86	379
VFD110ED23S	47.9	-	47.9	81.4	-	81.4	355	121	476
VFD150ED23S	64.6	-	64.6	109.8	-	109.8	490	161	651
VFD185ED23S	102.3	-	102.3	173.8	-	173.8	638	184	822
VFD220ED23S	102.8	-	102.8	174.7	-	174.7	723	217	939
VFD300ED23S	179	30	209	304	51	355	932	186	1118
VFD370ED23S	179	30	209	304	51	355	1112	222	1334
VFD040ED43S	13.7	-	13.7	23.3	-	23.3	123	42	165
VFD055ED43S	48.5	-	48.5	82.4	-	82.4	185	55	240
VFD075ED43S	48.5	-	48.5	82.4	-	82.4	249	71	320
VFD110ED43S	47.9	-	47.9	81.4	-	81.4	337	94	431


VFD150ED43S	46.1	-	46.1	78.4	-	78.4	302	123	425
VFD185ED43S	46.1	-	46.1	78.4	-	78.4	391	139	529
VFD220ED43S	102.8	-	102.8	174.7	-	174.7	642	141	783
VFD300ED43S	83.7	-	83.7	142.2	-	142.2	839	180	1019
VFD370ED43S	179	30	209	304	51	355	803	252	1055
VFD450ED43S	179	30	209	304	51	355	1014	270	1284
VFD550ED43S	179	30	209	304	51	355	1244	275	1519
VFD750ED43S	186	30	216	316	51	367	1541	338	1878

Dearating Capacity of Carrier Frequency (Fc):

Frame	B	C	D	E	E
Fc(kHz)	2.2~4 kW	5.5~11 kW	15~22 kW	30~45 kW	55~75kW
0	100%	100%	100%	100%	100%
1	100%	100%	100%	100%	100%
2	100%	100%	100%	100%	100%
3	100%	100%	100%	100%	100%
4	100%	100%	100%	100%	100%
5	100%	100%	100%	100%	100%
6	100%	100%	100%	100%	100%
7	100%	100%	100%	90.73%	-
8	100%	100%	100%	82.20%	-
9	94.24%	100%	92.32%	74.31%	-
10	88.92%	100%	85.21%	-	-
11	82.54%	95.35%	78.63%	-	-
12	78.08%	91.02%	72.53%	-	-
13	73.95%	86.98%	66.87%	-	-
14	70.14%	84.14%	61.62%	-	-
15	66.61%	80.67%	56.74%	-	-

Derating Curve of Carrier Frequency (Fc):

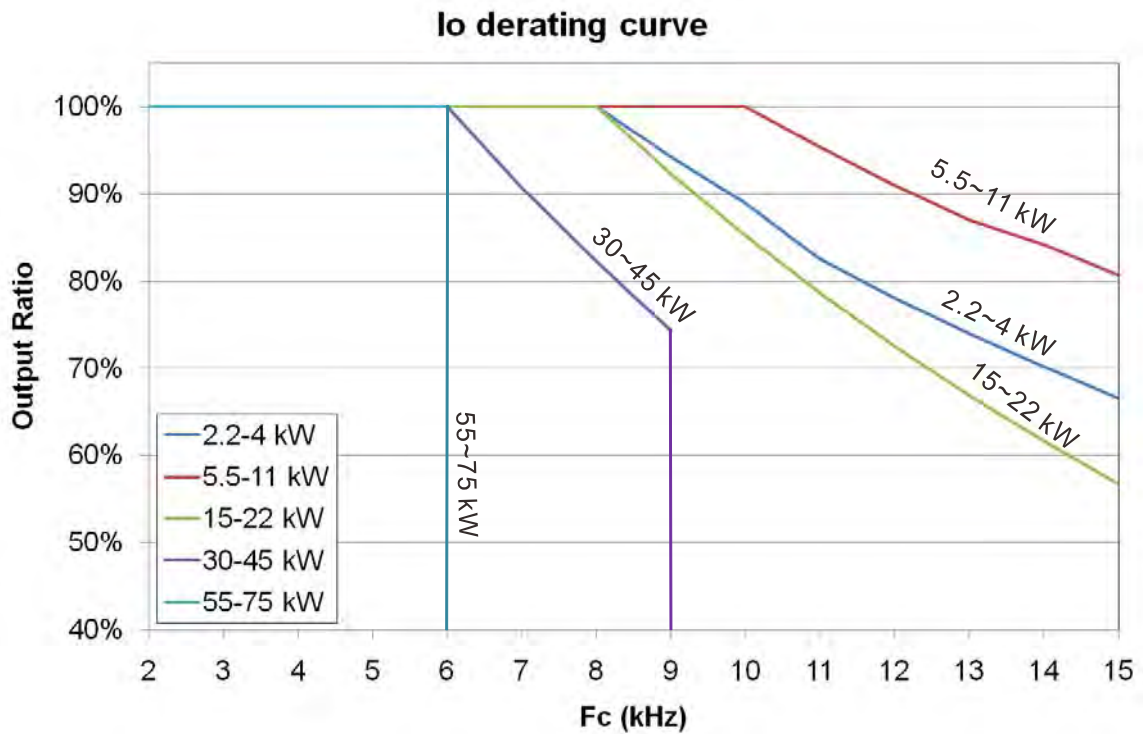

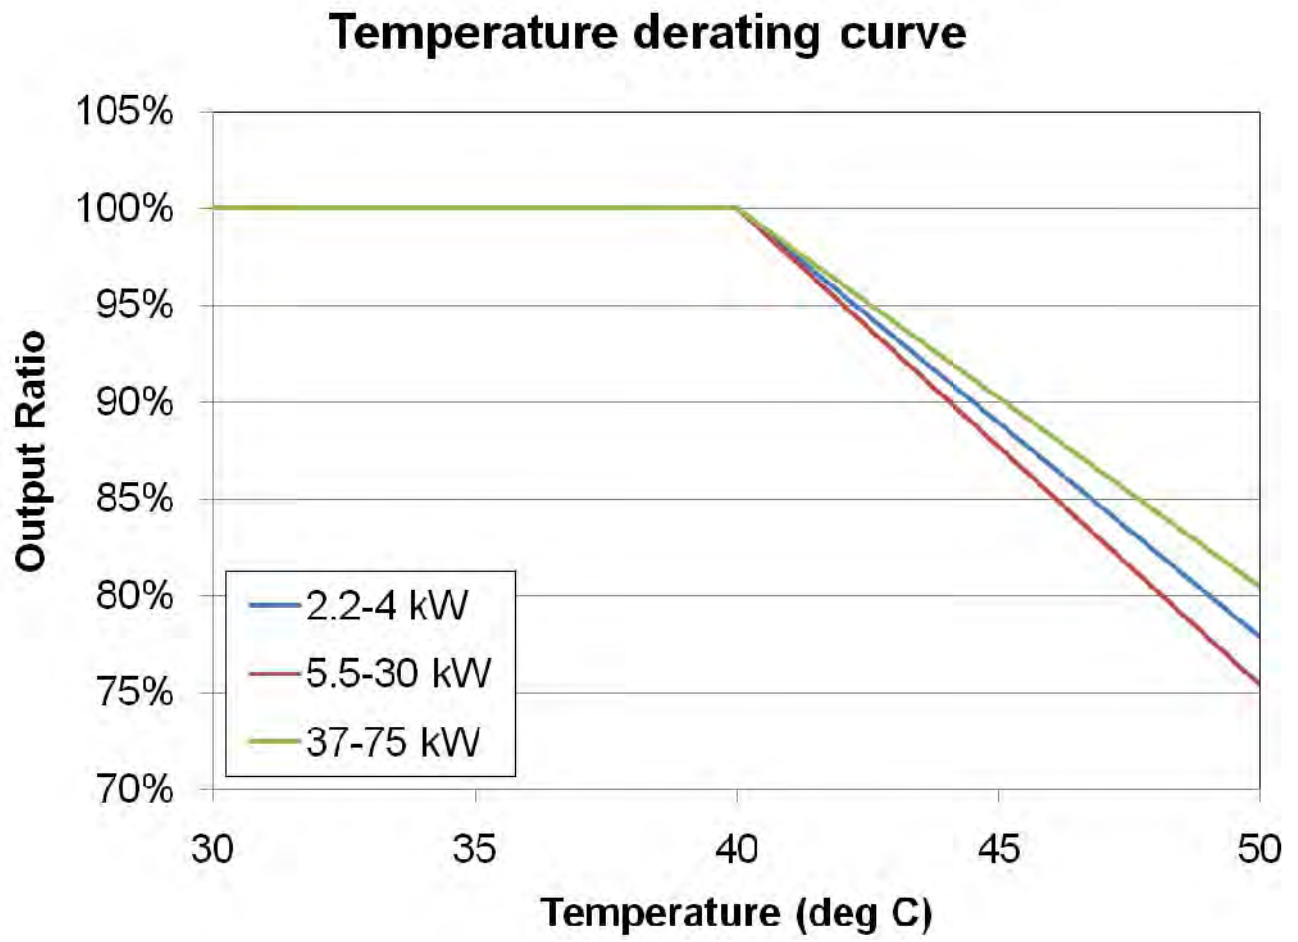Ambient Temperature Derating Curve:

Chapter 3 Wiring

After removing the front cover, examine if the power and control terminals are clearly noted. Read following precautions before wiring.

- ☑ Make sure that power is only applied to the R/L1, S/L2, T/L3 terminals. Failure to comply may result in damage to the equipments. The voltage and current should lie within the range as indicated on the nameplate (Chapter 1-1).
- ☑ All the units must be grounded directly to a common ground terminal to prevent lightning strike or electric shock.
- ☑ Make sure to fasten the screw of the main circuit terminals to prevent sparks which is made by the loose screws due to vibration



- ☑ It is crucial to turn off the AC motor drive power before any wiring installation are made. A charge may still remain in the DC bus capacitors with hazardous voltages even if the power has been turned off therefore it is suggested for users to measure the remaining voltage before wiring. For your personnel safety, please do not perform any wiring before the voltage drops to a safe level < 25 Vdc. Wiring installation with remaninig voltage condition may caus sparks and short circuit.
- ☑ Only qualified personnel familiar with AC motor drives is allowed to perform installation, wiring and commissioning. Make sure the power is turned off before wiring to prevent electric shock.



- ☑ When wiring, please choose the wires with specification that complys with local regulation for your personnel safety.
- ☑ Check following items after finishing the wiring:
 1. Are all connections correct?
 2. Any loosen wires?
 1. Any short-circuits between the terminals or to ground?

3-1 Wiring



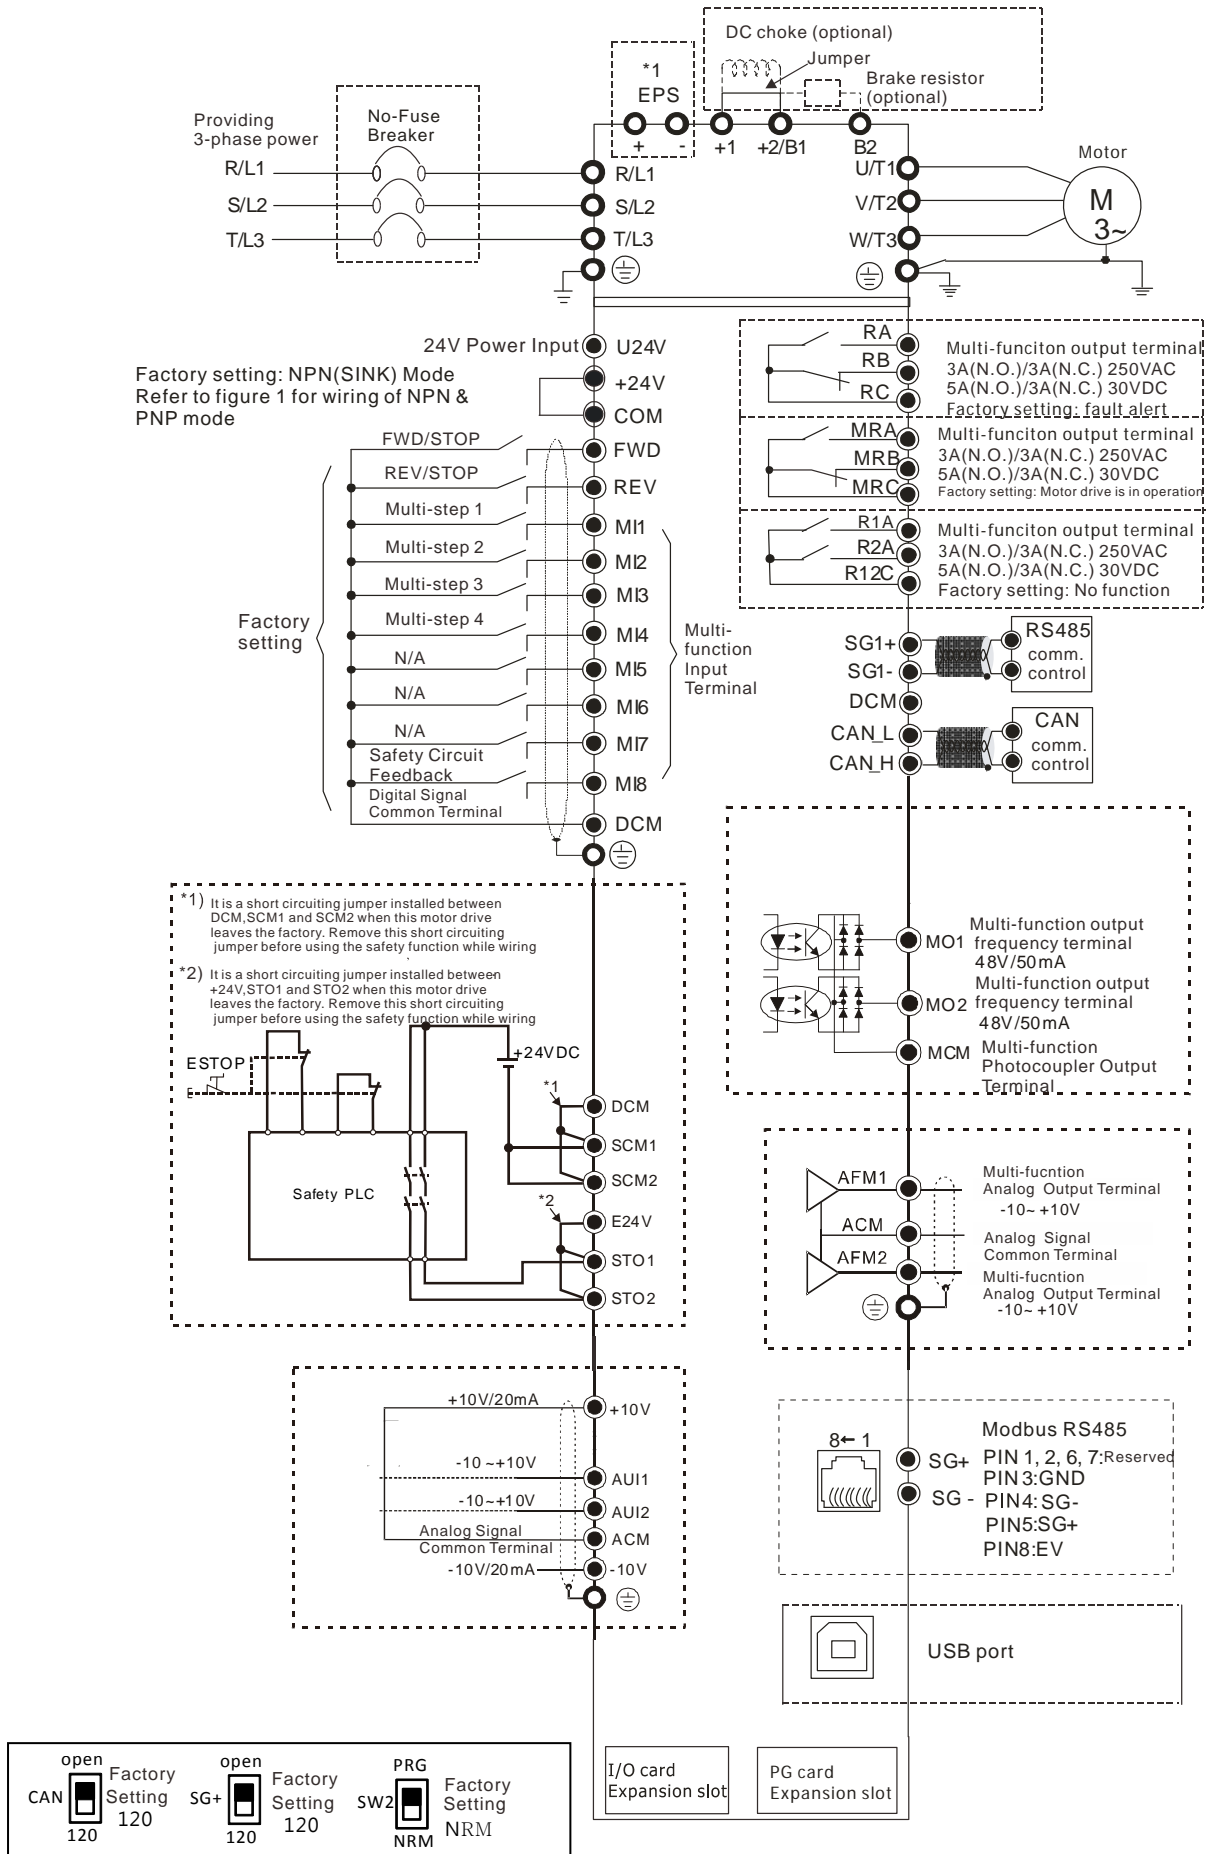


Figure 01

Switching between two modes: SINK(NPN) /SOURCE(PNP)

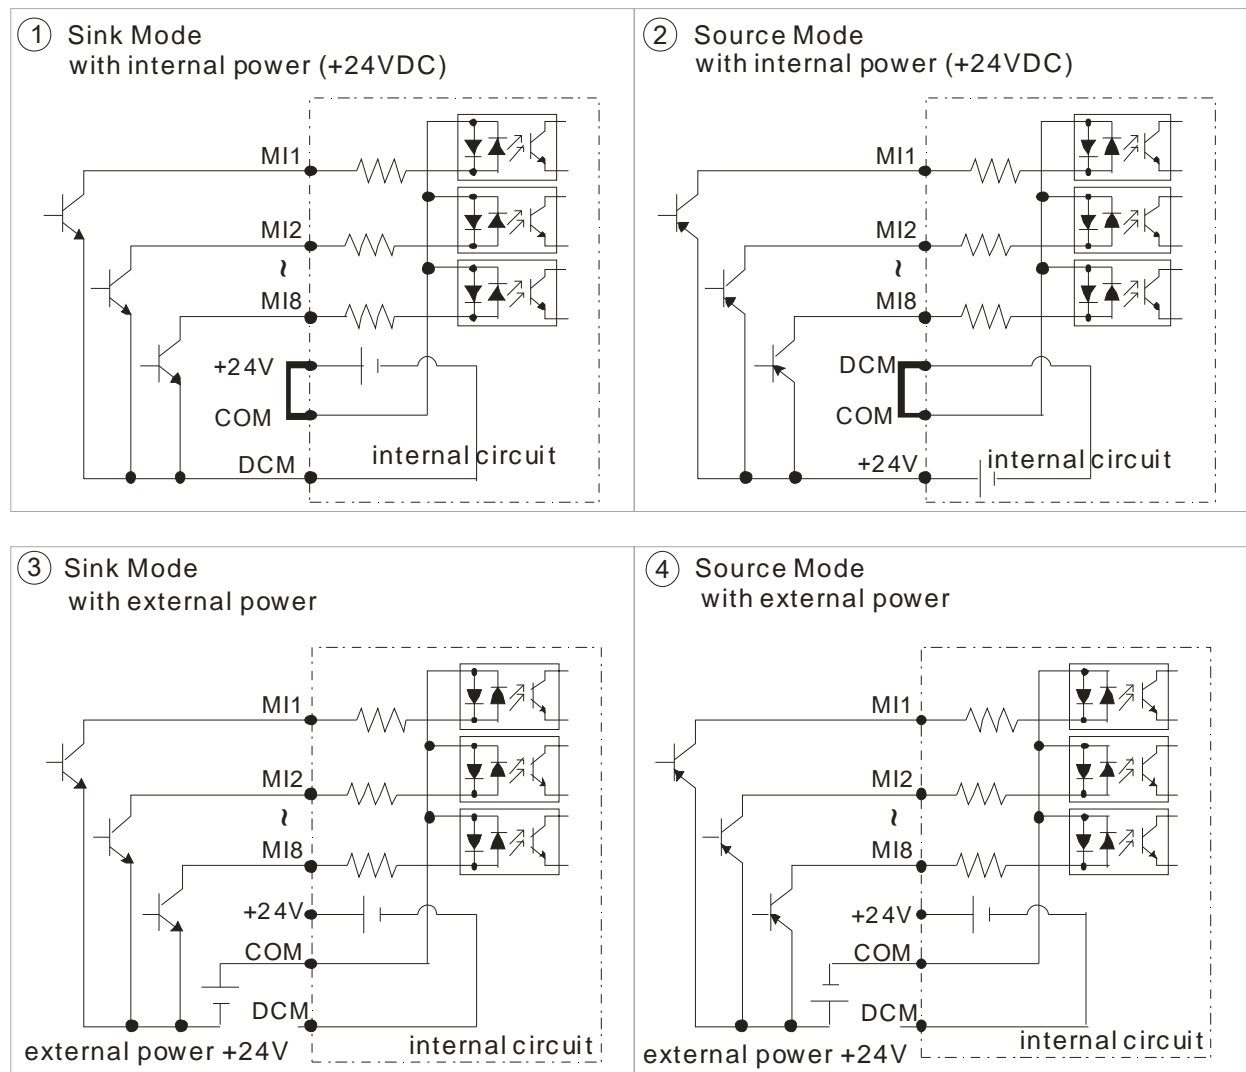


3-2 System Wiring Diagram

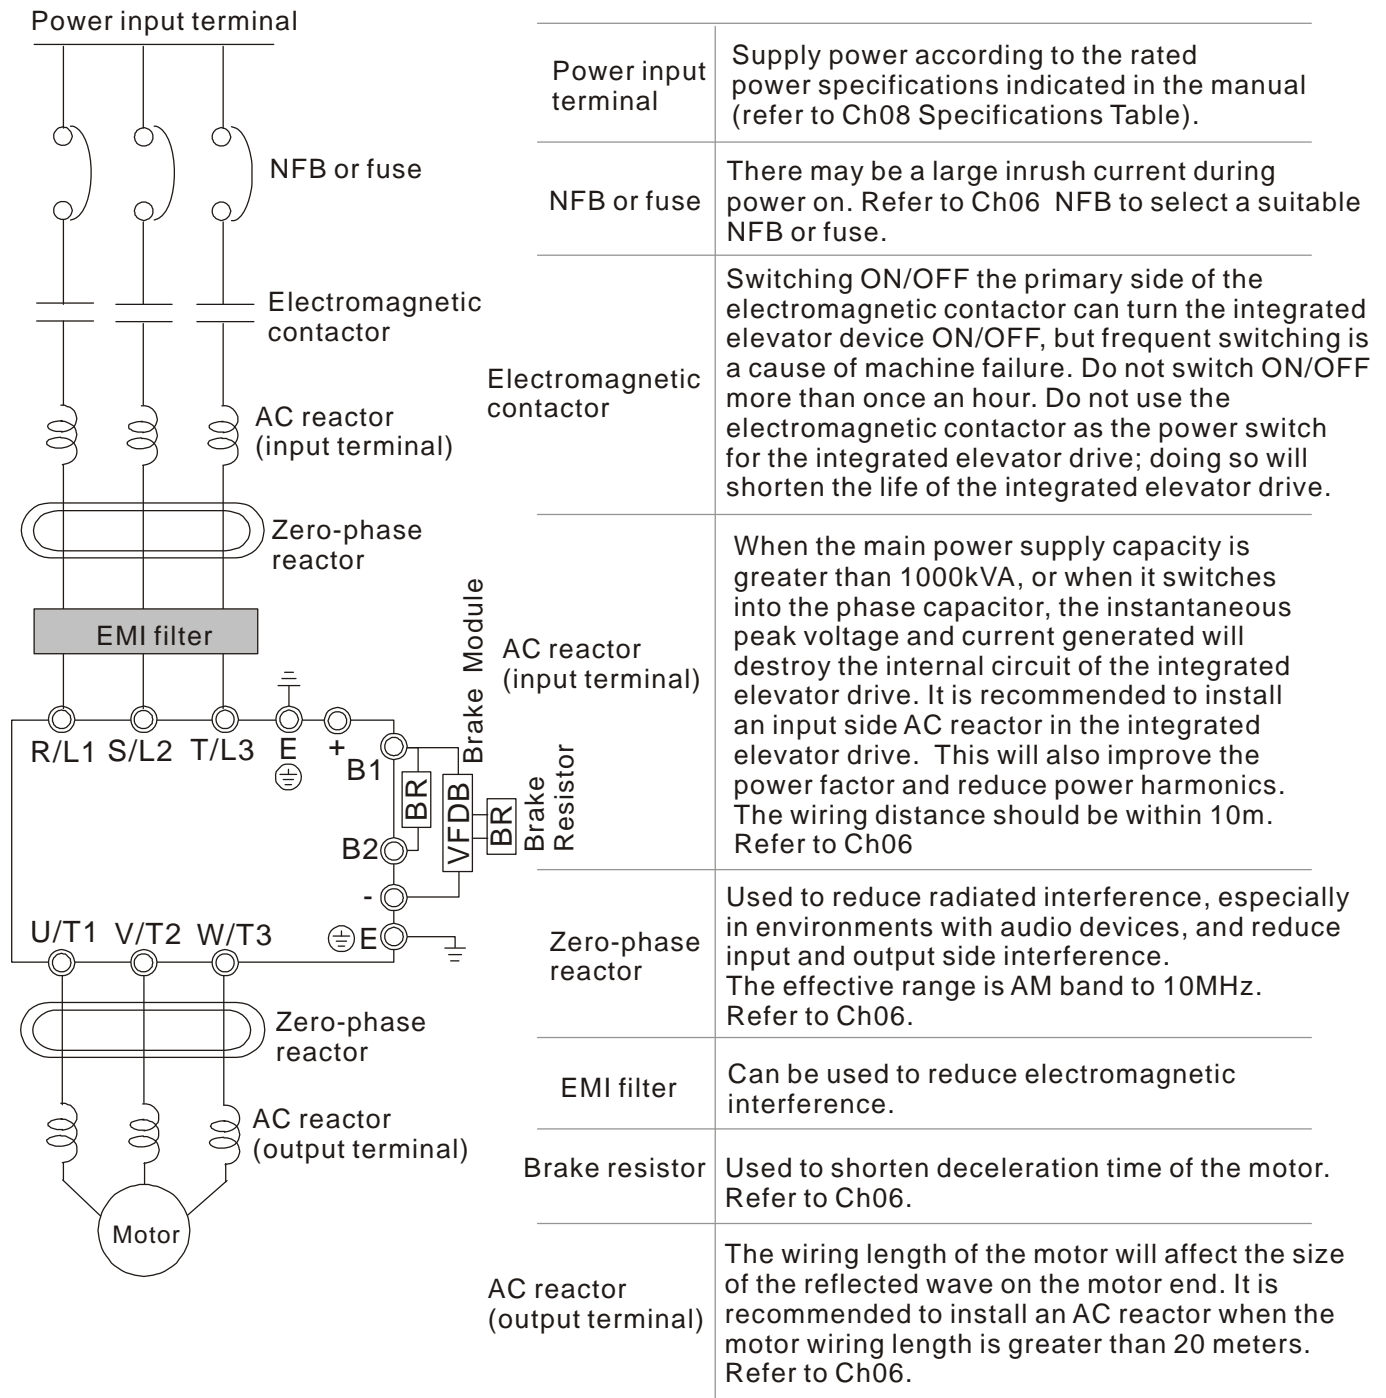

Chapter 4 Main Circuit Terminal

5-1 Main Circuit Diagram

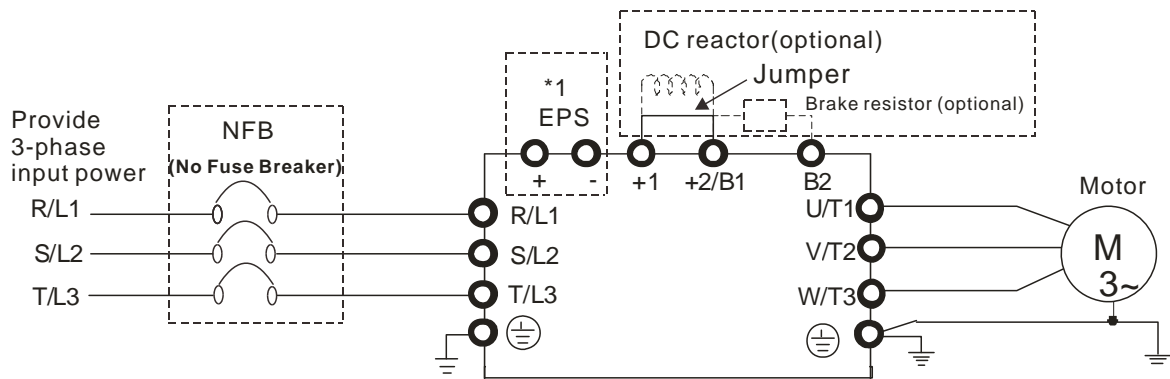

Terminal Symbol	Explanation of Terminal Function
EPS (+, -)	Backup power/ Emergency power connection terminal.
R/L1, S/L2, T/L3	AC line input terminals 3-phase.
U/T1, V/T2, W/T3	AC drive output terminals for connecting 3-phase induction motor.
+1, +2/B1	Connections for DC reactor to improve the power factor. Remove the jumper before installing a DC reactor. (Frame E has a DC reactor built-in.).
+2/B1, B2	Connections for brake resistor (optional).
⊕ E	Earth connection, to comply with local regulations.



Main input power terminals:

- ☑ Do not connect 3-phase model to one-phase power. R/L1, S/L2 and T/L3 has no phase-sequence requirement, it can be used upon random selection.
- ☑ A NFB must be installed between the 3-phase power input terminals and the main circuit terminals (R/L1, S/L2, T/L3). It is recommended to add a magnetic contactor (MC) to the power input wiring to cut off power quickly and reduce malfunction when activating the protection function of the AC motor drive. Both ends of the MC should have an R-C surge absorber.
- ☑ Fasten the screws in the main circuit terminal to prevent sparks condition made by the loose screws due to vibration.
- ☑ Use voltage and current within the specification in Chapter 8.
- ☑ When using a general GFCI (Ground Fault Circuit Interrupter), select a current sensor with sensitivity of 200mA or above and not less than 0.1-second operation time to avoid nuisance tripping. When choosing a GFCI designed for the AC motor drive, choose a current sensor with sensitivity of 30mA or above.
- ☑ Use the shield wire or tube for the power wiring and ground the two ends of the shield wire or tube.


- ☑ Do NOT run/stop AC motor drives by turning the power ON/OFF. Run/stop AC motor drives by sending RUN/STOP command via control terminals or keypad. If you still need to run/stop AC motor drives by turning power ON/OFF, it is recommended to do so only ONCE per hour

Output terminals of the main circuit:

- ☑ When it is necessary to install a filter at the output side of terminals U/T1, V/T2, W/T3 on the AC motor drive. Use inductance filter. Do not use phase-compensation capacitors or L-C (Inductance-Capacitance) or R-C (Resistance-Capacitance).
- ☑ DO NOT connect phase-compensation capacitors or surge absorbers at the output terminals of AC motor drives.
- ☑ Use well-insulated motors to prevent any electric leakage from motors.

Terminals [+1, +2] for connecting DC reactor. Terminals [+1, +2/B1] for connecting brake resistor.


- ☑ These terminals are to connect to a DC reactor to improve the power factor and reduce harmonics. At the factory setting, a jumper is connected to these terminals.. Remove that jumper before connecting to a DC reactor.

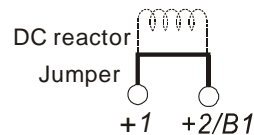

- ☑ Models above 22kW don't have a built-in brake resistor. To improve resistance ability, connect an external, optional brake resistor
- ☑ When not in use, leave terminals +2/B1, (–) open.
- ☑ Short-circuiting [B2] or [–] to [+2/B1] will damage the motor drive. Do NOT do that.

4-1 Main Circuit Terminals Specifications

Frame B

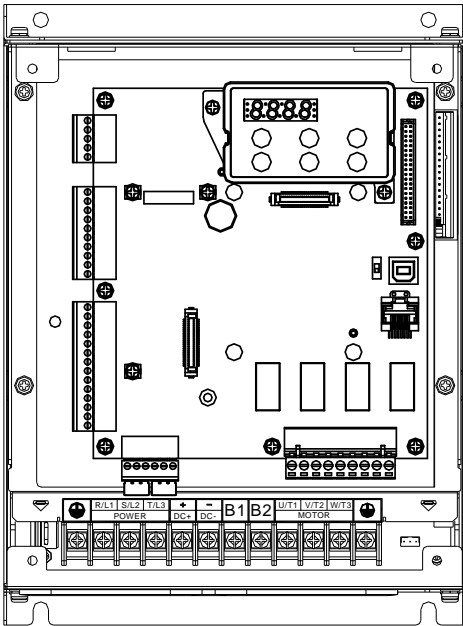

Main circuit terminals:

R/L1, S/L2, T/L3, U/T1, V/T2, WT3, +(DC+), -(DC-), B1, B2, ⚡

Models	Wire Gauge		Screw Size & Torque (? 0%)
	Max. Wire Gauge	Min. Wire Gauge	
VFD022ED21S	10AWG [5.3mm ²]	14AWG [2.1mm ²]	M4 18 kgf-cm (15.6 lbf-in) (1.7 Nm)
VFD040ED43S		12AWG [3.3mm ²]	
VFD037ED21S			
VFD040ED23S			

UL installations must use 600V, 75? wire. Use copper wire only.

NOTE:

1. Figure 1 shows the terminal specification.
2. Figure 2 shows the specification of insulated heat shrink tubing that comply with UL (600V, YDPU2).

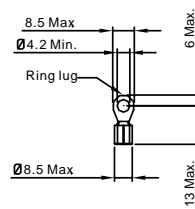


Figure 1


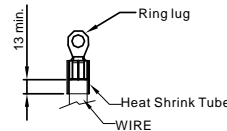


Figure 2

Frame C

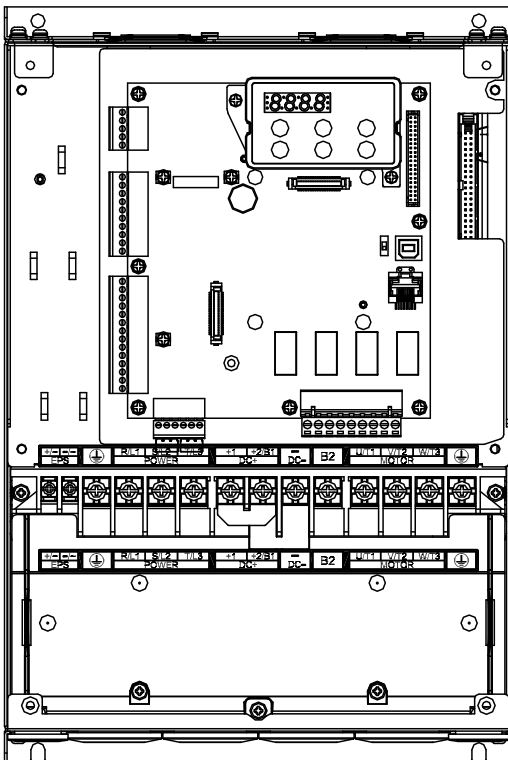

Main circuit terminals:

R/L1, S/L2, T/L3, U/T1, V/T2, WT3, +1, +2/B1, -, B2, ⚡

Models	Wire Gauge		Screw Size & Torque (? 0%)
	Max. Wire Gauge	Min. Wire Gauge	
VFD055ED23S	6AWG [13.3mm ²]	10AWG [3.3mm ²]	M5 30 kgf-cm (26 lbf-in) (2.9 Nm)
VFD110ED43S		12AWG [3.3mm ²]	
VFD055ED43S			
VFD075ED43S		8AWG [8.4mm ²]	
VFD075ED23S			
VFD150ED43S			
VFD185ED43S		6AWG [13.3mm ²]	
VFD110ED23S			

UL installations must use 600V, 75? wire. Use copper wire only.

NOTE:

1. Figure 1 shows the terminal specification.
2. Figure 2 shows the specification of insulated heat shrink tubing that comply with UL (600V, YDPU2).

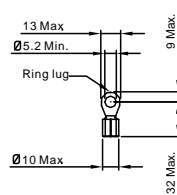


Figure 1


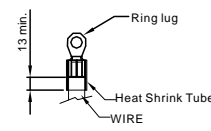


Figure 2

Frame D

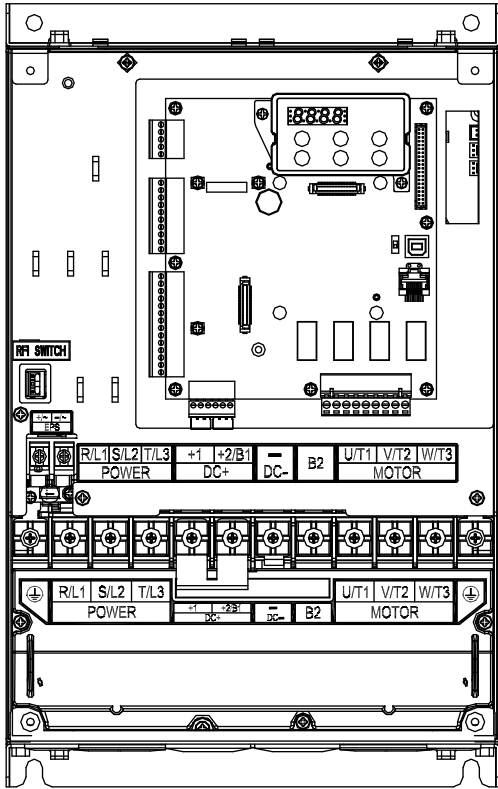

Main circuit terminals:

R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, +1, +2/B1, -, B2, ⚡

Models	Wire Gauge		Screw Size & Torque (? 0%)
	Max. Wire Gauge	Min. Wire Gauge	
VFD150ED23S	2AWG [33.6mm ²]	4AWG [21.1mm ²]	M6 50 kgf-cm (43.4 lbf-in) (4.9 Nm)
VFD300ED43S		3AWG [26.7mm ²]	
VFD185ED23S		6AWG [13.3mm ²]	
VFD220ED43S		6AWG [13.3mm ²]	
VFD220ED23S		2AWG [33.6mm ²]	

UL installations must use 600V, 75° wire. Use copper wire only.

NOTE:

1. Figure 1 shows the terminal specification.

2. Figure 2 shows the specification of insulated heat shrink tubing that comply with UL (600V, YDPU2).

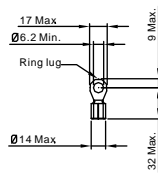


Figure 1





Figure 2

Frame E

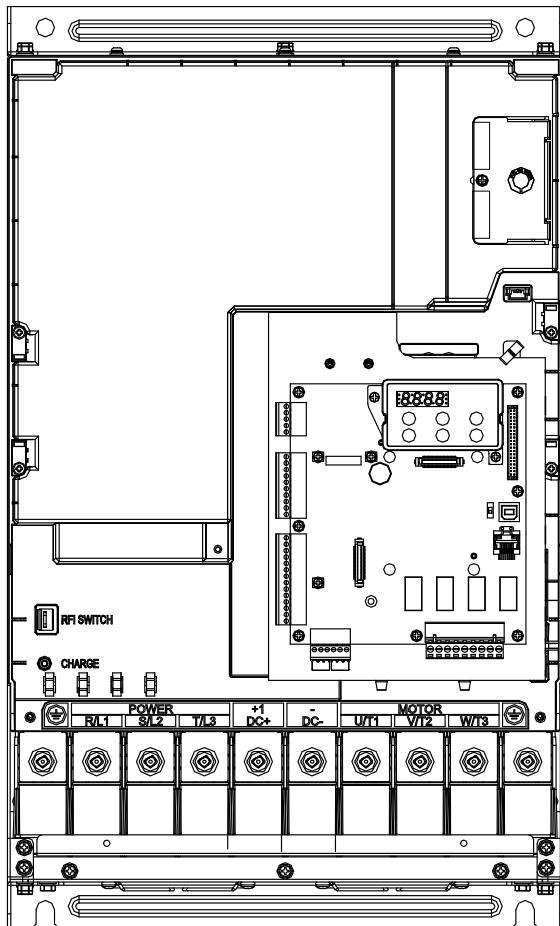

Main circuit terminals:

R/L1, S/L2, T/L3, U/T1, V/T2, W/T3, +1 (DC+), -(DC-), ⚡

Models	Wire Gauge		Screw Size & Torque (? 0%)
	Max. Wire Gauge	Min. Wire Gauge	
VFD370ED43S	300MCM [152mm ²]	1/0AWG [53.5mm ²]	M8 200 kgf-cm (173 lbf-in) (19.6 Nm)
VFD450ED43S		2/0AWG [67.4mm ²]	
VFD300ED23S		4/0AWG [107mm ²]	
VFD550ED43S		4/0AWG [107mm ²]	
VFD370ED23S		300MCM [152mm ²]	

UL installations must use 600V, 75° wire. Use copper wire only.

NOTE:

1. Figure 1 shows the terminal specification.

2. Figure 2 shows the specification of insulated heat shrink tubing that comply with UL (600V, YDPU2).

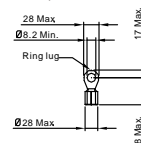


Figure 1




Figure 2


05 Control Terminals

Remove the top cover before wiring the multi-function input and output terminals




The motor drives' figures shown below are for reference only, the real motor drives may look different.

Remove the cover before wiring


Frame B, C & D:

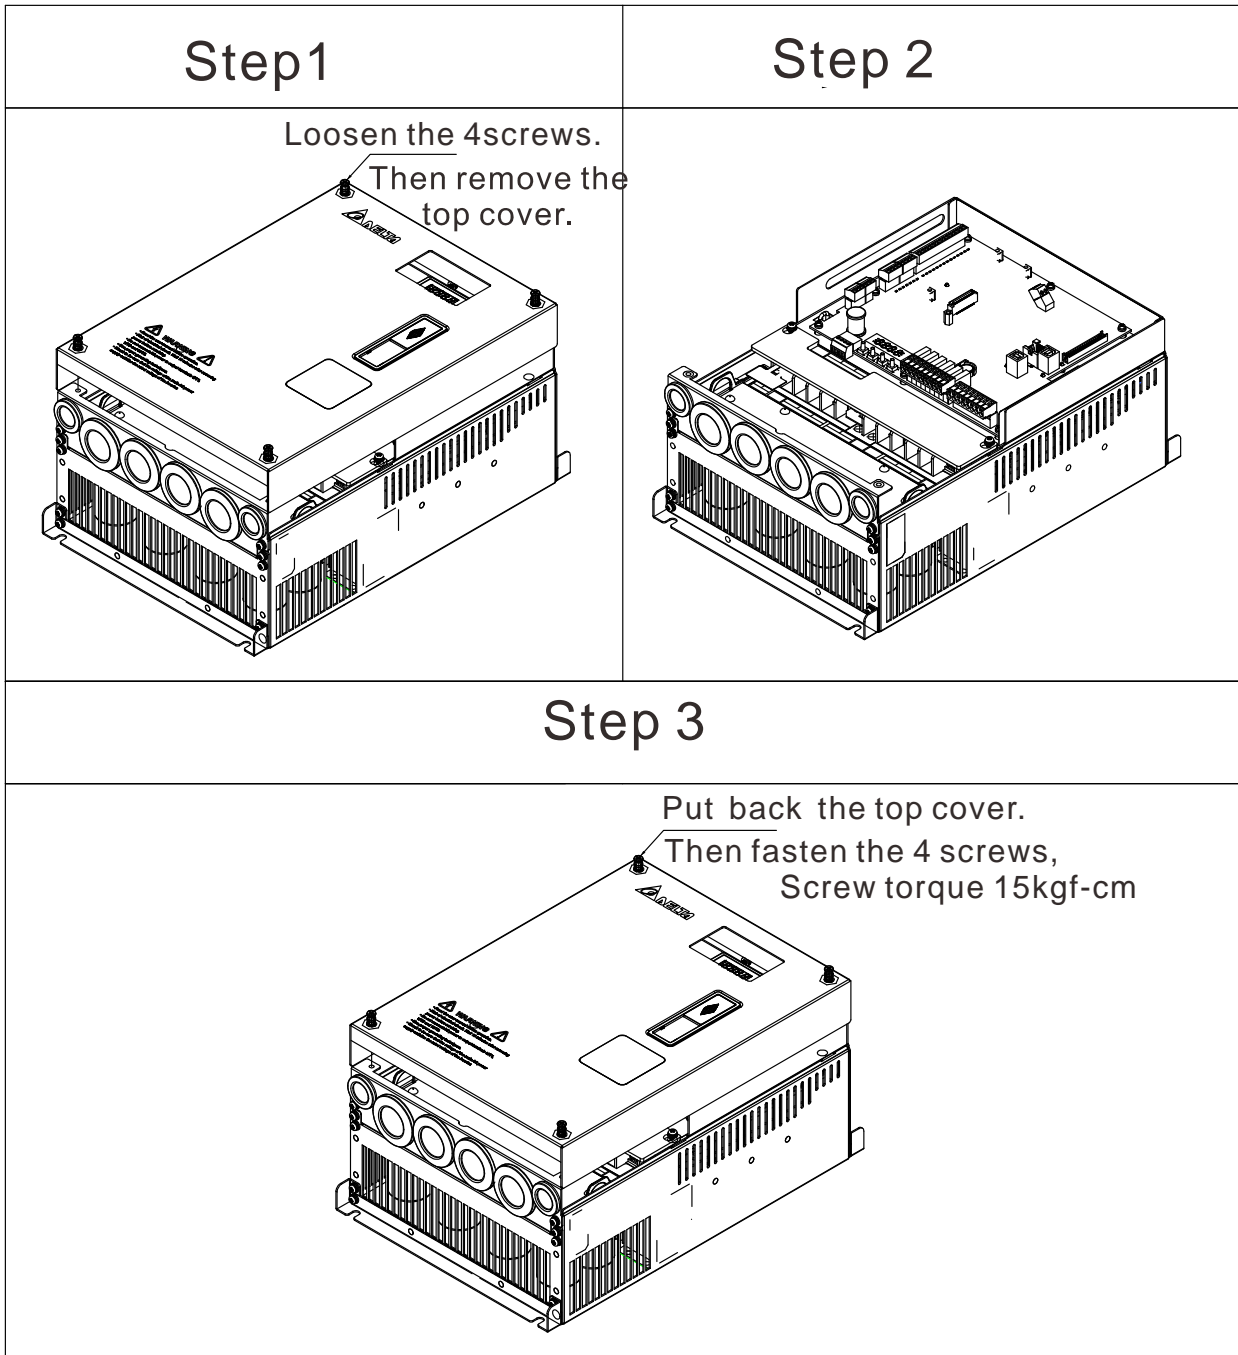

Frame E

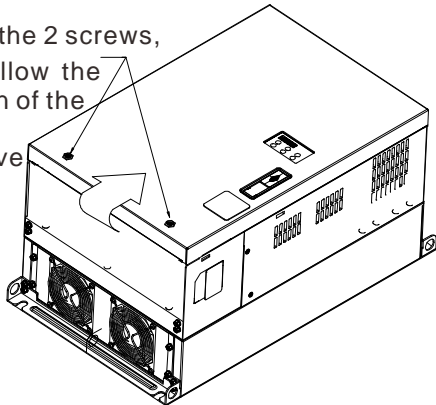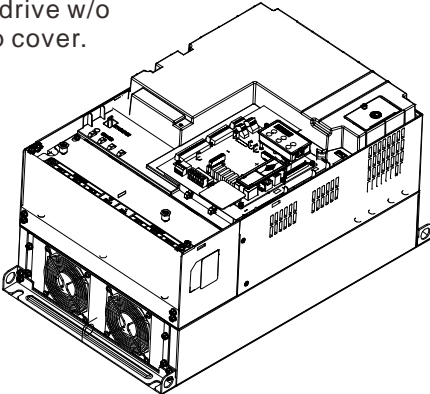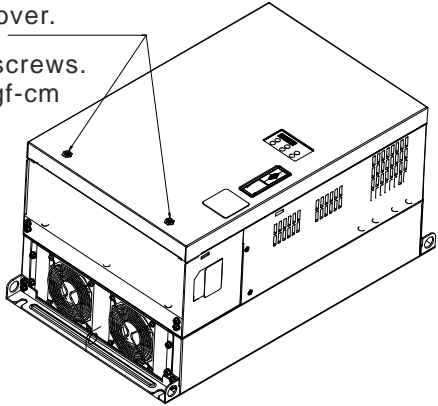Step 1	Step 2
<p data-bbox="268 280 534 481">Loosen the 2 screws, Then follow the direction of the arrow to remove the top cover</p> 	<p data-bbox="865 257 1061 324">Motor drive w/o the top cover.</p> 
Step 3	
<p data-bbox="422 772 742 884">Put back the top cover. Then fasten the 2 screws. Screw torque: 15kgf-cm</p> 	

Specifications of the Control Terminal

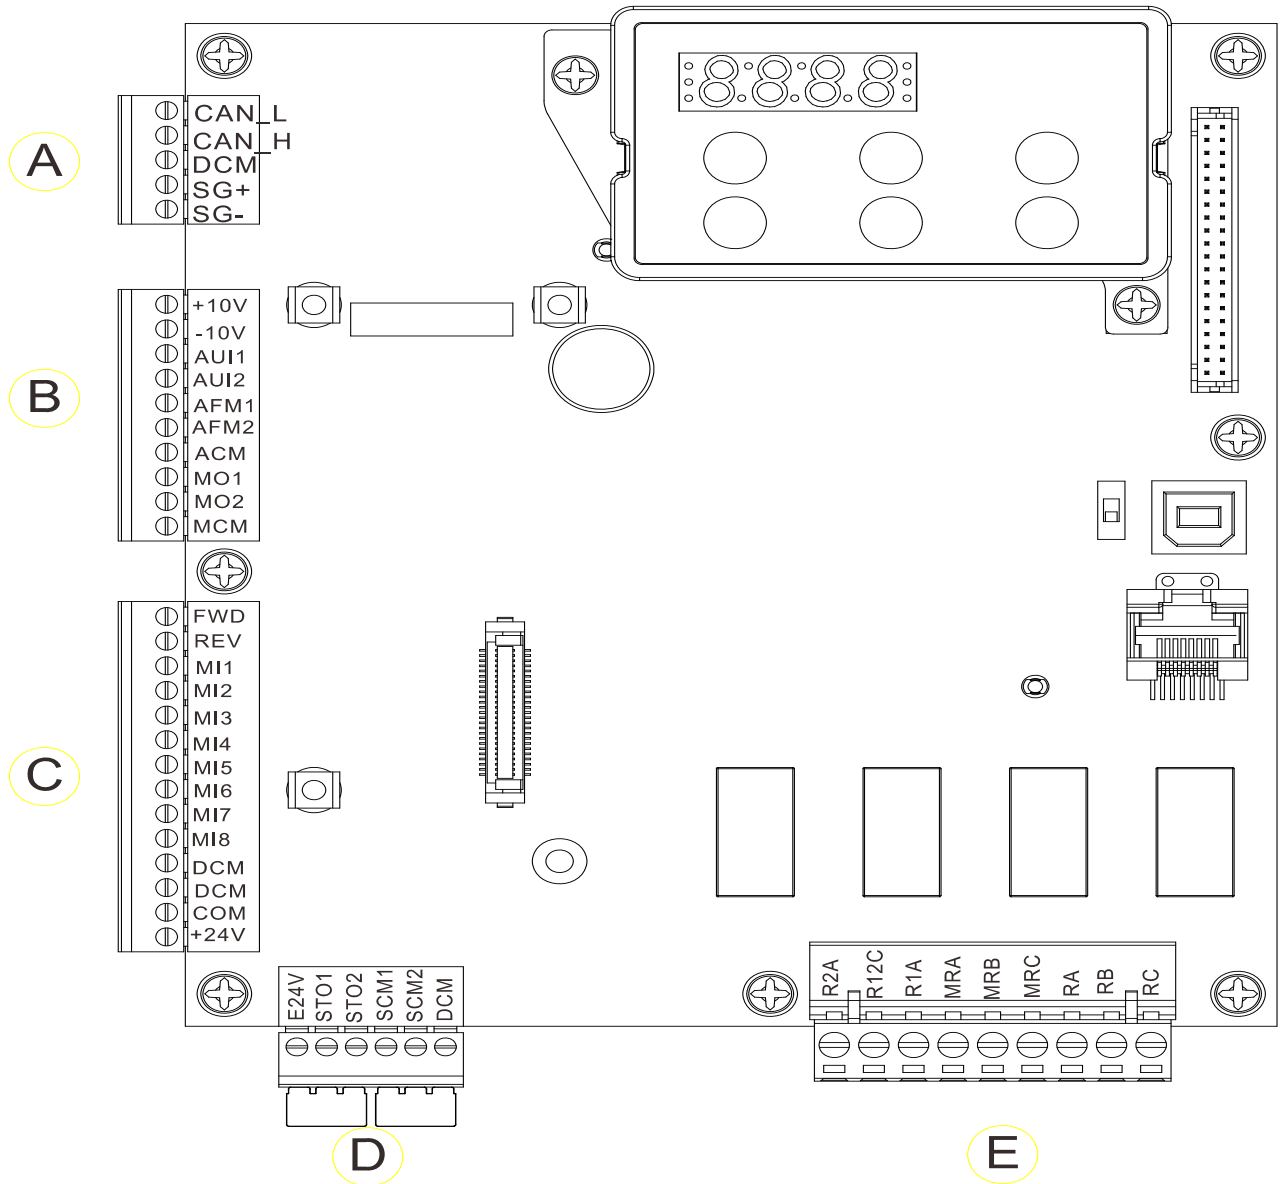

Control Circuit Terminal Sockets:

Terminal sockets A, B, C

Torque force: 2kg-cm [1.7lb-in.] (0.20Nm)

Wire gauge: 28~14AWG[0.08~2.07mm²]

Terminal socket D:

Torque force: 2kg-cm [1.7lb-in.] (0.20Nm)


Terminal socket E:


Torque force: 5.2kg-cm [4.5lb-in.] (0.51Nm)



Wire gauge: 28~12AWG[0.08~3.33mm²]

To comply with UL standards, copper wires which are able to sustain 600V, 75°C environment must be used in the installation.

Control Board Switch

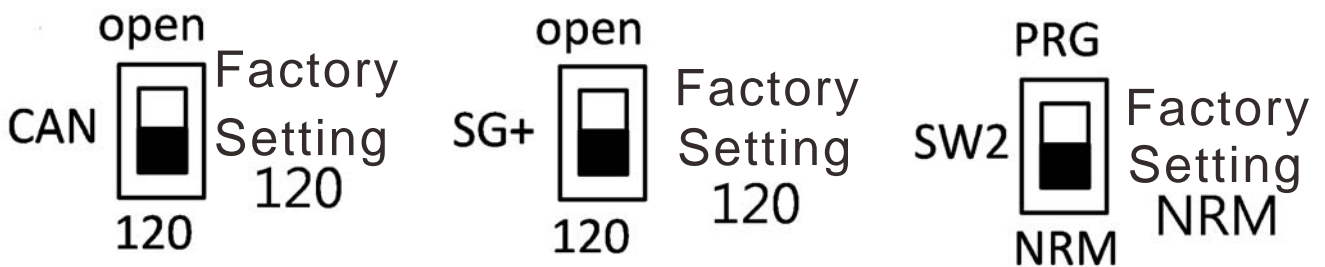

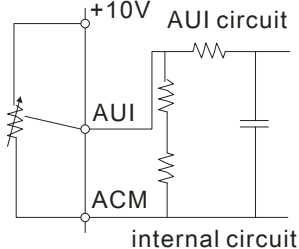Terminals	Terminal Function	Factory Setting (NPN mode)
+24V/E24V	Digital control signal common terminal (Source)	+24V±5% 200mA
COM	Digital control signal common terminal (Sink)	Common terminal of multi-function input terminals
FWD	Forward-Stop command	FWD-DCM: ON= forward running OFF= deceleration to stop
REV	Reverse-Stop command	REV-DCM: ON= forward running OFF= deceleration to stop
MI1 ~ MI8	Multi-function input 1~8	Refer to parameters 02-01~02-08 to program the multi-function inputs MI1~MI8. Source mode: ON: the activation current is $6.5\text{mA} \geq 11\text{Vdc}$ OFF: cut-off voltage $10\mu\text{A} \leq 11\text{Vdc}$
DCM	Digital frequency signal common terminal	
SCM1		
SCM2	The factory setting is short-circuit. The factory setting is short-circuit.	
STO1	Power removal safety function for EN954-1 and IEC/EN61508 When STO1~SCM1, STO2~SCM2 are turned on, the activation current is $3.3\text{mA} \geq 11\text{Vdc}$.	
STO2		
+10V	Potentiometer power supply	Power supply of analog frequency setting: +10Vdc 20mA
-10V	Potentiometer power supply	Power supply of analog frequency setting
AUI1	Analog voltage frequency input	Impedance: 20kΩ Range: -10~+10VDC=0~ Max. Output Frequency(Pr.01-00)
AUI2		

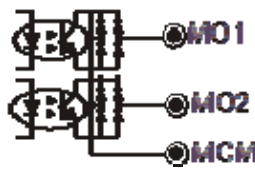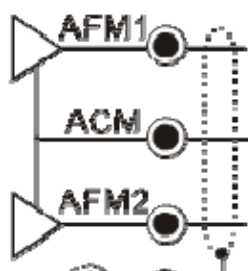ACM	Analog signal common terminal control	Analog signal terminal
RA	Multi-function relay output A (N.O.)	<p>1. User-defined function 2. Resistive Load 3A(N.O.)/3A(N.C.) 250VAC 5A(N.O.)/3A(N.C.) 30VDC (min. 5 VDC, 10 mA)</p> <p>To output different kinds of signal such as the motor drive is in operation, reaching the frequency, overload indication.</p>
RB	Multi-function relay output A (N.O.)	
RC	Multi-function relay output B (Error indication by factory setting)	
MRA	Multi-function output terminal (N.O.)	
MRB	Multi-function output terminal (N.O.)	
MRC	Multi-function output terminal (Operating Indication by factory setting)	
R1A	Multi-function output terminal A (N.O.)	
R2A	Multi-function output terminal A (N.O.)	
R12C	Multi-function output terminal (No function by factory setting)	
SG1+	Modbus RS-485	SG1+ switch: terminator 120 ohm (factory setting) / open
SG1-	Modbus RS-485	open
CAN_L	CAN Bus	DIP Switch: terminator 120 ohm (factory setting)/ open
CAN_H	CAN Bus	
MO1	Multi-function output terminal 1 (photocoupler)	<p>The AC motor drive releases various monitoring signals, such as drive in operation, reaching frequency and overload indication via a transistor (open collector).</p> 
MO2	Multi-function output terminal 2 (photocoupler)	
MCM	Multi-function output common terminal (photocoupler)	Max 48Vdc 50mA
AFM1		<p>0~10V, Max. output current: 2mA, Max. load: 5kΩ -10~10V, Max. output current: 2mA, Max. load :5kΩ Output current 2mA max Resolution 0~10V corresponds to the Max.operating frequency. Range: 0~10V→-10~+10V</p>

AFM2		0~10V, Max. Output current: 2mA, Max. load: 5K ω -10~10V, Max. output current: 2mA, Max. load: 5k Ω Output current:: 2mA max Resolution: 0~10V corresponds to the Max.operating frequency. Range: 0~10V \rightarrow -10~+10V
RJ-45	PIN 1,2,6,7 : Reserved PIN 3: SGND PIN 4: SG- PIN 5: SG+ PIN 8: EV	
SW2	Switching USB port	DIP Switch: NRM(factory setting)/ PRG

06 Optional Accessories

The optional accessories listed in this chapter are available upon request. Installing additional accessories to your drive would substantially improve the drive's performance. Please select an applicable accessory according to your need or contact the local distributor for suggestion.

6-1 Brake Resistors & Brake Units used in AC motor Drives

Voltage	Applicable Motor	*125% Braking Torque /10%ED							**Max. Brake Torque			
		***Braking Torque (kg-m)	Brake Unit		Resistor value spec. for each AC motor Drive	Braking Resistor series for each Brake Unit			Braking Current (A)	Min. Resistor Value(Ω)	Max. Total Braking Current(A)	Peak Power (kW)
			VFDB	Quantity		****Part#	Quantity	Wiring method				
230V	VFD022ED 21S	1.5			300W 70Ω	BR300W070	1		5.4	38.0	10	3.8
	VFD037ED 21S	2.5			400W 40Ω	BR400W040	1		9.5	19.0	20	7.6
	VFD040ED 23S	2.5			400W 40Ω	BR400W040	1		9.5	19.0	20	7.6
	VFD055ED 23S	3.7			1000W 20Ω	BR1K0W020	1		19	15.6	24	9.3
	VFD075ED 23S	5.1			1500W 13Ω	BR1K5W013	1		29	11.5	33	12.5
	VFD110ED 23S	7.5			1500W 13Ω	BR1K5W013	1		29	9.5	40	15.2
	VFD150ED 23S	10.2			2000W 8.6Ω	BR1K0W4P3	2	2 serial	44	8.3	46	17.5
	VFD185ED 23S	12.2			2400W 7.8Ω	BR1K2W3P9	2	2 serial	49	5.8	66	25.1
	VFD220ED 23S	14.9			3000W 6.6Ω	BR1K5W3P3	2	2 serial	58	5.8	66	25.1
	VFD300ED 23S	20.3	2015	2	4000W 5.1Ω	BR1K0W5P1	2	2 serial	75	4.8	80	30.4
	VFD370ED 23S	25.1	2022	2	4800W 3.9Ω	BR1K2W3P9	2	2 serial	97	3.2	120	45.6
460V	VFD040ED 43S	2.7			1000W 75Ω	BR1K0W075	1		10.2	54.3	14	10.6
	VFD055ED 43S	3.7			1000W 75Ω	BR1K0W075	1		10.2	48.4	16	11.9

VFD075ED 43S	5.1			1500W 43Ω	BR1K5W043	1		17.6	39.4	19	14.7
VFD110ED 43S	7.5			1500W 43Ω	BR1K5W043	1		17.6	42.2	18	13.7
VFD150ED 43S	10.2			2000W 32Ω	BR1K0W016	2	2 serial	24	25.0	30	23.1
VFD185ED 43S	12.2			3000W 26Ω	BR1K5W013	2	2 serial	29	20.8	37	27.7
VFD220ED 43S	14.9			3000W 26Ω	BR1K5W013	2	2serial	29	19.0	40	30.4
VFD300ED 43S	20.3			4000W 16Ω	BR1K0W016	4	2 parallel 2 serial	47.5	14.1	54	41.0
VFD370ED 43S	25.1	4045	1	4800W 15Ω	BR1K2W015	4	2parallel 2 serial	50	12.7	60	45.6
VFD450ED 43S	30.5	4045	1	6000W 13Ω	BR1K5W013	4	2 parallel 2 serial	59	12.7	60	45.6
VFD550ED 43S	37.2	4030	2	8000W 10.2Ω	BR1K0W5P1	4	4 serial	76	9.5	80	60.8
VFD750ED 43S	50.8	4045	2	9600W 7.5Ω	BR1K2W015	4	2 parallel 2 serial	100	6.3	120	91.2


*Calculation of 125% brake torque: (kw)*125%*0.8; where 0.8 is the motor efficiency.

Since there is a resistor limit of power consumption, the longest operation time for 10%ED is 10 sec (On: 10sec/ Off: 90sec).

**Refer to the Brake Performance Curve for “Operation Duration & ED” vs. “Braking Current”.

***The calculation of the braking torque is based on a 4-pole motor(1800 rpm).

****To dissipate heat, a resistor of 400W or lower should be fixed to the frame and maintain the surface temperature below 250°C (482 °F); a resistor of 1000W and above should maintain the surface temperature below 600°C (1112 °F). If the surface temperature is higher than the temperature limit, install more heat dissipating system or increase the size of the resistor.

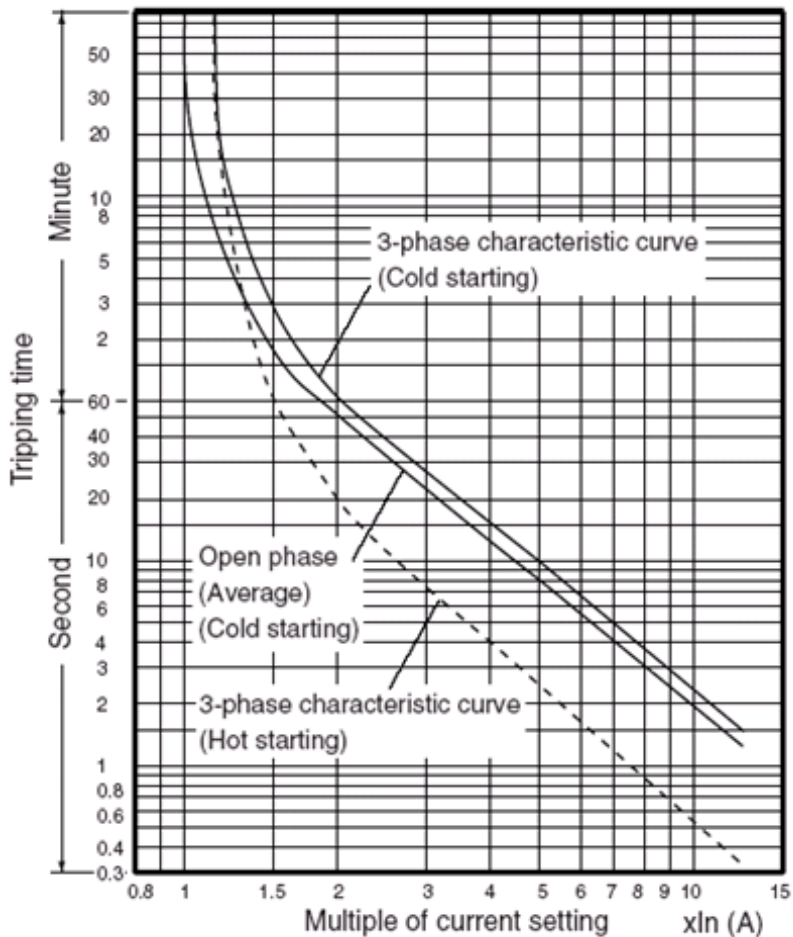

Thermal Relay:

Thermal relay selection is based on its overload capability. A standard braking capacity of ED is 10%ED (Tripping time=10s). The figure on the left is an example of 460V, 110kw AC motor drive. It requires the thermal relay to take 260% overload capacity for 10sec (hot starting) and the braking current is 126A. In this case, user should select a rated 50A thermal relay. The property of each thermal relay may vary among different manufacturers. Read carefully the user guide of a thermal relay before using it. .

6-2 Non-fuse Circuit Breaker

Comply with UL standard: Per UL 508, paragraph 45.8.4, part a. The rated current of a breaker shall be 2~4 times of the maximum rated input current of AC motor drive.

3-phase		3-phase	
Model	Recommended non-fuse breaker(A)	Model	Recommended non-fuse breaker(A)
VFD022ED21S	50	VFD040ED43S	20
VFD037ED21S	50	VFD055ED43S	30
VFD040ED23S	40	VFD075ED43S	40
VFD055ED23S	50	VFD110ED43S	50
VFD075ED23S	60	VFD150ED43S	60
VFD110ED23S	100	VFD185ED43S	75
VFD150ED23S	125	VFD220ED43S	100
VFD185ED23S	150	VFD300ED43S	125
VFD220ED23S	175	VFD370ED43S	150
VFD300ED23S	225	VFD450ED43S	175
VFD370ED23S	250	VFD550ED43S	250
		VFD750ED43S	300

6-3 Fuse Specification Chart

- Use only the fuses comply with UL certificated.
- Use only the fuses comply with local regulations.

Model	Input Current (A)	Output Current (A)	Line Fuse	
			I (A)	Bussmann P/N
VFD022ED21S	26	12	50	JJN-50
VFD037ED21S	17	17	50	JJN-50
VFD040ED23S	23	20	40	JJN-40
VFD055ED23S	26	25	50	JJN-50
VFD075ED23S	34	33	60	JJN-60
VFD110ED23S	50	49	100	JJN-100
VFD150ED23S	60	65	125	JJN-125
VFD185ED23S	75	75	150	JJN-150
VFD220ED23S	90	90	175	JJN-175
VFD300ED23S	110	120	225	JJN-225
VFD370ED23S	142	145	250	JJN-250
VFD040ED43S	13	11.5	50	JJN-20
VFD055ED43S	14	13	30	JJN-30
VFD075ED43S	19	18	40	JJN-40
VFD110ED43S	25	24	50	JJN-50
VFD150ED43S	32	32	60	JJN-60
VFD185ED43S	39	38	75	JJN-70
VFD220ED43S	49	45	100	JJN-100
VFD300ED43S	60	60	125	JJN-125
VFD370ED43S	63	73	150	JJN-150
VFD450ED43S	90	91	175	JJN-175
VFD550ED43S	130	110	250	JJN-250
VFD750ED43S	160	150	300	JJN-300

6-4 AC/ DCRactor

AC Input/ Output Reactor

200V~230V/ 50~60Hz (Single Phase Power)

Type	KW	HP	Rated Amps (Arms)	Max. Continuous Amps (Arms)	3% impedance (mH)	5% impedance (mH)	Built-in DC Reactor	3% Input AC reactor Delta Part#
022	2.2	3	12	24	0.919	1.531	X	N/A
037	3.7	5	17	34	0.649	1.081	X	N/A

200V~230V/ 50~60Hz (Three-phase power)

Type	KW	HP	Rated Amps (Arms)	Max. Continuous Amps (Arms)	3% impedance (mH)	5% impedance (mH)	Built-in DC Reactor	3% Input AC reactor Delta Part#
040	4	5	20	40	0.551	0.919	X	N/A
055	5.5	7.5	24	48	0.459	0.766	X	N/A
075	7.5	10	30	60	0.320	0.534	X	N/A
110	11	15	45	90	0.216	0.359	X	N/A
150	15	20	58	116	0.163	0.271	X	N/A
185	18.5	25	77	154	0.143	0.239	X	N/A
220	22	30	87	174	0.127	0.211	X	N/A
300	30	40	132	264	0.084	0.139	O	N/A
370	37	50	161	322	0.068	0.114	O	N/A

380V~460V/ 50~60Hz (Three-phase power)

Type	KW	HP	Rated Amps (Arms)	Max. Continuous Amps (Arms)	3% impedance (mH)	5% impedance (mH)	Built-in DC Reactor	3% Input AC reactor Delta Part#
040	4	5	11.5	23	1.838	3.063	X	N/A
055	5.5	7.5	13	26	1.626	2.710	X	N/A
075	7.5	10	17	34	1.243	2.072	X	N/A
110	11	15	23	46	0.919	1.531	X	N/A
150	15	20	30	60	0.704	1.174	X	N/A
185	18.5	25	38	76	0.556	0.927	X	N/A
220	22	30	45	90	0.470	0.783	X	N/A
300	30	40	58	116	0.364	0.607	X	N/A
370	37	50	80	160	0.264	0.440	O	N/A
450	45	60	100	200	0.211	0.352	O	N/A
550	55	75	121	242	0.175	0.291	O	N/A
750	75	100	146	292	0.145	0.241	O	N/A

DC Input/Output Reactor

200V~230V/ 50~60Hz (Three-phase power)

Type	KW	HP	Rated Amps (Arms)	Max. Continuous Amps (Arms)	DC Reactor (mH)	DC Reactor Delta Part#
040	4	5	20	40	1.273	N/A
055	5.5	7.5	24	48	1.061	N/A
075	7.5	10	30	60	0.740	N/A
110	11	15	45	90	0.498	N/A
150	15	20	58	116	0.375	N/A
185	18.5	25	77	154	0.331	N/A
220	22	30	87	174	0.293	N/A
300	30	40	132	264	0.193	N/A
370	37	50	161	322	0.158	N/A

380V~460V/ 50~60Hz(Three-phase power)


Type	KW	HP	Rated Amps (Arms)	Max. Continuous Amps (Arms)	DC Reactor (mH)	DC Reactor Delta Part#
040	4	5	11.5	23	4.244	N/A
055	5.5	7.5	13	26	3.754	N/A
075	7.5	10	17	34	2.871	N/A
110	11	15	23	46	2.122	N/A
150	15	20	30	60	1.627	N/A
185	18.5	25	38	76	1.284	N/A
220	22	30	45	90	1.085	N/A
300	30	40	58	116	0.842	N/A
370	37	50	80	160	0.610	N/A
450	45	60	100	200	0.488	N/A
550	55	75	121	242	0.403	N/A
750	75	100	146	292	0.334	N/A

THD (Total Harmonic Distortion)

Motor Drive Spec.	Without Built-In Reactor				With Built-in DC Reactor
Reactor Spec.	3% Input AC Reactor	DC Reactor	DC Reactor + 3% Input Reactor	DC + 5% Input Reactor	3% Input Reactor
THD	44%	46%	34%	30%	34%
Note:	THD may varies due to different installation conditions and environment (wires, motors).				


According to IEC61000-3-12, DC Reactor is designed with 4% system impedance, and AC Reactor is designed with 3% system impedance.

6-5 Zero Phase Reactor

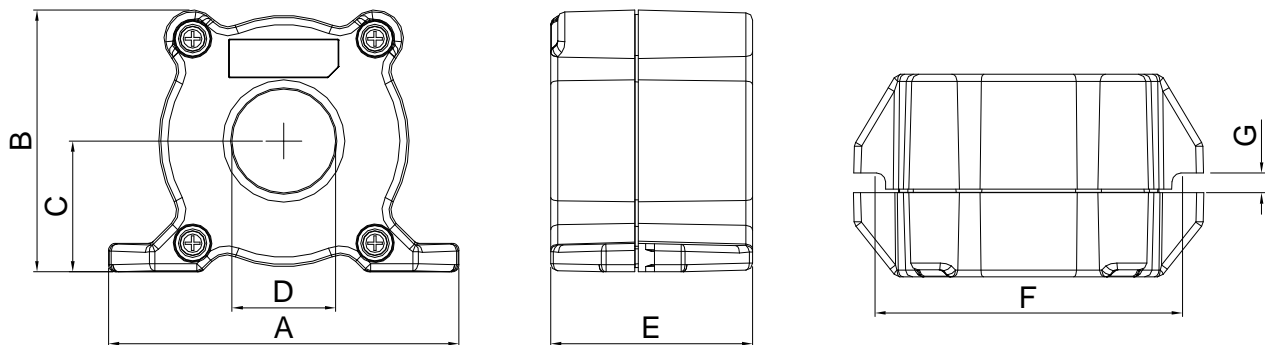


unit: mm(inch)

Model	A	B	C	D	E	F	G(∅)	Torque
RF008X00A	98 (3.858)	73 (2.874)	36.5 (1.437)	29 (1.142)	56.5 (2.224)	86 (3.386)	5.5 (0.217)	8~ 10kgf/cm
RF004X00A	110 (4.331)	87.5 (3.445)	43.5 (1.713)	36 (1.417)	53 (2.087)	96 (3.780)	5.5 (0.217)	8~ 10kgf/cm

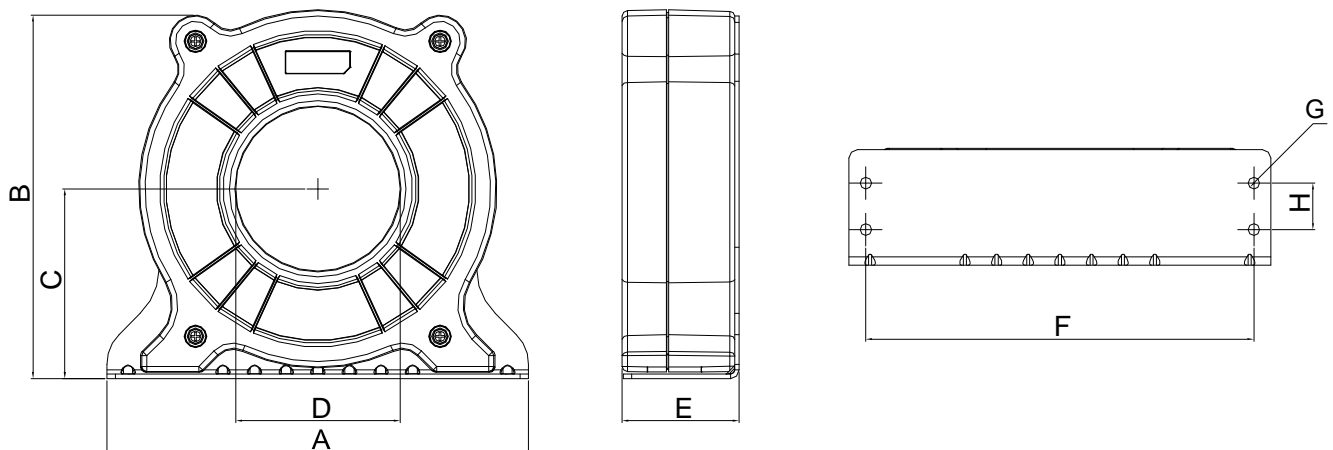

unit: mm(inch)

model	A	B	C	D	E	F	G(∅)	H	Torque
RF002X00A	200 (7.874)	172.5 (6.791)	90 (3.543)	78 (3.071)	55.5 (2.185)	184 (7.244)	5.5 (0.217)	22 (0.866)	40~45kgf/cm

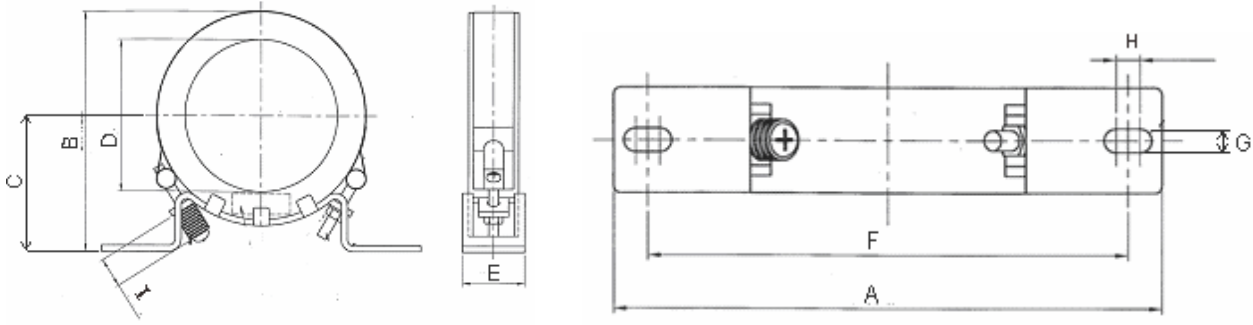

unit: mm(inch)

model	A	B	C	D	E	F	G(Ø)	H	I
RF300X00A	241(9.488)	217(8.543)	114(4.488)	155(6.102)	42(1.654)	220(8.661)	6.5(0.256)	7.0(0.276)	20(0.787)
									Torque:40~45kgf/cm


Reactor model (Note)	Recommended Wire Size		Wiring Method	Qty	Applicable Motor Drive
RF008X00A	≤ 8 AWG	≤ 8.37 mm ²	Diagram A	1	VFD022ED21S VFD037ED21S VFD040ED23S VFD040ED43S
RF004X00A	≤ 4 AWG	≤ 21.15 mm ²	Diagram A	1	VFD055ED23S VFD075ED23S VFD110ED23S VFD055ED43S VFD075ED43S VFD110ED43S VFD150ED43S VFD185ED43S
RF002X00A	≤ 2 AWG	≤ 33.62 mm ²	Diagram A	1	VFD150ED23S VFD185ED23S VFD220ED23S VFD220ED43S VFD300ED43S
RF300X00A	≤ 300 MCM	≤ 152 mm ²	Diagram A	1	VFD300ED23S VFD370ED23S VFD370ED43S VFD450ED43S VFD550ED43S VFD750ED43S

Note: 600V insulated cable wire

Diagram A

Put all wires through at least one core without winding

Zero Phase Reactor

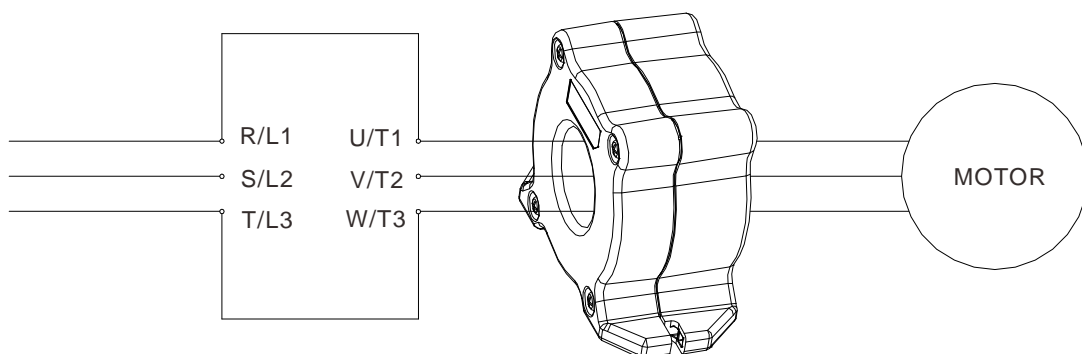

Note 1: The table above gives approximate wire size for the zero phase reactors but the selection is ultimately governed by the type and diameter of cable fitted i.e. the cable must fit through the center hole of zero phase reactors.

Note 2: Only the phase conductors should pass through, not the earth core or screen.

Note3: When long motor output cables are used an output zero phase reactor may be required to reduce radiated emissions from the cable.

6-6 EMI Filter

For the detailed specifications of the EMI filters listed in the table below, search the Internet.

Motor Drive	Applicable EMI Filter
VFD022ED21S VFD037ED21S	MDF50 (Roxburgh EMC)
VFD040ED43S VFD055ED43S	EMF018A43A
VFD075ED43S VFD110ED43S	EMF033A43A
VFD040ED23S VFD055ED23S	EMF035A23A
VFD075ED23S VFD110ED23S	EMF056A23A
VFD150ED43S	EMF039A43A
VFD185ED43S VFD220ED43S	KMF370A (Roxburgh EMC)
VFD150ED23S VFD185ED23S VFD300ED43S VFD370ED43S	KMF3100A (Roxburgh EMC)
VFD220ED23S VFD450ED43S VFD550ED43S	B84143D0150R127
VFD300ED23S VFD370ED23S VFD750ED43S	B84143D0200R127

EMI Filter Installation

All electrical equipment, including AC motor drives, will generate high-frequency/low-frequency noise and will interfere with peripheral equipment by radiation or conduction when in operation. By using an EMI filter with correct installation, much interference can be eliminated. It is recommended to use DELTA EMI filter to have the best interference elimination performance.

We assure that it can comply with following rules when AC motor drive and EMI filter are installed and wired according to user manual:

- **EN61000-6-4**
- **EN61800-3: 1996**
- **EN55011: (1991) Class A Group 1 (1st Environment, restricted distribution)**

General precaution

1. EMI filter and AC motor drive should be installed on the same metal plate.
2. Install AC motor drive on footprint EMI filter or install EMI filter as close as possible to the AC motor drive.
3. Wire as short as possible.
4. Metal plate should be grounded.
5. The cover of EMI filter and AC motor drive or grounding should be fixed on the metal plate and the contact area should be as large as possible.

Choose suitable motor cable and precautions

Improper installation and choice of motor cable will affect the performance of EMI filter. Be sure to observe the following precautions when selecting motor cable.

1. Use the cable with shielding (double shielding is the best).
2. The shielding on both ends of the motor cable should be grounded with the minimum length and maximum contact area.
3. Remove any paint on metal saddle for good ground contact with the plate and shielding.

Remove any paint on metal saddle for good ground contact with the plate and shielding.

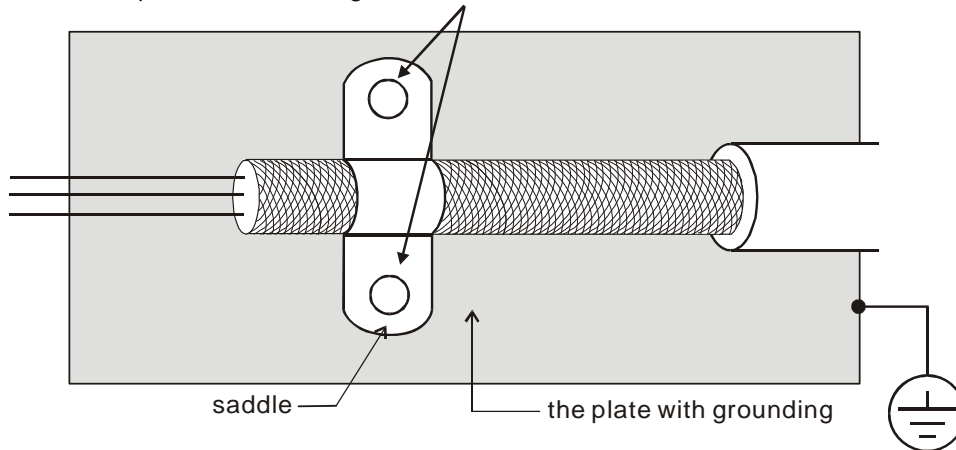


Figure 1

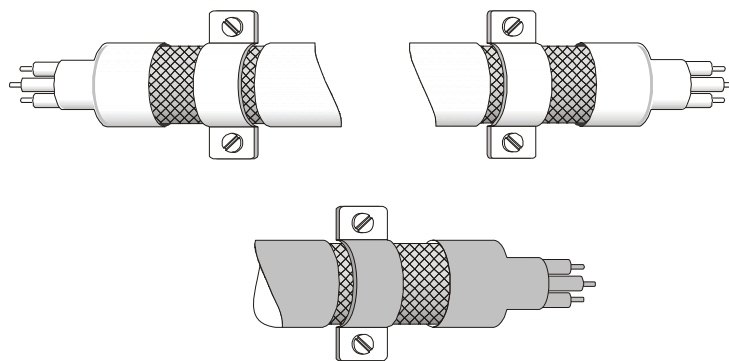


Figure 2

The length of motor cable

1. Required cable length when the motor drive is at full load.

- a. Non-shielded cable: For models of 5.5kW(7.5HP) and below, the maximum cable length is 100m (328ft) . For 7.5kW(10HP) and above, the maximum cable length is 200m(656ft)
- b. Shielded cable: For models of 5.5kw(7.5HP) and below, the maximum cable length is 50m(165ft). For models of 7.5kW(10HP), the maximum cable length is 100m(328ft).

If the cable length is longer than the recommended lengths above, it will be necessary to install an output reactor.

NOTE

- If the length is too long, the stray capacitance between cables will increase and may cause leakage current. It will activate the protection of over current, increase leakage current or not insure the correction of current display. The worst case is that AC motor drive may damage.
- If more than one motor is connected to the AC motor drive, the total wiring length is the sum of the wiring length from AC motor drive to each motor.
- For the 460V series AC motor drive, when an overload relay is installed between the drive and the motor to protect motor over heating, the connecting cable must be shorter than 50m. However, an overload relay malfunction may still occur. To prevent the malfunction, install an output reactor (optional) to the drive or lower the carrier frequency setting (Pr.00-12).

2. Consequence of the surge voltages on the motor

When a motor is driven by an AC motor drive of PWM type, the motor terminals will experience surge voltages easily due to components conversion of AC motor drive and cable capacitance. When the motor cable is very long (especially for the 460V series), surge voltages may reduce insulation quality. To prevent this situation, please follow the rules below:

- Use a motor with enhanced insulation.
- Connect an output reactor (optional) to the output terminals of the AC motor drive
- The length of the cable between AC motor drive and motor should be as short as possible (10 to 20 m or less)
- For models 7.5hp and above:

Insulation level of motor	1000V	1300V	1600V
460VAC input voltage	20m(66ft)	100m(328ft)	400m(1312ft)
230VAC input voltage	400m(1312ft)	400m(1312ft)	400m(1312ft)

- For models 5hp and less:

Insulation level of motor	1000V	1300V	1600V
460VAC input voltage	20m(66ft)	50m(165ft)	50m(165ft)
230VAC input voltage	100m(328ft)	100m(328ft)	100m(328ft)

NOTE

Never connect phase lead capacitors or surge absorbers to the output terminals of the AC motor drive.

6-7 Digital Keypad

1 KPC-CE01



A: LED Display

Display frequency, current, voltage and error etc.

B: Status Indicator

F: Frequency Command

H: Output Frequency

U: User Defined Units

ERR: CAN Error Indicator




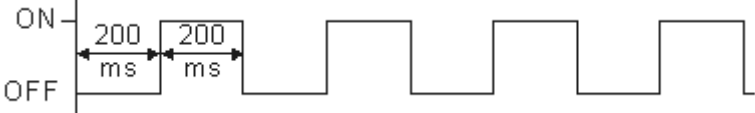
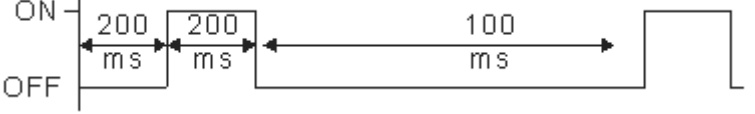
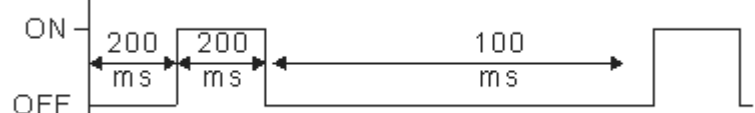
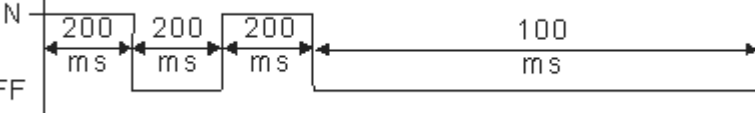
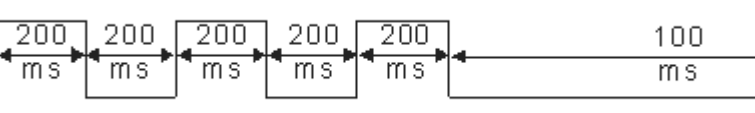
RUN: CAN Run Indicator

C: Function


(Refer to the chart follows for detail description)

Key	Description				
ESC	ESC Key Press ESC key to return to the previous page. It also functions as a return to last category key in the sub-menu.				
MENU	Menu Key Press MENU key under any condition will return to the main MENU. Menu content: <table style="width: 100%; border: none;"> <tr> <td style="width: 50%;">1. Parameter Detail</td> <td style="width: 50%;">3. Keypad locked</td> </tr> <tr> <td>2. Copy Parameter</td> <td>4. PLC Function</td> </tr> </table>	1. Parameter Detail	3. Keypad locked	2. Copy Parameter	4. PLC Function
1. Parameter Detail	3. Keypad locked				
2. Copy Parameter	4. PLC Function				
ENTER	ENTER Key Press ENTER and go to the next level. If it is the last level then press ENTER to execute the command.				
HAND	HAND ON Key <ol style="list-style-type: none"> HAND key will operates according to the parameter settings when the source of HAND master frequency command and the source of HAND operation command is properly set,. The factory setting of the source command for frequency and operation are from the digital keypad . Press HAND key in stop status, the drive setting switches to the parameter setting of HAND. Press HAND key in during operation, the drive will come to stop then switches to the parameter setting of HAND. When process complete: H/A LED ON. 				
AUTO	Auto Operation Key <ol style="list-style-type: none"> AUTO function executes according to the parameter settings of the source of AUTO frequency and AUTO operation. The factory setting is the external terminal (source of operation is 4-20mA). Press the ATUO key in stop status, the drivel switches to auto-setting. Press the auto key during operation status, the drivel will come to stop and switch to auto-setting. When process complete: H/A LED is OFF 				
FWD/REV	Operation Direction Key <ol style="list-style-type: none"> FWD/REV key controls the operation direction but will NOT activate the drive. FWD: forward, REV: reverse. The drive operates in the direction as shown by the LED light. 				
RUN	Start Key <ol style="list-style-type: none"> This button is functional only when the keypad is the source of the command. This button allows the motor drive to run by following its settings. See Description of LED functions for LED status Press repeatedly the "RUN" button is allow while the motor drive is stopping. 				
STOP	Stop Key. <ol style="list-style-type: none"> STOP key has the highest priority in command. Press STOP key, the drive will come to stop under any condition. The RESET key can be used to reset the drive when faults occur. If the RESET key is not responding, check MENU → Fault Records and check the most recent fault. 				

Descriptions of LED Functions

LED	Descriptions				
	<p>Steady ON: operation indicator of the AC motor drive, including DC brake, zero speed, standby, restart after fault and speed search.</p> <p>Blinking: drive is decelerating to stop or in the status of base block.</p> <p>Steady OFF: drive doesn't execute the operation command</p>				
	<p>Steady ON: stop indicator of the AC motor drive.</p> <p>Blinking: drive is in the standby status.</p> <p>Steady OFF: drive doesn't execute "STOP" command.</p>				
	<p>Operation Direction LED 『Green light= Forward』; 『Red light= Reversely』</p> <p>Steady ON: the drive is running forward.</p> <p>Blinking: the drive is changing direction.</p> <p>Steady Off: the drive is running reversely.</p>				
<p>CANopen ~"RUN"</p>	<p>RUN (Green light):</p>				
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">LED status</th> <th>Condition/State</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>CANopen at initial</td> </tr> </tbody> </table> <p style="text-align: center;">No LED</p>	LED status	Condition/State	OFF	CANopen at initial
	LED status	Condition/State			
	OFF	CANopen at initial			
	<table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td style="width: 15%;">Blinking</td> <td>CANopen at pre-operation</td> </tr> </tbody> </table> 	Blinking	CANopen at pre-operation		
Blinking	CANopen at pre-operation				
<table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td style="width: 15%;">Single flash</td> <td>CANopen at stopped</td> </tr> </tbody> </table> 	Single flash	CANopen at stopped			
Single flash	CANopen at stopped				
<table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td style="width: 15%;">ON</td> <td>CANopen at operation status</td> </tr> </tbody> </table> <p style="text-align: center;">No LED</p>	ON	CANopen at operation status			
ON	CANopen at operation status				
<p>CANopen ~"ERR"</p>	<p>ERR (Red light):</p>				
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th style="width: 15%;">LED status</th> <th>Condition/ State</th> </tr> </thead> <tbody> <tr> <td>OFF</td> <td>No Error</td> </tr> </tbody> </table>	LED status	Condition/ State	OFF	No Error
	LED status	Condition/ State			
	OFF	No Error			
	<table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td style="width: 15%;">Single flash</td> <td>One message fail</td> </tr> </tbody> </table> 	Single flash	One message fail		
Single flash	One message fail				
<table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td style="width: 15%;">Double flash</td> <td>Guarding fail or heartbeat fail</td> </tr> </tbody> </table> 	Double flash	Guarding fail or heartbeat fail			
Double flash	Guarding fail or heartbeat fail				
<table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td style="width: 15%;">Triple flash</td> <td>SYNC fail</td> </tr> </tbody> </table> 	Triple flash	SYNC fail			
Triple flash	SYNC fail				
<table border="1" style="width: 100%; border-collapse: collapse;"> <tbody> <tr> <td style="width: 15%;">ON</td> <td>Bus off</td> </tr> </tbody> </table>	ON	Bus off			
ON	Bus off				

Dimension

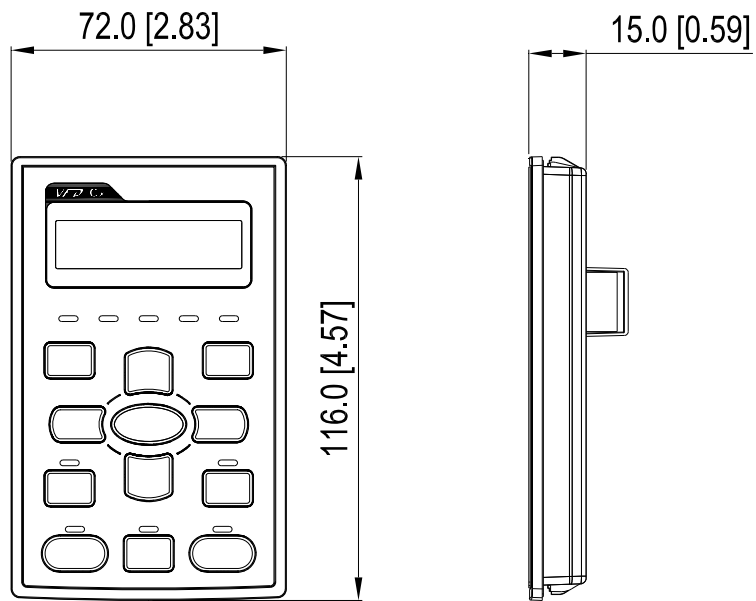

RJ45 Extension Lead for Digital Keypad

Part #	Description
CBC-K3FT	3 feet RJ45 extension lead (approximately 0.9m)
CBC-K5FT	5 feet RJ45 extension lead (approximately 1.5 m)
CBC-K7FT	7 feet RJ45 extension lead (approximately 2.1 m)
CBC-K10FT	10 feet RJ45 extension lead (approximately 3 m)
CBC-K16FT	16 feet RJ45 extension lead (approximately 4.9 m)

6-8 USB/RS-485 Communication Interface IFD6530

Warning


- ✓ Read thoroughly this section before installation and putting it into use.
- ✓ The content of this section and the driver file may be revised without prior notice. Consult our distributors or download the most updated instruction/driver version at [AC Motor Drive > Optional](#)

Introduction

IFD6530 is a convenient RS-485-to-USB converter, which does not require external power-supply and complex setting process. It supports baud rate from 75 to 115.2kbps and auto switching direction of data transmission. In addition, it adopts RJ-45 in RS-485 connector for users to wire conveniently. And its tiny dimension, handy use of plug-and-play and hot-swap provide more conveniences for connecting all DELTA IABU products to your PC.


Applicable Models: All DELTA IABU products.

■ Application & Dimension:

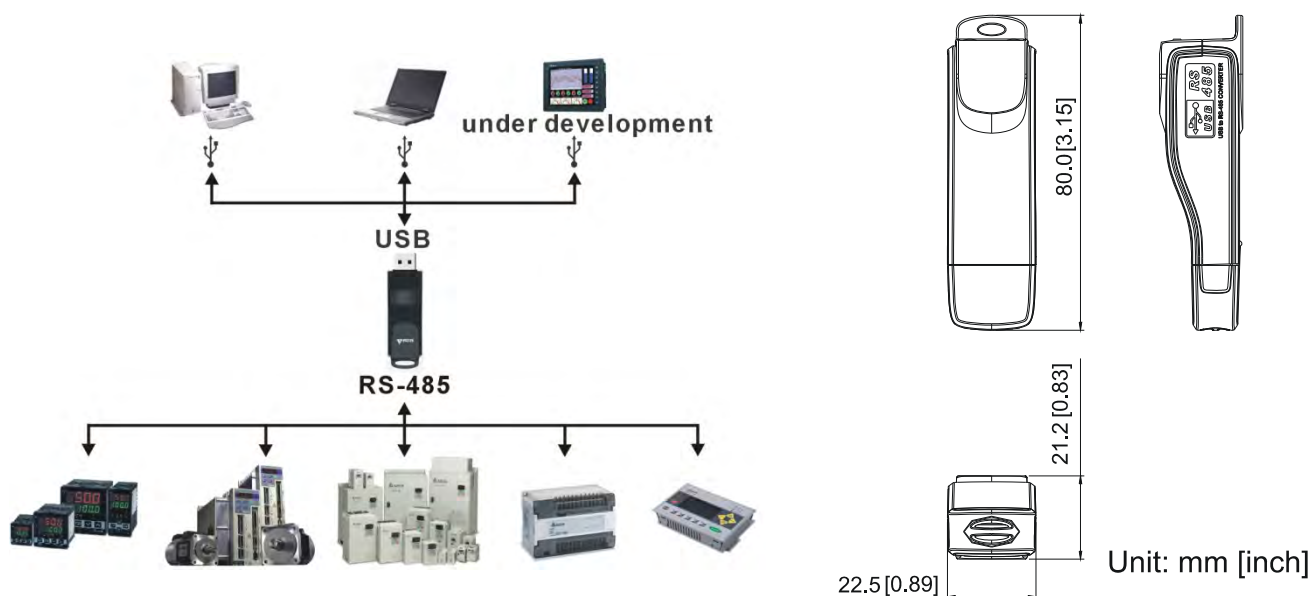

Specifications

Power supply	No external power is needed
Power consumption	1.5W
Isolated voltage	2,500VDC
Baud rate	75, 150, 300, 600, 1,200, 2,400, 4,800, 9,600, 19,200, 38,400, 57,600, 115,200 bps
RS-485 connector	RJ-45
USB connector	A type (plug)
Compatibility	Full compliance with USB V2.0 specification
Max. cable length	RS-485 Communication Port: 100 m
Support RS-485 half-duplex transmission	

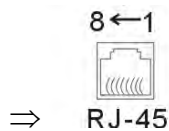RJ-45




PIN	Description
1	Reserved
2	Reserved
3	GND
4	SG-

PIN	Description
5	SG+
6	GND
7	Reserved
8	+9V

Preparation before Installing Driver

Extract the driver file (IFD6530_Drivers.exe) by following steps. You could find driver file (IFD6530_Drivers.exe) in the CD supplied with IFD6530.

Note: DO NOT connect IFD6530 to PC before extracting the driver file.

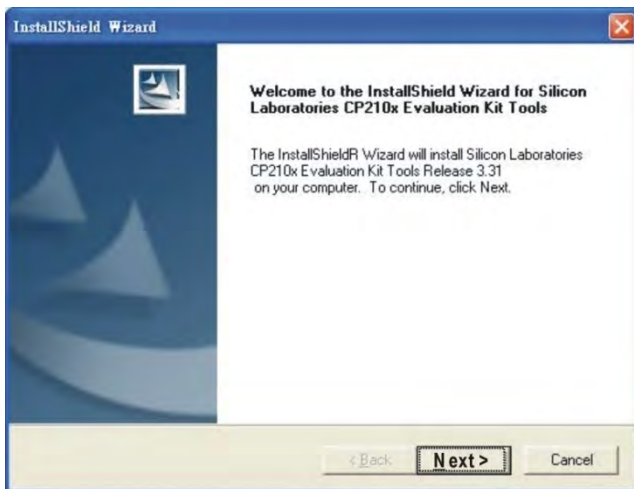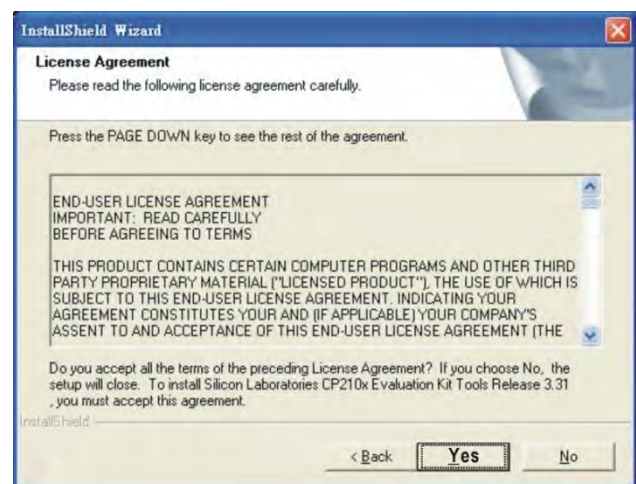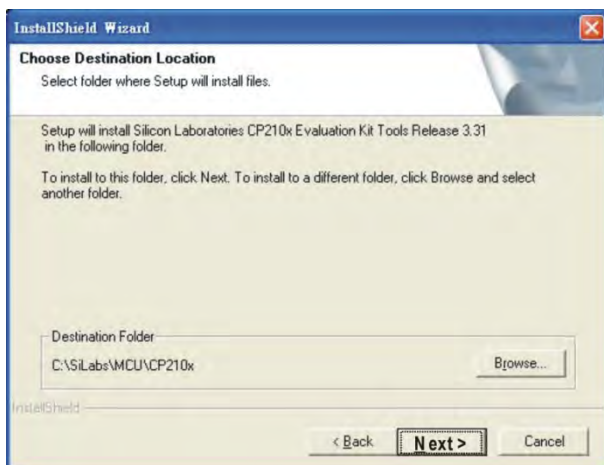STEP 1**STEP 2****STEP 3****STEP 4****STEP 5**

You should have a folder marked SiLabs under drive C. c:\SiLabs


Intalling the Driver

After connecting IFD6530 to PC, install driver by following steps below.



STEP 1




STEP 2

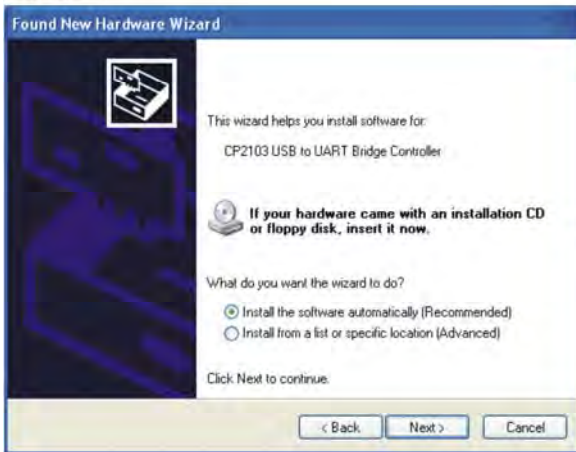

OR

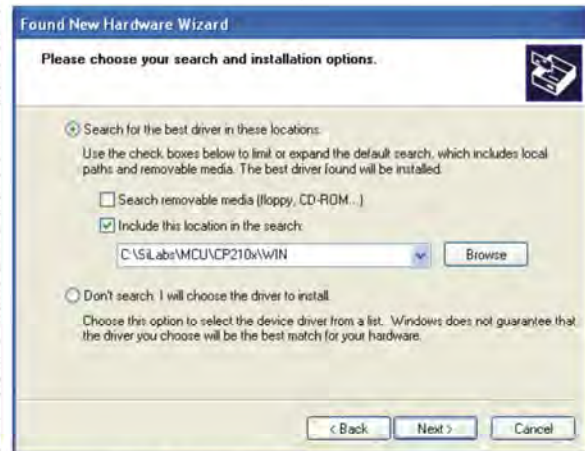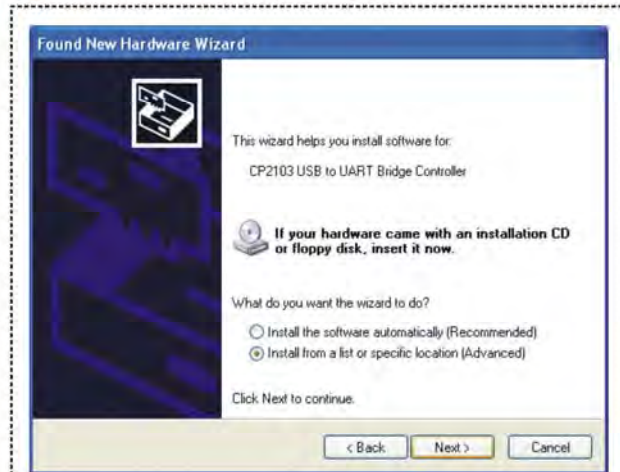

Browse and select directory, or enter
C:\SiLabs\MCU\CP210x\WIN

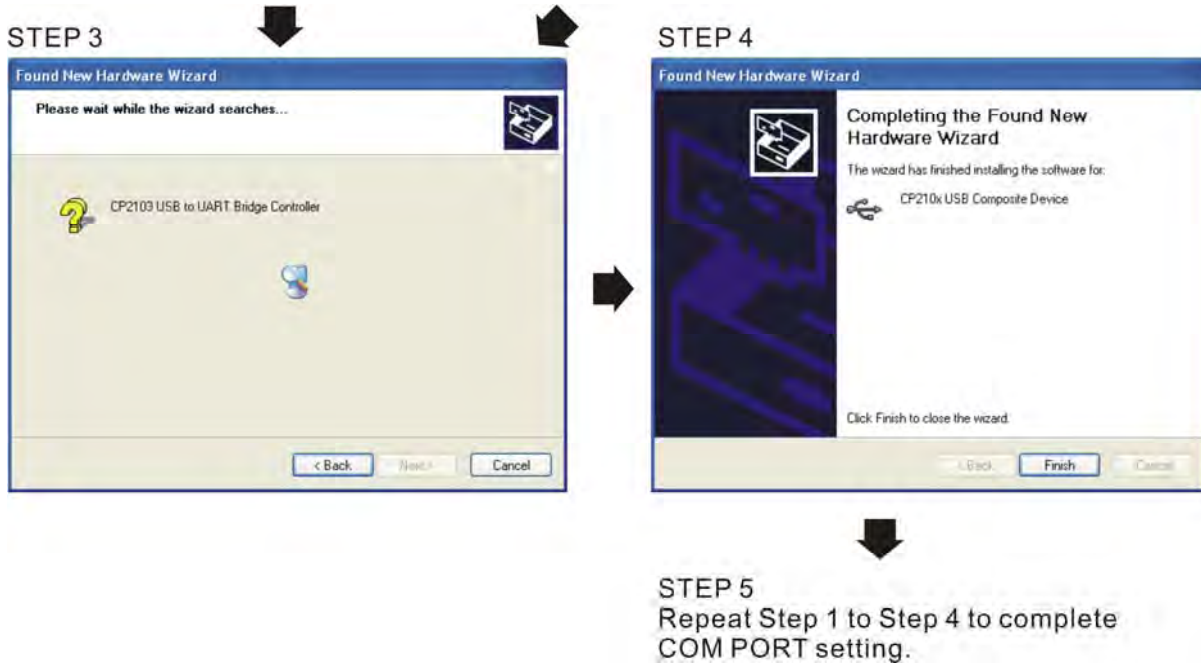

LED Display

1. Steady Green LED ON: power is ON.
2. Blinking orange LED: data is transmitting.

07 Options Cards

Select applicable option cards for your drive or contact local distributor for suggestion.


To prevent drive damage during installation, remove the digital keypad and the cover before wiring. Refer to the following instruction.

Remove the top cover


Frame B, C & D Screw Torque: Kg-cm [lb-in.]

Step 1

Loosen the 4 screws.
Then remove the top cover.

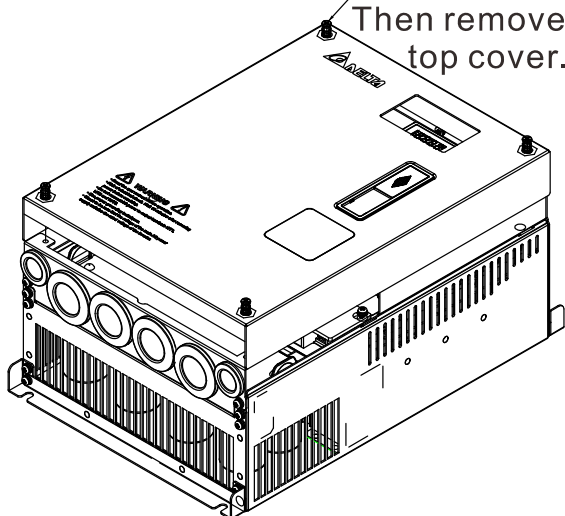


Step 2

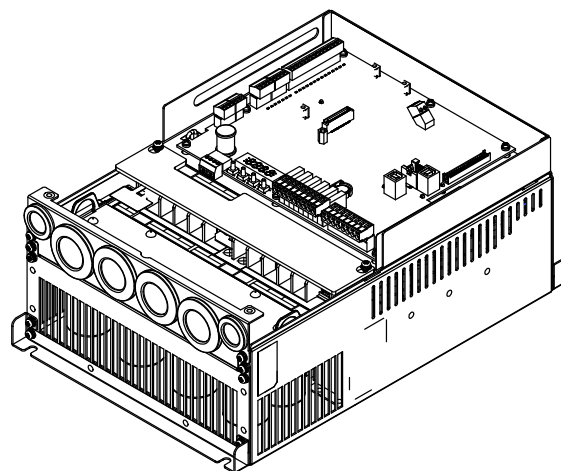


Step 3


Put back the top cover.
Then fasten the 4 screws,
Screw torque 15kgf-cm

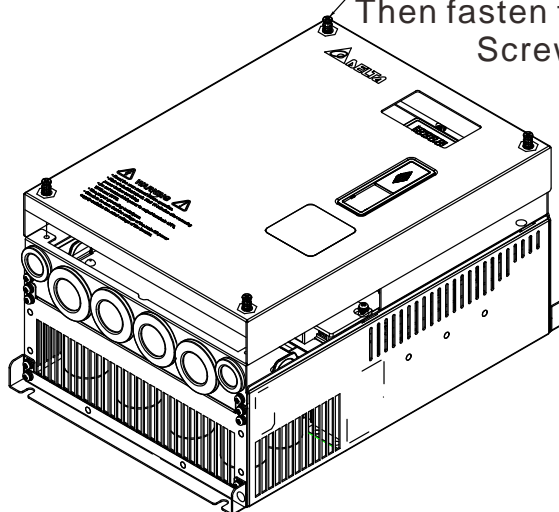

Frame E Screw Torque: Kg-cm [lb-in.]

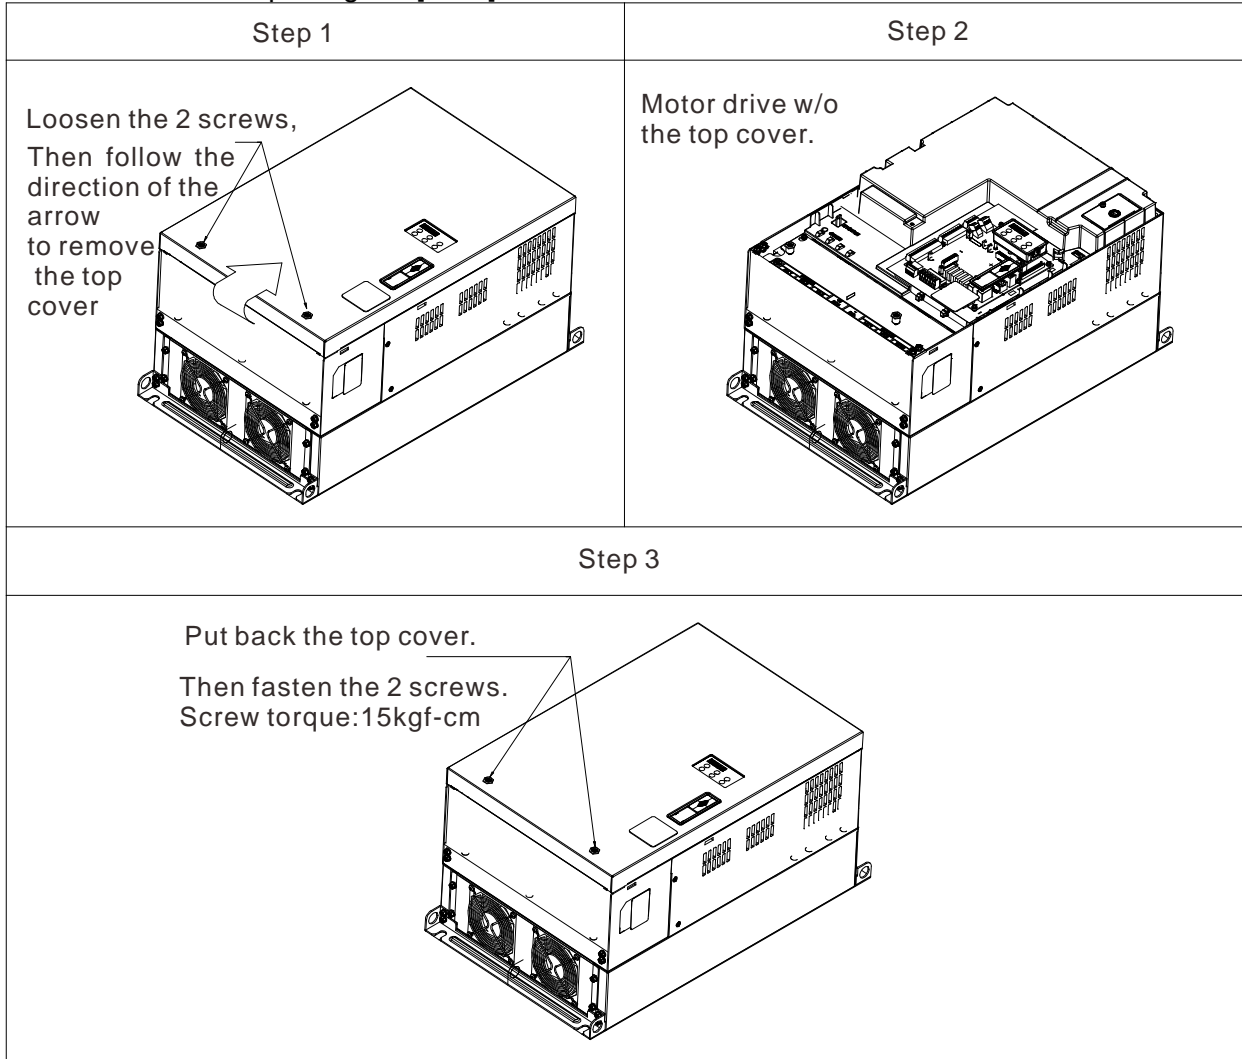

Vertical view of the motor drive & Screw's Specificatons:

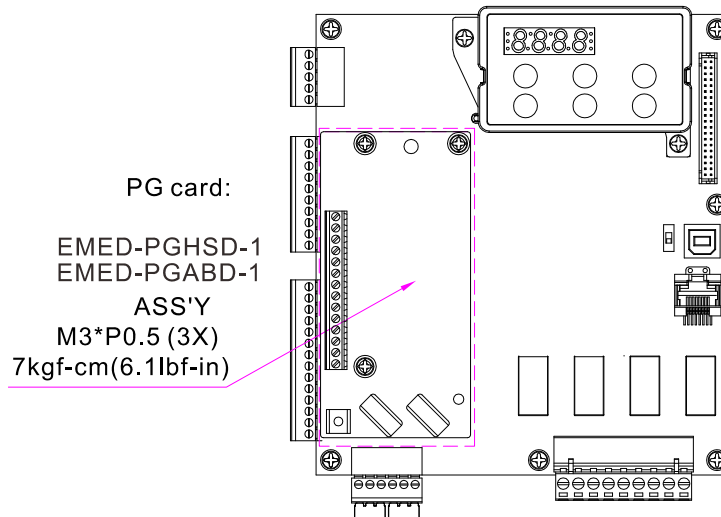


Screws' Specification for Option Card Terminal:

PG Card	Wire Gauge	Torque
EMED-PGABD-1	30~16AWG (0.05~1.31mm ²)	1.6Kg-cm [1.4lb-in]
EMED-PGHSD-1	30~16AWG (0.05~1.31mm ²)	1.6Kg-cm [1.4lb-in]


7-1 EMED-PGABD-1

Applicable enoder: A/B/Z & U/V/W Absolute Encoders

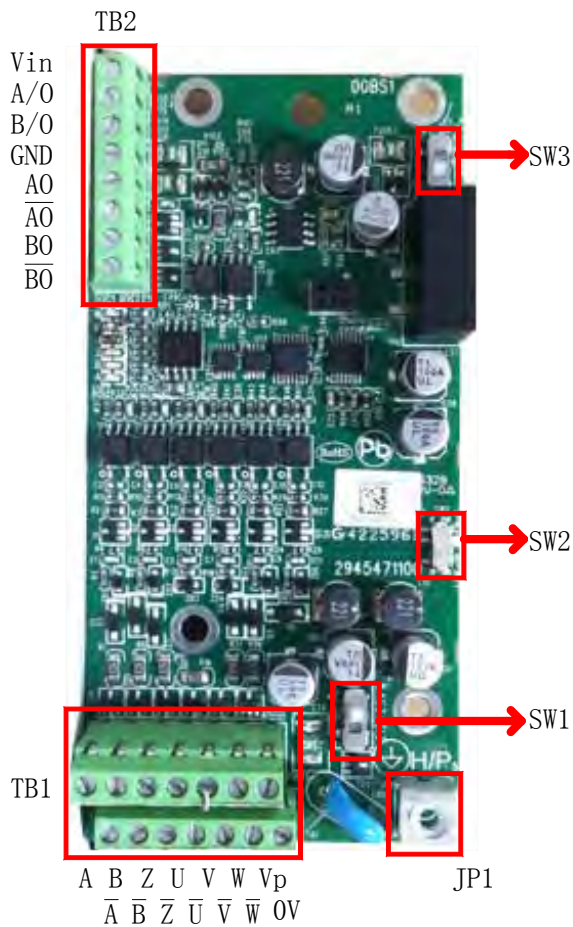

Dimension


unit : mm[inch.]

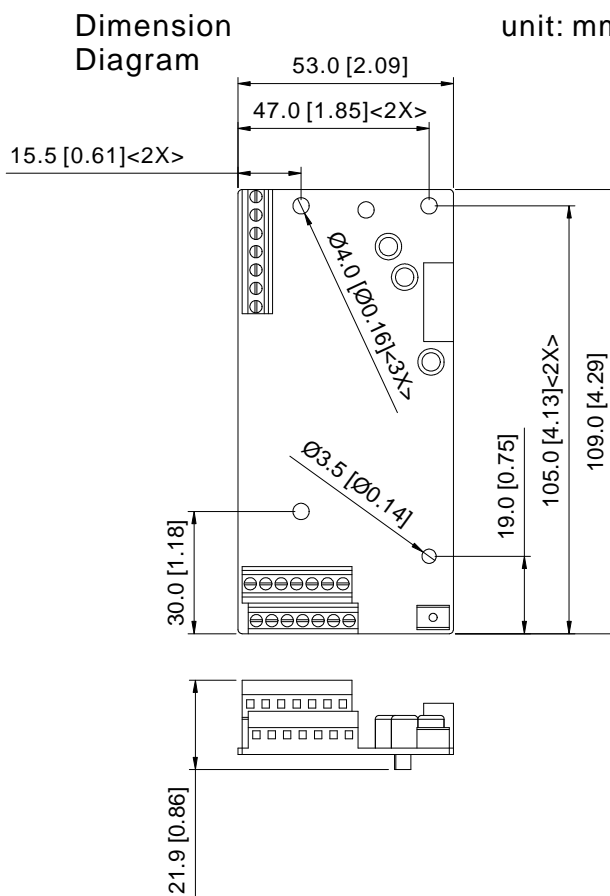


NOTE

- Verify if the SW1 is set to the correct output voltage before power on.
- Keep away from any high voltage line when wiring the motor drive to avoid interference.

Terminal Specification

Terminals		説明 Descriptions
TB2	Vin	Terminal for voltage input, to adjust the amplitude of output voltage at terminal A/O and terminal B/O. It also provides a 5V voltage to support line driver's signal. Vin voltage range: 8~24V, Max: 24V.
	A/O, B/O	Output signal of the push-pull frequency divider Factory setting: Output amplitude is about +24V. Use SW2 to cut off the internal default power. Input required power (i.e. output voltage's amplitude) DVi voltage range Max : 24V (Push-Pull Voltage Output) Max. output frequency: 100kHz Support frequency dividing output, the frequency dividing range: 1~31Hz.
	GND	Common ground terminal connecting to the host controller and the motor drive.
	AO, /AO, BO, /BO	Line driver pulse output signal (Line Driver RS422) Max. output frequency: 150kHz Support frequency dividing output, the frequency dividing range: 1~31Hz.
TB1	VP	Power output of encoder Note: Use SW1 to set up output voltage Voltage: +5V±0.5V or +12V±1V Current: 200mA max
	0V	Common power terminal of encoder
	A、 \bar{A} 、B、 \bar{B} 、Z、 \bar{Z}	Incremental encoder signal input terminal Types of input signal: line drive, voltage output, push-pull, open-collector) Note: Different input signal needs different wiring method. See user manual for wiring diagrams. Max.input frequency: 150kHz
	U、 \bar{U} 、V、 \bar{V} 、W、 \bar{W}	Absolute encoder signal input terminal Types of input signal: : line drive, voltage, push-pull, open-collector) Note: Different input signal needs different wiring method. See user manual for wiring diagrams Max.input frequency: 150kHz
JP1		Ground Terminal Connect the power supply of the motor drive to the ground. Support PG shielding
	SW1	Switch between encoder's 5V/12V power.
	SW2	Offline Detection Switch. Switch the the SW2 to Line-D side to enable offline detection when Line-D input signal. Switch the SW2 to OPEN-C side to disable offline detection function when OPEN-C input signal.
	SW3	Switch of power supply for frequency division Switch SW3 to INP_sied to provide 24V power for internal use. Switch SW3 to EXP side to provide 24V power for external use (client).


Applicable encoders:

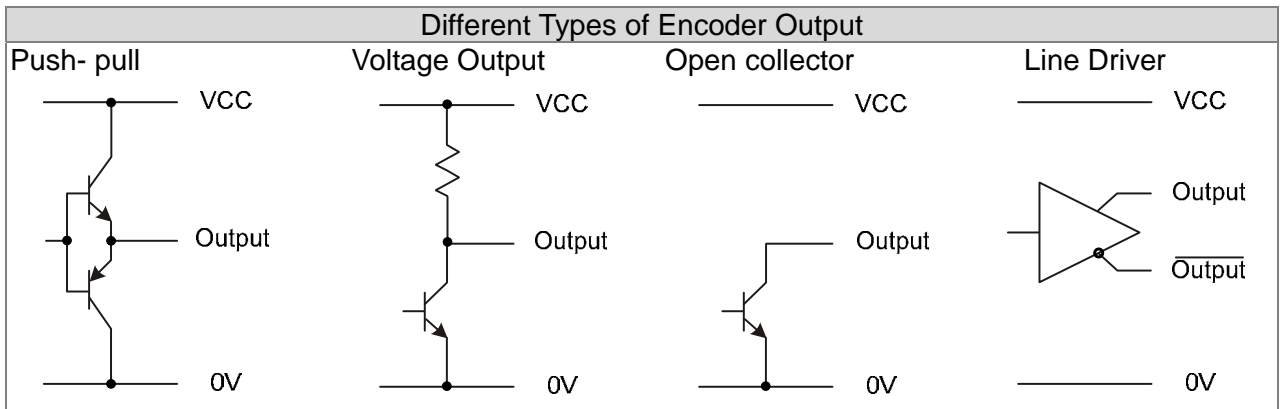

NOTE

- Verify if the SW1 is set to the correct output voltage before power on.
- Keep away from any high voltage line when wiring the motor drive to avoid interference

Wiring Diagram

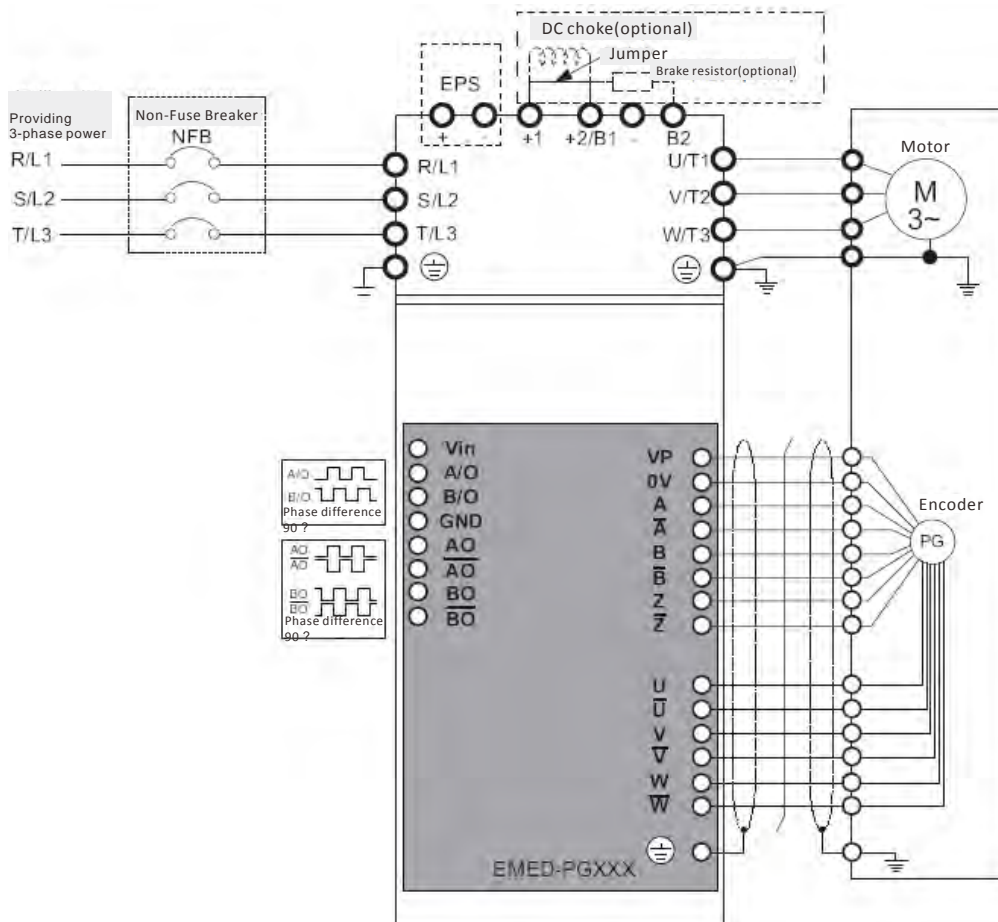

Set up the Signal of the Frequency Division

- ① After the encoder input a PULSE signal, there will be an output signal of the division factor “n.” Use Pr10-29 <Output of PG card’s frequency division> to set up.
- ② Setup of Pr10-29 <PG card’s frequency division>:
Output of decimal frequency division setting. Range of the division factor “n”: 1~31.
- ③ Pr10-30 <Mode of output of PG card’s frequency division>

Bit3	Bit2	Bit1	Bit0
X	X	OUT/M	IN/M

OUT/M: Mode of pulse output of frequency division;

IN/M: Mode of pulse input of frequency division;

“X” is for backup while “0” is a value to write.

Setting and Description of Input Mode (IN/M) & Output Mode(OUT/M):

OUT/M	IN/M	Division factor	
		A is ahead of B	B is ahead of A
0	0		
1	0		
X	1		

NOTE

- In the waveform A-/A, B-/B are the PG card input signals; AO- \overline{AO} , BO- \overline{BO} are the differential output frequency division signals. (Use a differential probe to measure.)
- Division factor “n”: Set 15 to have the input signal divided by 15.)
- When OUT/M, IN/M set as 0.0, the PG card input signal A-/A, B-/B are square waves while AO- \overline{AO} 、BO- \overline{BO} are frequency division output.
- When OUT/M, IN/M are set as 1.0, the PG card input signal A-/A、B-/B are square waves while the BO- \overline{BO} is the phase indicator of A and B
- When OUT/M, IN/M are set as X, B-/B phase has to be direction indication input signal (e.g. When B-/B is LOW, it means A is ahead of B. When B-/B is HIGH, it means B is ahead of A)
- Take Pr10-29 and Pr10-30 as examples. When frequency division value =1 5, OUT/M =1, IN/M = 0, set Pr10-29 = 15 and Pr10-30 = 0002h.
Set Pr100-29 =15,
Set Pr10-30 =0002h

Bit3	Bit2	Bit1	Bit0
X	X	1	0


7-2 EMED-PGHSD-1

Applicable encoder:

Sine-wave: Heidenhain ERN1387

EnDat2.1: Heidenhain EQN425, EQN1325, ECN113, ECN413, ECN1113, ECN1313

SICK HIPERFACE: SRS50/60

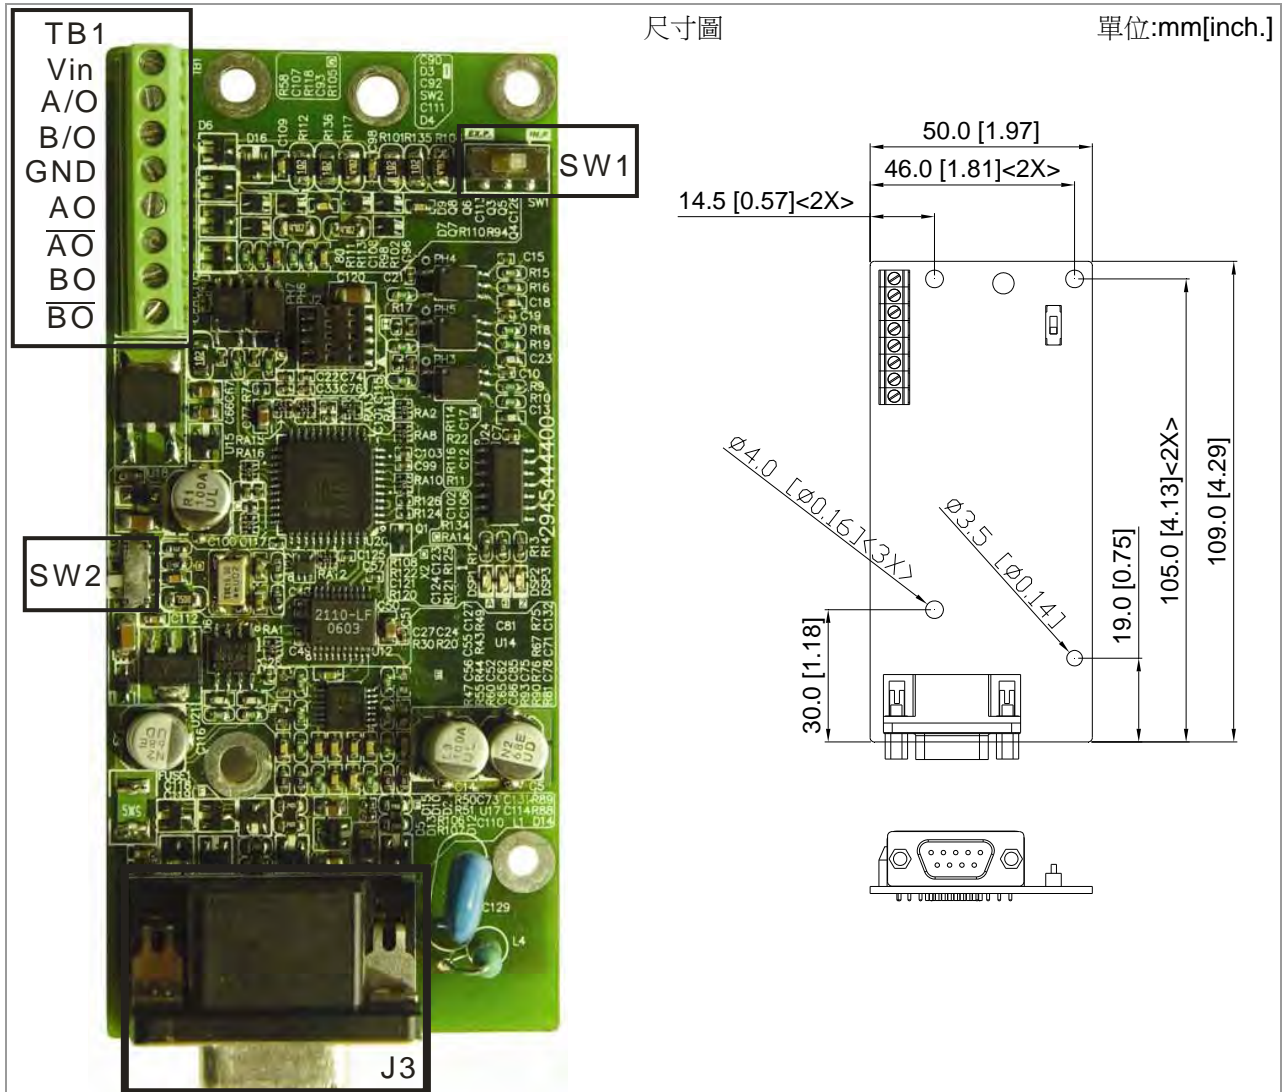


※ Support Heidenhain ERN1387, EnDat2.1, HIPERFACE


Terminals		說明 Descriptions
TB1	Vin	Voltage Input: (to adjust output voltage amplitude of the push-pull pulse) 最大輸入電壓：Max. input voltage: 24VDC 最大輸入電流：Max. input current: 30mA
	GND	輸入電源/輸出信號共同點 Common power input/ signal output terminal
	A/O, B/O	推挽型脈波輸出信號(Push-Pull Voltage Output) 最大輸出頻率：Max. output frequency: 50kHz
	AO, /AO, BO, /BO	線驅動 (Line Driver RS422) 輸入最大頻率 Max. input frequency: 100kHz
J3 (D-SUB female connector)		編碼器信號輸入 Encoder signal input terminal
SW1		除頻輸出電源供應選擇 Frequency divider output power terminal selection INP: 由 PG 卡內部供電源 Power supplied by PG card EXP: 由外部供應電源 Power from external source
SW2		編碼器電壓輸入選擇 Frequency divider input power terminal selection 5V : 5Vdc 8V : 8Vdc

To use with Heidenhain ERN1387:

EMED-PGHSD-1 J3


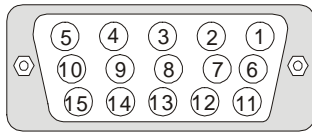


Heidenhain ERN1387

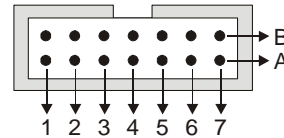

Terminal #	Terminals
1	B-
2	NC
3	Z+
4	Z-
5	A+
6	A-
7	0V
8	B+
9	VP
10	C+
11	C-
12	D+
13	D-
14	NC
15	NC


Terminal #	Terminals
5a	B-
-	-
4b	R+
4a	R-
6b	A+
2a	A-
5b	0V
3b	B+
1b	UP
1a	C-
7b	C+
2b	D+
6a	D-
-	-
-	-

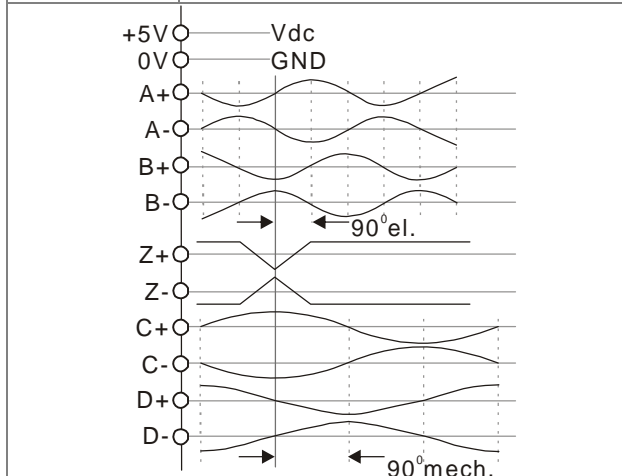

Terminal Function:

Terminals	Descriptions	Specifications	
VP	Encoder voltage input. Use SW2 to set +5V/+8V	Voltage: +5.1Vdc±0.3V; +8.4Vdc±1.5V Current: 200mA max.	
0V	Encoder common power terminal	Reference level of encoder's power.	
J3	A+ · A- · B+ · B- · Z+ · Z-	Encoder sine wave differential signal input (Incremental signal)	
	C+ · C- · D+ · D-	Encoder sine wave differential signal input (Absolute signal)	

Wiring Diagram

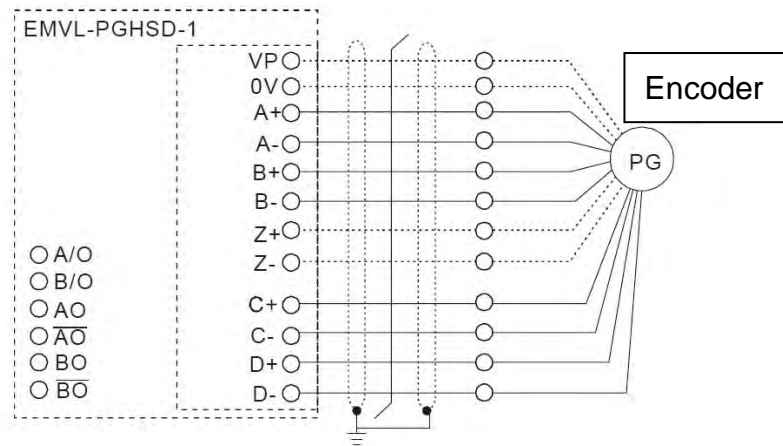

To use with Heidenhain EDat2.1/ SICK HIPERFACE:

EMED-PGHSD-1 J3	
Terminal #	Terminals
1	B-
2	-
3	Z+
4	Z-
5	A+
6	A-
7	0V
8	B+
9	VP
10	C+
11	C-
12	D+
13	D-
14	-
15	-


Heidenhain ECN1313	
Terminal#	Terminals
3b	B-
-	-
-	-
-	-
2a	A+
5b	A-
4b	0V
4a	B+
1b	+5V
2b	CLOCK+
5a	CLOCK-
6b	DATA+
1a	DATA-
-	-
-	-

SICK SRS 50/ SRS 60	
Terminal #	Terminals
3	REFSIN
-	-
-	-
-	-
8	+COS
4	REFCOS
2	GND
7	+SIN
1	+12V
-	-
-	-
5	DATA+
6	DATA-
-	-
-	-

Terminal Function:

Terminals	Descriptions	Specifications
VP	Encoder voltage input. Use SW2 to set +5V/+8V	Voltage: +5.1Vdc±0.3V; +8.4Vdc±1.5V Current: 200mA max.
0V	Encoder common power terminal	Reference level of encoder's power.
J3 A+、A-、B+、B-	Encoder sine wave differential signal input (Incremental signal)	Input frequency: 40k Hz max. 0.8...1.2V _{ss} (≈1V _{ss} ; Z ₀ =120Ω)
+SIN、+COS、REFSIN、REFCOS	Encoder sine wave differential signal input	Input frequency: 20k Hz max. 0.9...1.1V
CLOCK+, CLOCK-	CLOCK differential output	(Line Driver RS422 Level output)
Data+, Data-	RS485 communication interface	Terminal resistance is about 130Ω

Wiring Diagram

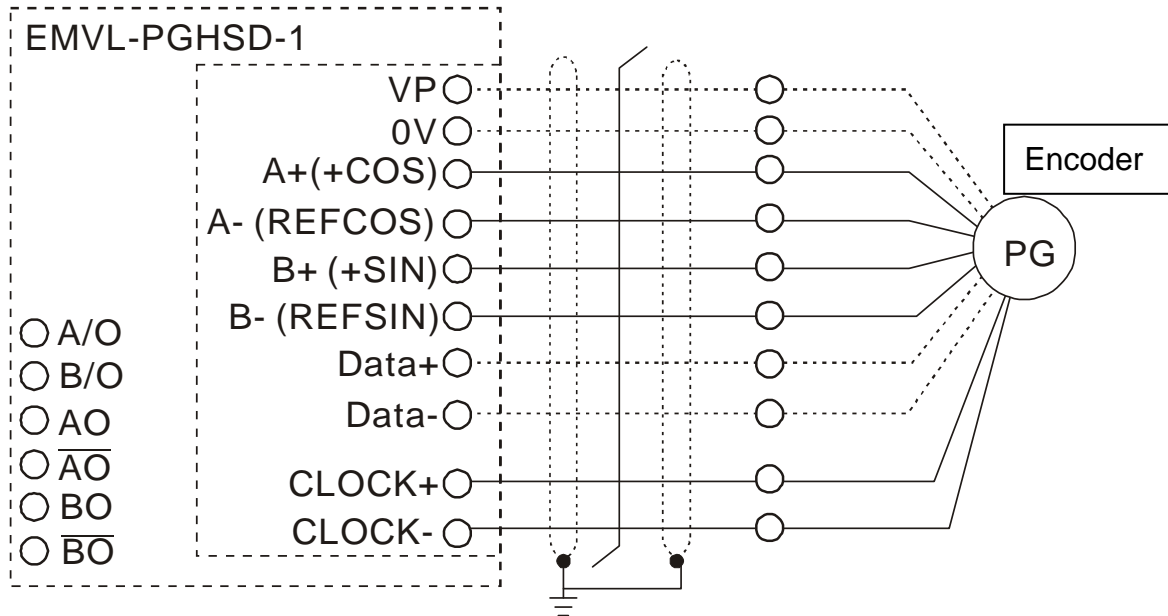

Set up the Signal of the Frequency Division

① After the encoder input a PULSE signal, there will be an output signal of the division factor “n.” Use Pr10-29 <Output of PG card’s frequency division> to set up.

② Pr10-30 <Mode of output of PG card’s frequency division>

Output of decimal frequency division setting. Range of the division factor “n”: 1~31.

③ Pr10-30 <Mode of output of PG card’s frequency division>

Bit3	Bit2	Bit1	Bit0
X	X	OUT/M	IN/M


OUT/M: Mode of pulse output of frequency division;

IN/M: Mode of pulse input of frequency division;

“X” is for backup while “0” is a value to write.

Setting and Description of Input Mode (IN/M) & Output Mode(OUT/M):

OUT/M	IN/M	Division factor	
		A is ahead of B	B is ahead of A
0	0	<p>A-/A </p> <p>B-/B </p> <p>AO-AO-bar </p> <p>BO-BO-bar </p>	<p>A-/A </p> <p>B-/B </p> <p>AO-AO-bar </p> <p>BO-BO-bar </p>
1	0	<p>A-/A </p> <p>B-/B </p>	<p>A-/A </p> <p>B-/B </p>

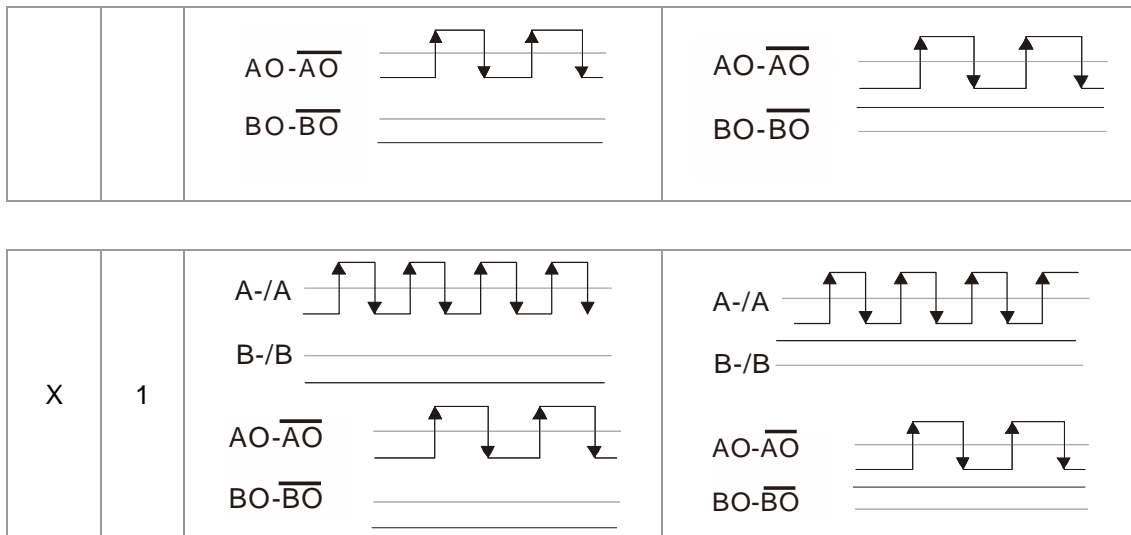

NOTE

- In the waveform A-/A, B-/B are the PG card input signals; AO- \overline{AO} , BO- \overline{BO} are the differential output frequency division signals. (Use a differential probe to measure.)
- Division factor "n": Set 15 to have the input signal divided by 15.)
- When OUT/M, IN/M set as 0.0, the PG card input signal A-/A, B-/B are square waves while AO- \overline{AO} 、BO- \overline{BO} are frequency division output.
- When OUT/M, IN/M are set as 1.0, the PG card input signal A-/A、B-/B are square waves while the BO- \overline{BO} is the phase indicator of A and B
- When OUT/M, IN/M are set as X, B-/B phase has to be direction indication input signal (e.g. When B-/B is LOW, it means A is ahead of When B-/B is HIGH, it means B is ahead of A)
- Take Pr10-29 and Pr10-30 as examples. when frequency division value =1 5, OUT/M =1, IN/M = 0, set Pr10-29 = 15 and Pr10-30 = 0002h.
Set Pr100-29 =15,
Set Pr10-30 =0002h

Bit3	Bit2	Bit1	Bit0
X	X	1	0

Chapter 8 Specifications

230V Series

Frame Size		B			C			D			E	
Model VFD-__ _ED23/21S		022*	037*	040	055	075	110	150	185	220	300	370
Applicable Motor	Output(KW)	2.2	3.7	4.0	5.5	7.5	11	15	18.5	22	30	37
Applicable Motor	Output (HP)	3	5	5	7.5	10	15	20	25	30	40	50
Output Rating	Rated Output Capacity(KVA)	4.8	6.8	7.9	9.5	12.5	19	25	29	34	46	55
	Rated Output Current (A)	12.0	17	20.0	24.0	30.0	45.0	58.0	77.0	87.0	132.0	161.0
	Maximum Output Voltage (V)	3-phase Proportional to Input Voltage										
	Output Frequency	0.00~400Hz										
	Carrier Frequency	2~15kHz										2~9kHz
	Rated Output Maximum Carrier Frequency	8kHz			10kHz			8kHz			6kHz	
Input Rating	Input Current(A)	26	37.4	20	23	30	47	56	73	90	132	161
	Rated Voltage /Frequency	1-phase		3-phase								
	Voltage Tolerance	200~240V 50/60Hz										
	Frequency Tolerance	±10% (180~264V)										
Cooling Method	Fan cooled											
Weight (kg)	6	6	6	8	10	10	13	13	13	13	36	36


*VFD022ED21S & VFD037ED21S are 1-phase input models.

460V Series

Frame Size		B	C				D			E			
Model VFD-__ _ED43S		040	055	075	110	150	185	220	300	370	450	550	750
Applicable Motor Power	(KW)	4.0	5.5	7.5	11	15	18.5	22	30	37	45	55	75
Applicable Motor power	(HP)	5	7.5	10	15	20	25	30	40	50	60	75	100
Output Rating	Rated Output Capacity (KVA)	9.2	10.4	13.5	18.3	24	30.3	36	46.2	63.7	80	96.4	116.3
	Rated Output Current (A)	11.5	13	17	23	30	38	45	58	80	100	128	165
	Maximum Output Voltage(V)	3-phase Proportional to Input Voltage											
	Output Frequency	0.00~400Hz											
	Carrier Frequency	2~ 15kHz								2~ 9kHz		2~ 6kHz	
	Rated Output Maximum Carrier Frequency	8kHz	10kHz			8kHz			6kHz				
Input Rating	Rated Input Current(A)	11.5	14	17	24	30	37	47	58	80	100	128	165
	Rated voltage	3-phase 380~480V · 50/60Hz											
	Voltage Tolerance	±10% (342~528V)											
	Frequency Tolerance	±5% (47~63Hz)											
Cooling Method	Fan cooled												
Weight (kg)	6	8	10	10	10	10	13	14.5	36	36	50	50	

*Assumes operation at the rated output. Input current rating varies depending on the power supply, input reactor, wiring connections and power supply impedance.

General Specifications

Control Characteristics	Control Method	1: V/F, 2: VF+PG, 3: SVC, 4: FOC+PG, 5: TQC+PG, 6:FOC+PM
	Starting Torque	Reach up to 150% or above at 0.5H Under FOC+PG or FOC+PM mode, starting torque can reach 150% at 0Hz.
	Speed Control Range	1:100(up to 1:1000 when using PG card)
	Speed Control Resolution	±0.5%(up to ±0.02% when using PG card)
	Speed Response Ability	5Hz(Up to 30Hz for vector control)
	Max. Output Frequency	0.00 to 400Hz
	Output Frequency Accuracy	Digital Command 0.005%, Analog Command 0.5%
	Frequency Setting Resolution	Digital Command 0.01Hz, Analog Command: 1/4096(12 bit) of the max. output frequency.
	Torque limit	Max. is 200% torque current
	Torque Accuracy	±5%
	Accel/ Decel Time	0.00~600.00 seconds
	V/F Curve	Adjustable V/f curve using 4 independent points and square curve.
	Frequency Setting Signal	±10V
	Brake Torque	About 20%
Protection Characteristics	Motor Protection	Electronic thermal relay protection.
	Over-current Protection	The current forces 200% of the over-current protection and 250% of the rated current.
	Ground Leakage Current Protection	Higher than 50% rated current
	Overload Ability	Constant torque: 150% for 60 seconds, variable torque: 200% for 3 seconds
	Over-voltage Protection	Over-voltage level: Vdc > 400/800V; low-voltage level: Vdc < 200/400V
	Over-voltage Protection for the Input Power	Varistor (MOV)
	Over-temperature Protection	Built-in temperature sensor
Environment	Protection Level	NEMA 1/IP20
	Operation Temperature	-10°C~40°C, Up to 50°C under derating operation
	Storage Temperature	-20°C~60°C
	Ambient Humidity	90% RH以下 (non- condensing)
	Vibration	1.0G less than 20Hz, 0,6G at 20~60 Hz
	Installation Location	Altitude 1,000m or lower, keep from corrosive gasses, liquid and dust.
	Power System	TN System ^{*1*2}
Certifications	 (UL mark excludes VFD022ED21S and VFD037ED21S)	

*1: TN system: The neutral point of the power system connects to the ground directly. The exposed metal components connect to the ground via the protective earth conductor.

*2: Single phase models use single phase three wire power system.






09 Digital Keypad

9-1 Descriptions of Digital keypad

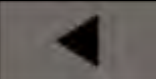

Digital Operation Panel KPED-LE01






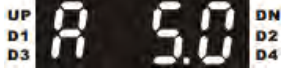
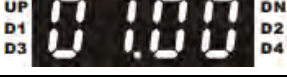
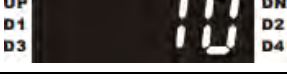
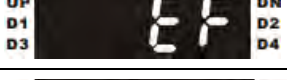
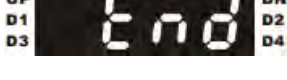

Function of Buttons

Buttons	Description
	Horizontal movement button: To move the cursor position for value adjustment.
	Reset the the motor drive after fault occurred.
	Change between different diplay mode.
	Parameter setting button: To read or modify various parameter settings.
	<ol style="list-style-type: none"> Two buttons available: Up and Down button Press Up or Down button to increase or decrease the value of a number. Press Up or Down button to choose between menus and languages.

LED Display


LED	Description
	Status Display: UP: Moving up. DN: Moving down D1: MI1 status D2: MI2 status D3: MI3 status D4: MI4 status
	Main Display Area: To display frequency, current, voltage, rotaion direction, user defined units, errors and warnings.

Description of the Displayed Functions

Displayed Function	Description
	Display the frequency setting of the VFD-ED
	Display the actual frequency delivered from VFD-ED to the motor.
	Display the user defined value at Pr00-04.
	Display the current (ampere)
	Display the selected parameter
	Display the value set at a parameter
	Display the external fault
	Display "End" for approximately 1 second if input has been accepted by pressing ENTER key. After a parameter value has been set, the new value is automatically stored in the register. To modify an entry, use the ▲ and ▼ keys.
	If the command given by the user is not accepted or the value of the command exceeds the allowed range, this error message will be displayed.

9-2 Operating the Built-in Digital Keypad

Setting Mode

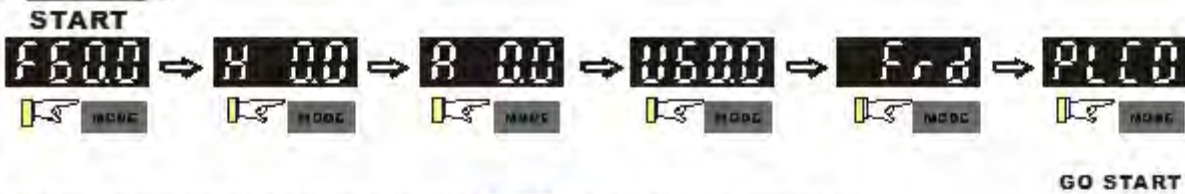

NOTE: In the selected mode, press **ENTER** to set the parameters.

Setting parameters



NOTE: In the parameter setting mode, you can press **ENTER** to the selected mode.

To change data



Setting direction (When operation source is digital keypad)



9-3 Description of the Digital Keypad KPC-CC01

KPC-CC01










Communication Interface
RJ-45 (socket), -485 interface;




Installation Method

1. Embedded type and can be put flat on the surface of the control box. The front cover is water proof.
2. Buy a MKC-KPPK model to do wall mounting or embedded mounting. Its protection level is IP66.
3. The maximum RJ45 extension lead is 5 m (16ft)
4. This keypad can also be used on Delta's motor drive C2000, CH2000 and CP2000.

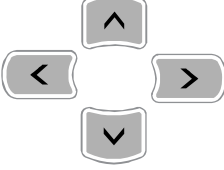Function of Buttons

Button	Description
	<p>Start Operation Key</p> <ol style="list-style-type: none"> 1. It is only valid when the source of operation command is from the keypad. 2. It can operate the AC motor drive by the function setting and the RUN LED will be ON. 3. It can be pressed repeatedly while the motor drive is shutting down..
	<p>Stop Command Key. This key has the highest processing priority in any situation.</p> <ol style="list-style-type: none"> 1. When it receives STOP command, no matter the AC motor drive is in operation or stop status, the AC motor drive needs to execute "STOP" command. 2. The RESET key can be used to reset the drive after the fault occurs. For those faults that can't be reset by the RESET key, see the fault records after pressing MENU key for details.
	<p>Operation Direction Key</p> <ol style="list-style-type: none"> 1. This key is only control the operation direction NOT for activate the drive. FWD: forward, REV: reverse. 2. Refer to the LED descriptions for more details.
	<p>ENTER Key Press ENTER and go to the next level. If it is the last level then press ENTER to execute the command</p>
	<p>ESCAPE Key ESC key function is to leave current menu and return to the last menu. It is also functioned as a return key in the sub-menu.</p>
	<p>Press menu to return to main menu.</p>
	<p>Direction: Left/Right/Up/Down</p> <ol style="list-style-type: none"> 1. In the numeric value setting mode, it is used to move the cursor and change the numeric value. 2. In the menu/text selection mode, it is used for item selection.

Description of LED Functions


LED	Description
	<p>Steady ON: operation indicator of the AC motor drive, including DC brake, zero speed, standby, restart after fault and speed search.</p> <p>Blinking: drive is decelerating to stop or in the status of base block.</p> <p>Steady OFF: drive doesn't execute the operation command</p>
	<p>Steady ON: stop indicator of the AC motor drive.</p> <p>Blinking: drive is in the standby status.</p> <p>Steady OFF: drive doesn't execute "STOP" command.</p>
	<p>Operation Direction LED</p> <ol style="list-style-type: none"> 1. Green light is on, the drive is running forward. 2. Red light is on, the drive is running backward. 3. Twinkling light: the drive is changing direction.

9-4 Function of Digital Keypad KPC-CC01

POWER ON



- 1) The default Start-up page is Delta Logo. (Default 1 and 2)
- 2) User can customize their start-up page through the edited function. (Need to purchase the optional accessories)

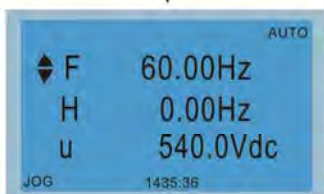

→ The top line of LCD displays the status of drive.

After main menu is selected, the start-up page will display in the format user defined. The page shown on the left is display as Delta default setting.

→ The button line of LCD displays time and JOG.


Press once




Press again



Press again

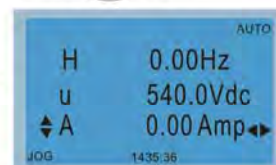

Press

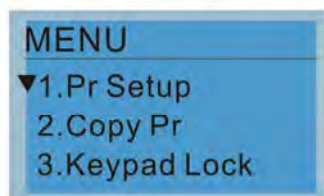

MENU

- | | |
|--------------------|--------------------|
| 1. Parameter Setup | 5. Copy PLC |
| 2. Copy Parameter | 6. Fault Record |
| 3. Keypad Locked | 7. Quick Start |
| 4. PLC Function | 8. Display Setup |
| | 9. Time Setup |
| | 10. Language Setup |
| | 11. Start-up |
| | 12. Main page |
| | 13. PC Link |

Item 1~4 are the common items for KPC-CC01 & KPC-CE01

NOTE

1. Startup page can only display pictures, no flash.
2. When Power ON, it will display startup page then the main page. The main page displays Delta's default setting F/H/A/U, the display order can be set by Pr.00.03 (Startup display). When the selected item is U page, use left key and right key to switch between the items, the display order of U page is set by Pr.00.04 (User display).
3. **VFD-ED doesn't support Function 3, 4 and 5.**

Display Icon

Start-up


- ◆ 1.Default 1 ●
- 2.Default 2
- 3.User define

Pr setup



- ◆ 00:SYSTEM PARAM
- 01:BASIC PARAM
- 02:DIGITAL IN/ ▶

● : present setting

◆ : roll down the page for more options

Press  for more options.

▶ : show complete sentence

Press   for complete information

Display Item

MENU




- ◆ 1.Pr Setup
- 2.Copy Pr
- 3.Keypad Lock

MENU

<ul style="list-style-type: none"> 1.Parameter Setup 2.Copy Parameter 3.Keypad Locked 4.PLC Function 	<ul style="list-style-type: none"> 5. Copy PLC 6. Fault Record 7. Quick Start 8. Display Setup 9. Time Setup 10. Language Setup 11. Start-up 12. Main page 13. PC Link
------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


Item 1~4 are the common items for KPC-CC01 &KPC-CE01

1. Parameter Setup






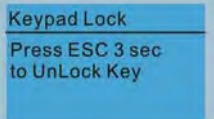

<div style="border: 1px solid black; padding: 5px; margin-bottom: 10px;"> <p>Pr setup</p> <ul style="list-style-type: none"> ◆ 00:SYSTEM PARAM 01:BASIC PARAM 02:DIGITAL IN/ ▶ </div> <p>Press  to select.</p> <p>Press  to select a parameter group.</p> <p>Once a parameter group is selected, press  to go into that group.</p>	<p>For example: Setup source of master frequency command.</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> <p>00- SYSTEM PARAME</p> <ul style="list-style-type: none"> ◆ 00: Identity Co ▶ 01: Rated Curren 02: Parameter Re </div> <p>Once in the Group 00 Motor Drive Parameter, Use Up/Down key to select parameter 20: Auto Frequency Command.</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> <p>00- SYSTEM PARAME</p> <ul style="list-style-type: none"> ◆ 20: Source of F ▶ 21: Source of OP 22: Stop Methods </div> <p>When this parameter is selected, press ENTER key to go to this parameter's setting menu.</p> <div style="border: 1px solid black; padding: 5px; margin-bottom: 5px;"> <p>00-20</p> <p style="text-align: center;">2</p> <p>Analog Input</p> <p>0~8 ADD</p> </div> <p>Use Up/Down key to choose a setting. For example: Choose "2 Analogue Input, then press the ENTER key.</p> <div style="border: 1px solid black; padding: 5px;"> <p>00-20</p> <p style="text-align: center;">END</p> <p>Analog Input</p> </div> <p>After pressing the ENTER key, an END will be displayed which means that the parameter setting is done.</p>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

2. Copy Parameter

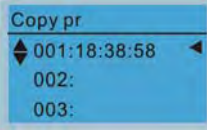


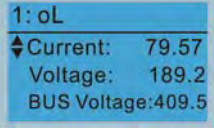
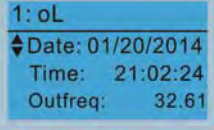
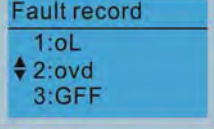
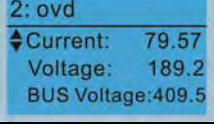
	<p>4 duplicates are provided The steps are shown in the example below. Example: Saved in the motor drive.</p>				
<p>Press ENTER key to go to 001~004: content storage</p>	<table border="1"> <tr> <td data-bbox="719 264 935 389"> </td> <td data-bbox="954 264 1497 380"> <p>1 Go to Copy Parameter 2 Select the parameter group which needs to be copied and press ENTER key.</p> </td> </tr> <tr> <td data-bbox="719 398 935 510"> </td> <td data-bbox="954 412 1497 510"> <p>1 Select 1: Save in the motor drive. 2. Press ENTER key to go to "Save in the motor drive" screen.</p> </td> </tr> </table>		<p>1 Go to Copy Parameter 2 Select the parameter group which needs to be copied and press ENTER key.</p>		<p>1 Select 1: Save in the motor drive. 2. Press ENTER key to go to "Save in the motor drive" screen.</p>
	<p>1 Go to Copy Parameter 2 Select the parameter group which needs to be copied and press ENTER key.</p>				
	<p>1 Select 1: Save in the motor drive. 2. Press ENTER key to go to "Save in the motor drive" screen.</p>				
	<table border="1"> <tr> <td data-bbox="719 528 935 654"> </td> <td data-bbox="954 591 1497 622"> <p>Begin to copy parameters until it is done.</p> </td> </tr> </table>		<p>Begin to copy parameters until it is done.</p>		
	<p>Begin to copy parameters until it is done.</p>				
	<table border="1"> <tr> <td data-bbox="719 663 935 779"> </td> <td data-bbox="954 689 1497 752"> <p>Once copying parameters is done, keypad will automatically be back to this screen.</p> </td> </tr> </table>		<p>Once copying parameters is done, keypad will automatically be back to this screen.</p>		
	<p>Once copying parameters is done, keypad will automatically be back to this screen.</p>				
	<p>Example: Saved in the keypad.</p>				
	<table border="1"> <tr> <td data-bbox="719 846 935 972"> </td> <td data-bbox="954 851 1497 972"> <p>1. Once copying parameters is done, keypad will automatically be back to this screen. 2. Select the parameter group which needs to be copied and press ENTER key.</p> </td> </tr> </table>		<p>1. Once copying parameters is done, keypad will automatically be back to this screen. 2. Select the parameter group which needs to be copied and press ENTER key.</p>		
	<p>1. Once copying parameters is done, keypad will automatically be back to this screen. 2. Select the parameter group which needs to be copied and press ENTER key.</p>				
	<table border="1"> <tr> <td data-bbox="719 990 935 1115"> </td> <td data-bbox="954 1025 1497 1088"> <p>Press ENTER key to go to "Save in the motor drive" screen.</p> </td> </tr> </table>		<p>Press ENTER key to go to "Save in the motor drive" screen.</p>		
	<p>Press ENTER key to go to "Save in the motor drive" screen.</p>				
	<table border="1"> <tr> <td data-bbox="719 1133 935 1258"> </td> <td data-bbox="954 1155 1497 1249"> <p>Use Up/Down key to select a symbol. Use Left/Right key to move the cursor to select a file name.</p> </td> </tr> </table>		<p>Use Up/Down key to select a symbol. Use Left/Right key to move the cursor to select a file name.</p>		
	<p>Use Up/Down key to select a symbol. Use Left/Right key to move the cursor to select a file name.</p>				
	<p>String & Symbol Table: !"#\$%&'()*+,-./0123456789:;<=>?@ABCDEFGHIJKLMN OPQRSTUVWXYZ [\] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y z { } ~</p>				
	<table border="1"> <tr> <td data-bbox="719 1447 935 1572"> </td> <td data-bbox="954 1482 1497 1545"> <p>Once the file name is confirmed, press ENTER key.</p> </td> </tr> </table>		<p>Once the file name is confirmed, press ENTER key.</p>		
	<p>Once the file name is confirmed, press ENTER key.</p>				
	<table border="1"> <tr> <td data-bbox="719 1581 935 1706"> </td> <td data-bbox="954 1639 1497 1671"> <p>To begin copying parameters until it is done.</p> </td> </tr> </table>		<p>To begin copying parameters until it is done.</p>		
	<p>To begin copying parameters until it is done.</p>				
	<table border="1"> <tr> <td data-bbox="719 1738 935 1863"> </td> <td data-bbox="954 1751 1497 1841"> <p>When copying parameters is completed, keypad will automatically be back to this screen.</p> </td> </tr> </table>		<p>When copying parameters is completed, keypad will automatically be back to this screen.</p>		
	<p>When copying parameters is completed, keypad will automatically be back to this screen.</p>				
	<table border="1"> <tr> <td data-bbox="719 1872 935 1998"> </td> <td data-bbox="954 1908 1497 1971"> <p>Press Right key to see the date of copying parameters.</p> </td> </tr> </table>		<p>Press Right key to see the date of copying parameters.</p>		
	<p>Press Right key to see the date of copying parameters.</p>				

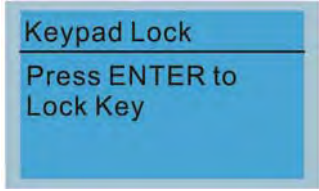
	 <p>Copy pr ◆ 001:18:38:58 ◀ 002: 003:</p>	<p>Press Right key to see the time of copying parameters.</p>
--	-----------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------

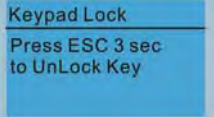3. Lock the Keypad






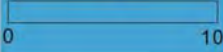
 <p>Press  to lock</p>	<p>Keypad Locked</p> <p>This function is used to lock the keypad. The main page would not display “keypad locked” when the keypad is locked, however it will display the message “please press ESC and then ENTER to unlock the keypad” when any key is pressed.</p>  <p>When the keypad is locked, the main screen doesn't display any status to show that.</p>  <p>Press any key on the keypad; a screen as shown in image on the left will be displayed.</p>  <p>If ESC key is not pressed, the keypad will automatically be back to this screen.</p>  <p>The keypad is still locked at this moment. By pressing any key, a screen as shown in the image on the left will still be displayed.</p>  <p>Press ESC for 3 seconds to unlock the keypad and the keypad will be back to this screen. Then each key on the keypad is functional.</p> <p>Turn off the power and turn on the power again will not lock keypad.</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

4. Fault Record










 <p>Press  to select.</p> <p>KPC-CE01 does not support this function.</p>	<p>Able to store 6 error code (Keypad V1.02 and previous versions) Able to store 20 error code(Keypad V1.0e3 and previous version) The most recent error record is shown as the first record. Select an error record to see its detail such as date, tme, frequency, current, voltage, DCBUS voltage)</p>  <p>Press Up/Down key to select an error record. After selecting an error code, press ENTER to see that error record's detail</p>  <p>Press Up/Down key to see an error record's detail such as date, time, frequency, current, voltage, DCBus voltage.</p>   <p>Press Up/Down key to select an error record. After selecting an error code, press ENTER to see that error record's detail</p>  <p>Press Up/Down key to see an error record's detail such as date, time, frequency, current, voltage, DCBus voltage.</p>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

	<p>2: ovd Date: 01/20/2014 Time: 21:02:24 Outfreq: 32.61</p> <p> NOTE</p> <p>Fault actions of AC motor drive are record and save to KPC-CC01. When KPC-CC01 is removed and apply to another AC motor drive, the previous fault records will not be deleted. The new fault records of the present AC motor drive will accumulate to KPC-CC01.</p>
--	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


5. Display Setup
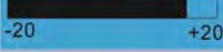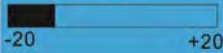
<p>Displ Setup ▼1:Contrast 2:Back-Light 3:Text Color</p> <p>Press  to setting menu.</p>	<p>1. Contrast</p> <p>Contrast +0  -20 +20</p> <p>Contrast +10  -20 +20</p> <p>Displ Setup ▼1:Contrast 2:Back-Light 3:Text Color</p> <p>Contrast -10  -20 +20</p> <p>Displ Setup ▼1:Contrast 2:Back-Light 3:Text Color</p> <p>2. Back-light</p> <p>Displ Setup 1:Contrast ◆2:Back-Light 3:Text Color</p> <p>Back-Light Min 5  0 10</p> <p>Back-Light Min 0  0 10</p> <p>Displ Setup 1:Contrast ◆2:Back-Light 3:Text Color</p>	<p>Use Up/Down key to adjust the setting value.</p> <p>After selecting a setting value. Press ENTER to see screen's display after contrast is adjusted to be +10.</p> <p>When the setting value is 0 Min, the back light will be steady on.</p> <p>Then press ENTER.</p> <p>After select a setting value Press ENTER to see screen's display result after contrast is adjusted to be -10.</p> <p>Press ENTER to go to Back Light Time Setting screnn.</p> <p>Use Up/Down key to adjust the setting value.</p> <p>When the setting value is 0 Min, the back light will be steady on.</p> <p>When the setting value is 10 Min, the backlight will be off in 10 minutes.</p>
------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

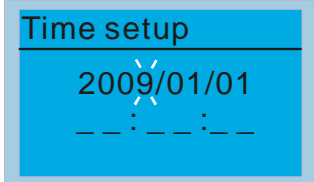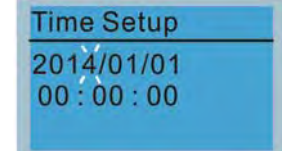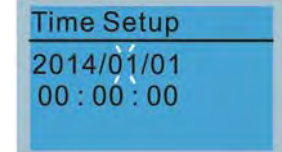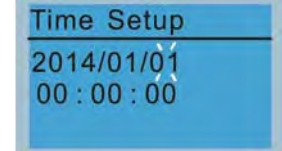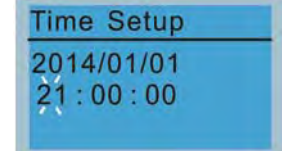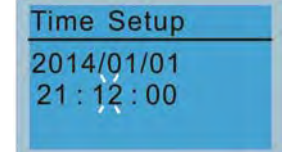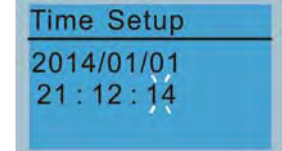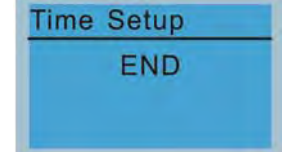


6. Time Setting

		<p>Use Up/Down key to set up Year</p>
<p>Use Left/Right key to select Year, Month, Day, Hour, Minute or Second to set up</p>		<p>Use Up/Down key to set up Month</p>
		<p>Use Up/Down key to set up day</p>
		<p>Use Up/Down key to set up hour</p>
		<p>Use Up/Down key to set up Minute</p>
		<p>Use Up/Down key to set up Second</p>
		<p>After setting up, press ENTER to confirm the setup.</p>
<p> NOTE When the digital keypad is removed, the time setting will be in standby status for 7 days. After this period, the time needs to be reset.</p>		

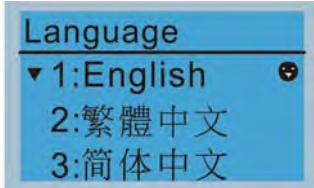

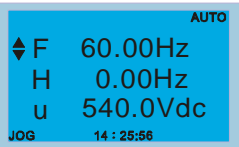
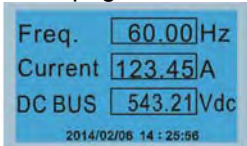
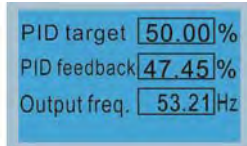
7. Language setup

	<p>Language setting option is displayed in the language of the user's choice. Language setting options:</p> <table border="0"> <tr> <td>1. English</td> <td>5.</td> </tr> <tr> <td>2. 繁體中文</td> <td>6. Espanol</td> </tr> <tr> <td>3. 简体中文</td> <td>7. Portugues</td> </tr> <tr> <td>4. Turkce</td> <td></td> </tr> </table>	1. English	5.	2. 繁體中文	6. Espanol	3. 简体中文	7. Portugues	4. Turkce	
1. English	5.								
2. 繁體中文	6. Espanol								
3. 简体中文	7. Portugues								
4. Turkce									
<p>Use Up/Down key to select language, than press ENTER.</p>									




8. Startup

<p>Start-up</p> <ul style="list-style-type: none"> ▼ 1.Default 1 ● 2.Default 2 3.User Define 	<p>1. Default 1 DELTA LOGO</p>  <p>2. Default 2 DELTA Text</p>  <p>3. User Defined: optional accessory is require (TPEditor & USB/RS-485 Communication Interface-IFD6530)</p> <p>Install an editing accessory would allow users to design their own start-up page.If editor accessory is not installed, “user defined” option will display a blank page.</p>  <p><u>USB/RS-485 Communication Interface-IFD6530</u> Please refer to Chapter 07 Optional Accessories for more detail.</p> <p><u>TPEditor</u> Go to Delta’s website to download TPEditor V1.30.6 or later versions. http://www.delta.com.tw/ch/product/em/download/download_main.asp?act=3&pid=1&cid=1&tpid=3</p>
--------------------------------------------------------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------



9. Mian Pge

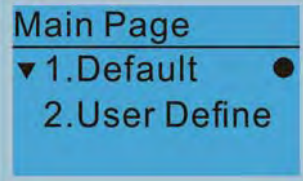 <p>Default picture and editable picture are available upon selection.</p> <p>Press  to select.</p>	<p>1. Default page</p>  <p>F 600.00Hz >>> H >>> A >>> U (circulate)</p> <p>2. User Defined: optional accessory is require (TPEditor & USB/RS-485 Communication Interface-IFD6530) Install an editing accessory would allow users to design their own start-up page.If editor accessory is not installed, "user defined" option will dispay a blank page.</p> <div style="display: flex; justify-content: space-around;">   </div> <p>USB/RS-485 Communication Interface-IFD6530 Please refer to Chapter 07 Optional Acessories for more detail.</p> <p>TPEditor Go to Delta's website to download TPEditor V1.30.6 or later versions. http://www.delta.com.tw/ch/product/em/download/download_main.asp?act=3&pid=1&cid=1&tpid=3</p>
-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

10. PC Link

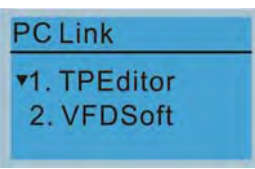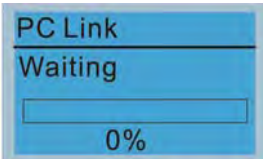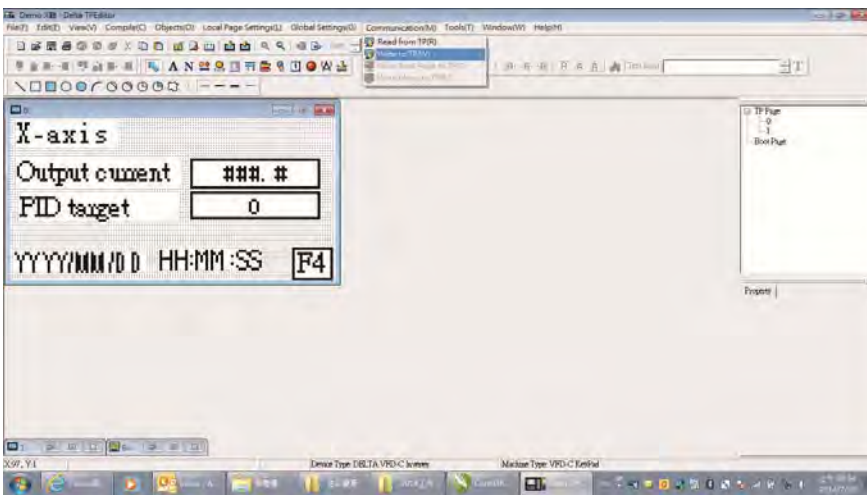	<p>1. TPEditor: This function allows users to connect the keypad to a computer then to download and edit user defined pages.</p> <div style="display: flex; align-items: center;">  <div style="margin-left: 20px;"> <p>Click ENTER to go to <Waiting to connect to PC></p> </div> </div> <p>In TPEditor, choose <Communication>, then choose "Write to HMI"</p> 
-------------------------------------------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


Choose <YES> in the <Confirm to Write> dialogue box.

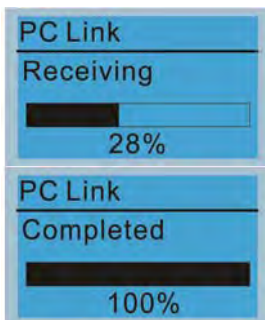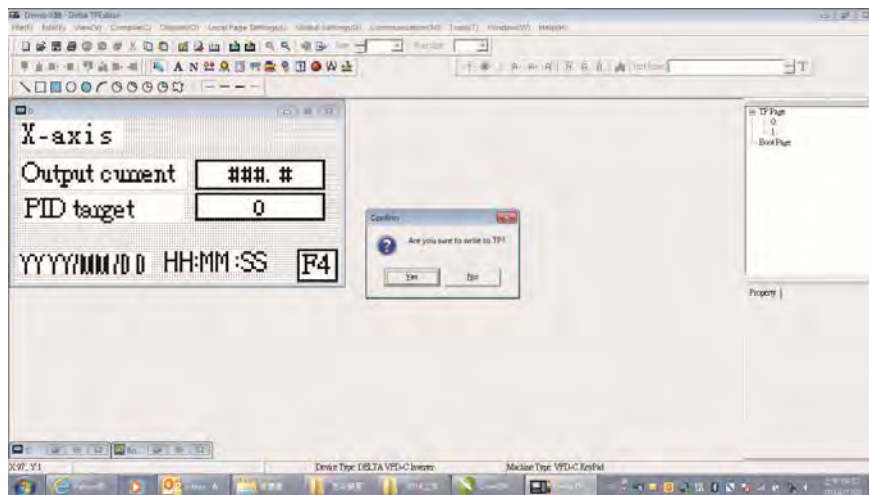

Start downloading pages to edit KPC-CC01.

Download completed

- VFDSOft: this function allows user to link to the VFDSOft Operating software then to upload data
Copy parameter 1~4 in KPC-CC01
Connect KPC-CC01 to a computer

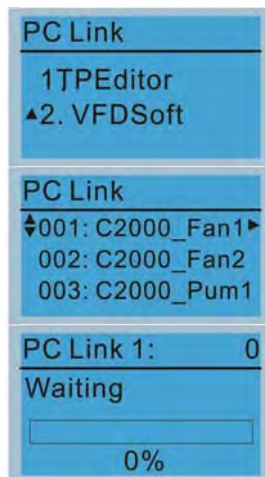


Start downloading pages to edit to KPC-CC01


Use Up/Down key to select a parameter group to upload to VFDSOft. Press ENTER

Waiting to connect to PC



Open VFDSOft, choose <Parameter Manager function>

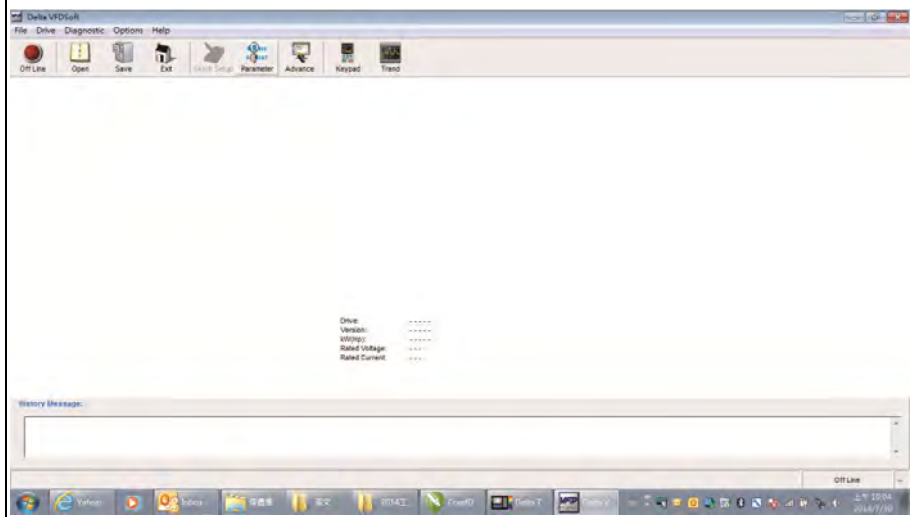


In Parameter Manager, choose <Load parameter table from KPC-CC01>

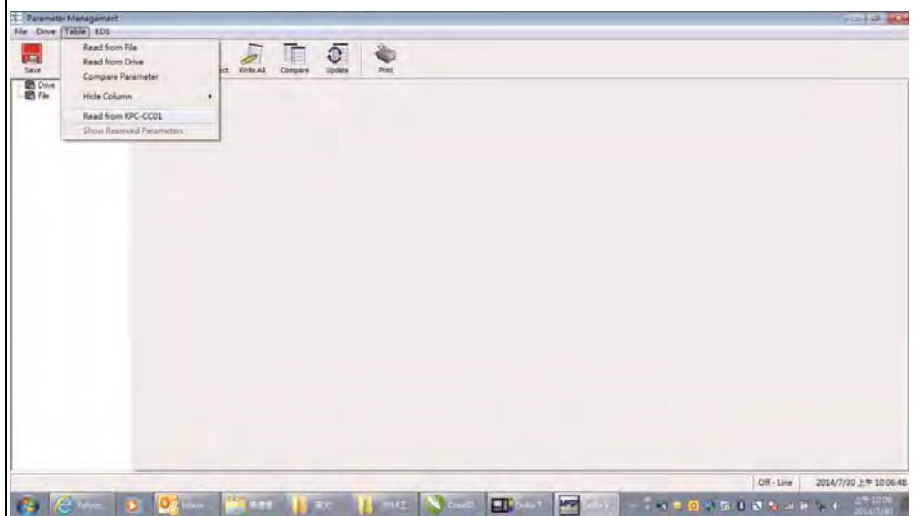

Choose the right communication port and click OK

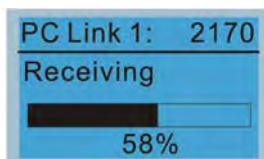
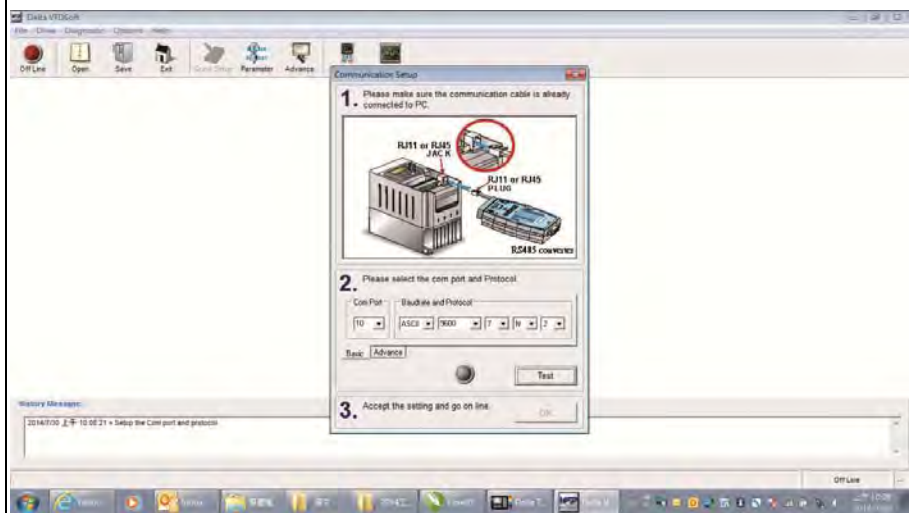


Start to upload parameters to VFDSOft

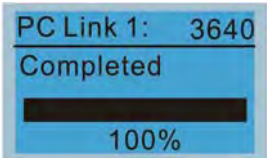	 <p>Uploading parameter is completed</p> <p>Before using the user defined starting screen and user defined main screen, the starting screen setup and the main screen setup have to be preset as user defined.</p> <p>If the user defined page are not downloaded to KPC-CC01, the starting screen and the main screen will be blank.</p>
--	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Other Display

When fault occur, the menu will display:

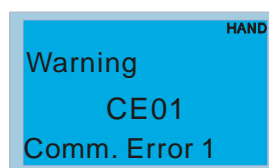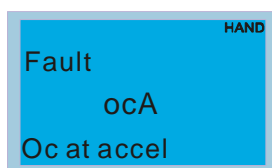

1. Press ENTER and start RESET. If still no response, please contact local distributor or return to the factory. To view the fault DC BUS voltage, output current and output voltage, press "MENU"→"Fault Record".
2. Press ENTER again, if the screen returns to main page, the fault is clear.
3. When fault or warning message appears, backlight LED will blinks until the fault or the warning is cleared.






Optional accessory: RJ45 Extension Lead for Digital Keypad

Part No.	Description
CBC-K3FT	RJ45 extension lead, 3 feet (approximately 0.9m)
CBC-K5FT	RJ45 extension lead, 5 feet (approximately 1.5 m)
CBC-K7FT	RJ45 extension lead, 7 feet (approximately 2.1 m)
CBC-K10FT	RJ45 extension lead, 10 feet (approximately 3 m)
CBC-K16FT	RJ45 extension lead, 16 feet (approximately 4.9 m)







Note: When you need to buy communication cables, buy non-shielded , 24 AWG, 4 twisted pair, 100 ohms communication cables.

9-5 Digital Keypad KPC-CC01 Fault Codes and Descriptions










Fault Codes:

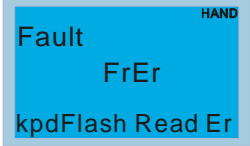
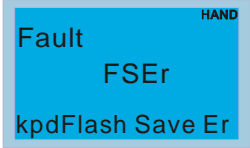
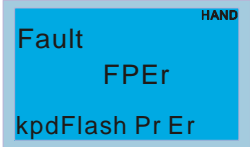
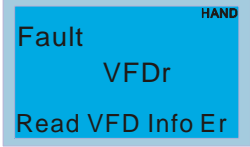
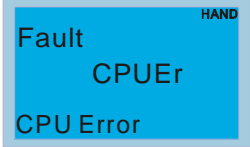
LCM Display *	Description	Corrective Actions
	Keypad flash memory read error	<p>An error has occurred on keypad's flash memory.</p> <ol style="list-style-type: none"> 1. Press RESET on the keypad to clear errors. 2. Verify what kind of error has occurred on keypad's flash memory. 3. Shut down the system, wait for ten minutes, and then power on again the system. <p>If none of the solution above works, contact your authorized local dealer.</p>
	Keypad flash memory save error	<p>An error has occurred on keypad's flash memory.</p> <ol style="list-style-type: none"> 1. Press RESET on the keypad to clear errors. 2. Press RESET on the keypad to clear errors. 3. Shut down the system, wait for ten minutes, and then power on again the system. <p>If none of the solution above works, contact your authorized local dealer.</p>
	Keypad flash memory parameter error	<p>Errors occurred on parameters of factory setting. It might be caused by firmware update.</p> <ol style="list-style-type: none"> 1. Press RESET on the keypad to clear errors. 2. Verify if there's any problem on Flash IC. 3. Shut down the system, wait for ten minutes, and then power on again the system. <p>If none of the solution above works, contact your local authorized dealer.</p>
	Keypad flash memory read AC drive data error	<p>Keypad can't read any data sent from VFD.</p> <ol style="list-style-type: none"> 1. Verify if the keypad is properly connect to the motor drive by a communication cable such as RJ-45. 2. Press RESET on the keypad to clear errors. 3. Shut down the system, wait for ten minutes, and then power on again the system. <p>If none of the solution above works, contact your local authorized dealer.</p>
	and then power on again the system.	<p>A Serious error has occurred on keypad's CPU.</p> <ol style="list-style-type: none"> 1. Verify if there's any problems on CPU clock? 2. Verify if there's any problem on Flash IC? 3. Verify if there's any problem on RTC IC? 4. Verify if the communication quality of the RS485 is good? 5. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.

Warning Codes:

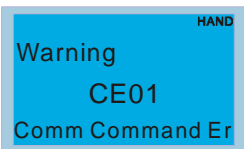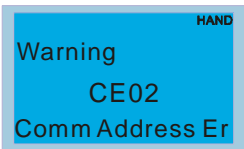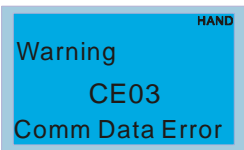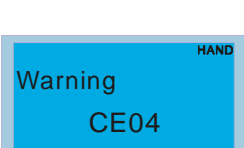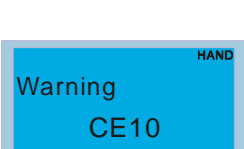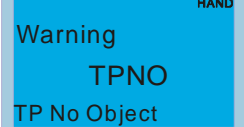LCM Display *	Description	Corrective Actions
 <p>Warning CE01 Comm Command Er</p>	Modbus function code error	<p>Motor drive doesn't accept the communication command sent from keypad.</p> <ol style="list-style-type: none"> 1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45. 2. Press RESET on the keypad to clear errors. <p>If none of the solution above works, contact your local authorized dealer.</p>
 <p>Warning CE02 Comm Address Er</p>	Modbus data address error	<p>Motor rive doesn't accept keypad's communication address.</p> <ol style="list-style-type: none"> 1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45. 2. Press RESET on the keypad to clear errors. <p>If none of the solution above works, contact your local authorized dealer.</p>
 <p>Warning CE03 Comm Data Error</p>	Modbus data value error	<p>Motor drive doesn't accept the communication data sent from keypad.</p> <ol style="list-style-type: none"> 1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45. 2. Press RESET on the keypad to clear errors. <p>If none of the solution above works, contact your local authorized dealer.</p>
 <p>Warning CE04 Comm Slave Error</p>	Modbus slave drive error	<p>Motor drive cannot process the communication command sent from keypad.</p> <ol style="list-style-type: none"> 1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45. 2. Press RESET on the keypad to clear errors. 3. Shut down the system, wait for ten minutes, and then power on again the system. <p>If none of the solution above works, contact your local authorized dealer.</p>
 <p>Warning CE10 KpdComm Time Out</p>	Modbus transmission time-Out	<p>Motor drive doesn't respond to the communication command sent from keypad.</p> <ol style="list-style-type: none"> 1. Verify if the keypad is properly connected to the motor drive on the communication contact by a communication cable such as RJ-45. 2. Press RESET on the keypad to clear errors. 3. Shut down the system, wait for ten minutes, and then power on again the system. <p>If none of the solution above works, contact your local authorized dealer.</p>
 <p>Warning TPNO TP No Object</p>	Object not supported by TP Editor	<p>Keypad's TP Editor uses unsupported object.</p> <ol style="list-style-type: none"> 1. Verify how the TP editor should use that object. Delete unsupported object and unsupported setting. 2. Reedit the TP editor and then download it. <p>If none of the solution above works, contact your local authorized dealer.</p>

File Copy Setting Fault Description

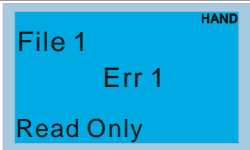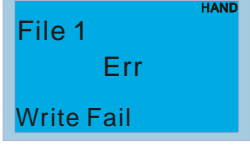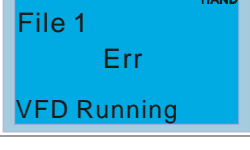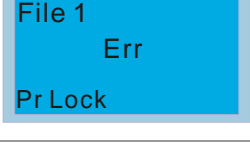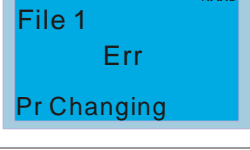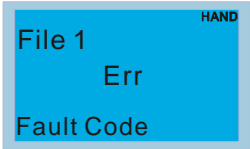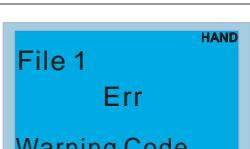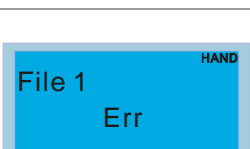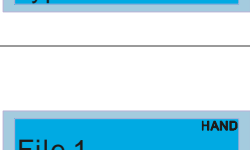LCM Display *	Description	Corrective Actions
	Parameter and file are read only	The property of the parameter/file is read-only and cannot be written to. 1. Verify the specification on the user manual. If the solution above doesn't work, contact your local authorized dealer.
	Fail to write parameter and file	An error occurred while write to a parameter/file. 1. Verify if there's any problem on the Flash IC. 2. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above work, contact your local authorized dealer.
	AC drive is in operating status	A setting cannot be made while motor drive is in operation. 1. Verify if the drive is not in operation. If the solution above doesn't work, contact your local authorized dealer.
	AC drive parameter is locked	A setting cannot be made because a parameter is locked. 1. Verify if the parameter is locked or not. If it is locked, unlock it and try to set up the parameter again. If the solution above doesn't work, contact your local authorized dealer.
	AC drive parameter changing	A setting cannot be made because a parameter is being modified. 1. Verify if the parameter is being modified. If it is not being modified, try to set up that parameter again. If the solution above doesn't work, contact your local authorized dealer.
	Fault code	A setting cannot be made because an error has occurred on the motor drive. 1. Verify if there's any error occurred on the motor drive. If there isn't any error, try to make the setting again. If the solution above doesn't work, contact your local authorized dealer.
	Warning code	A setting cannot be made because of a warning message given to the motor drive. 1. Verify if there's any warning message given to the motor drive. If the solution above doesn't work, contact your local authorized dealer.
	File type dismatch	Data need to be copied are not same type, so the setting cannot be made. 1. Verify if the products' serial numbers need to be copied fall in the category. If they are in the same category, try to make the setting again. If the solution above doesn't work, contact your authorized dealer.
	File is locked with password	A setting cannot be made, because some data are locked. 1. Verify if the data are unlocked or able to be unlocked. If the data are unlocked, try to make the setting again. 2. Shut down the system, wait for ten minutes, and then power on again the system. If none of the solution above works, contact your local authorized dealer.

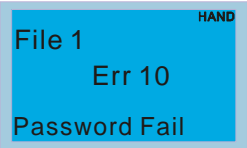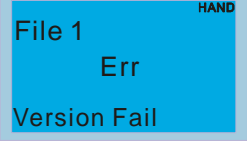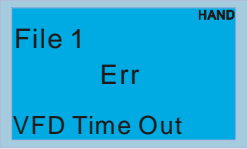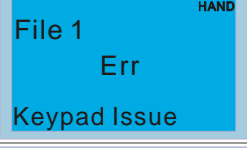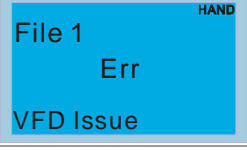LCM Display *	Description	Corrective Actions
	File version mismatch	<p>A setting cannot be made because the password is incorrect.</p> <ol style="list-style-type: none"> 1. Verify if the password is correct. If the password is correct, try to make the setting again. 2. Shut down the system, wait for ten minutes, and then power on again the system. <p>If none of the solution above works, contact your local authorized dealer.</p>
	AC drive copy function time-out	<p>A setting cannot be made, because the version of the data is incorrect.</p> <ol style="list-style-type: none"> 1. Verify if the version of the data matches the motor drive. If it matches, try to make the setting again. <p>If none of the solution above works, contact your local authorized dealer.</p>
	Other keypad error	<p>A setting cannot be made, because data copying timeout expired.</p> <ol style="list-style-type: none"> 1. Redo data copying. 2. Verify if copying data is authorized. If it is authorized, try again to copy data. 3. Shut down the system, wait for ten minutes, and then power on again the system. <p>If none of the solution above works, contact your local authorized dealer.</p>
	Other AC drive error	<p>This setting cannot be made, due to other keypad issues. (Reserved functions)</p> <p>If such error occurred, contact your local authorized dealer.</p>
	File is locked with password	<p>This setting cannot be made, due to other motor drive issues. (Reserved functions).</p> <p>If such error occurred, contact your local authorized dealer.</p>

※ The content in this chapter only applies on V1.01 and above of KPC-CC01 keypad.


9-6 TPEditor Installation

TPEditor can edit up to 256 HMI (Human-Machine Interface) pages with a total storage capacity of 256kb. Each page can edit 50 normal objects and 10 communication objects.


- 1) TPEditor: Setup & Basic Functions
 1. Run TPEditor version 1.60 or later.



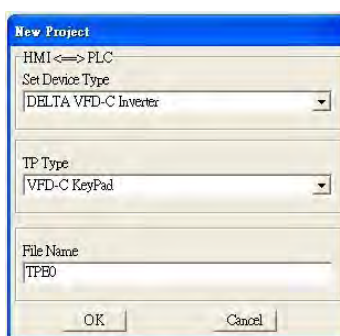

2. Go to File(F)→Click on New. The Window below will pop up. At the device type, click on the drop down menu and choose DELTA VFD-C Inverter. At the TP type, click on the drop down menu and choose VFD-C KeyPad. As for File Name, enter TPE0. Now click on OK.




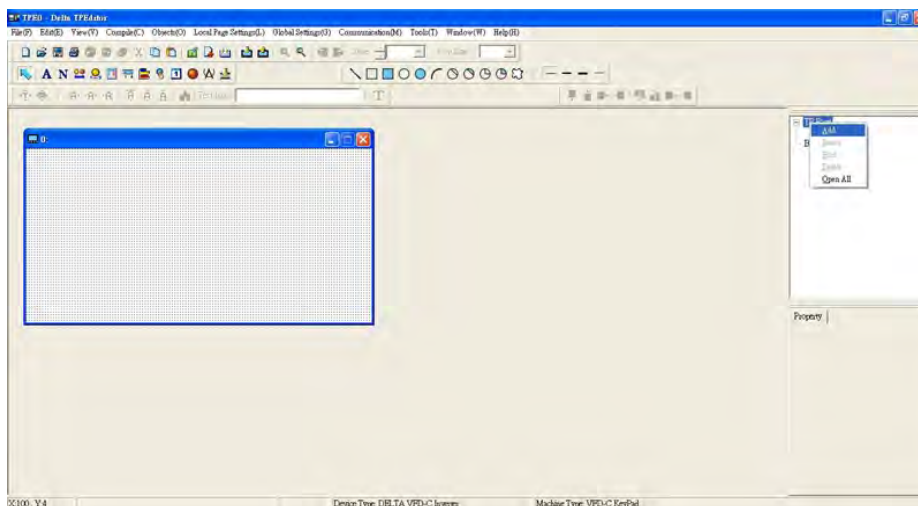

3. You are now at the designing page. Go to Edit (E)→Click on Add a New Page (A) or go to the TP page on the upper right side, right click once on TP page and choose Add to increase one more page for editing. The current firmware of Keypad is version1.00 and can support up to 4 pages.




4. Edit Startup Page

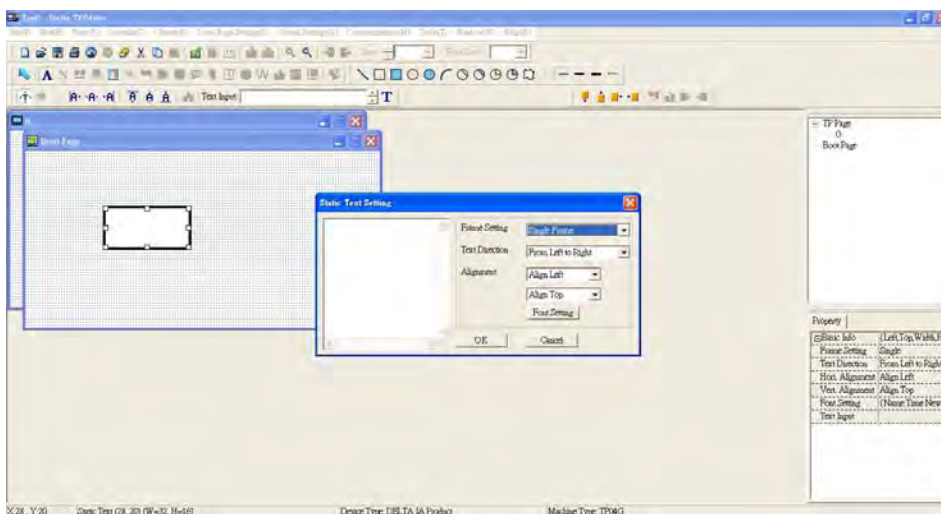
5. Static Text  . Open a blank page, click once on this button  , and then double click on that blank page. The following windows will pop up.




6. Static Bitmap  → Open a blank page, then click once on this button  and then double click on that blank page. The following window will pop up.

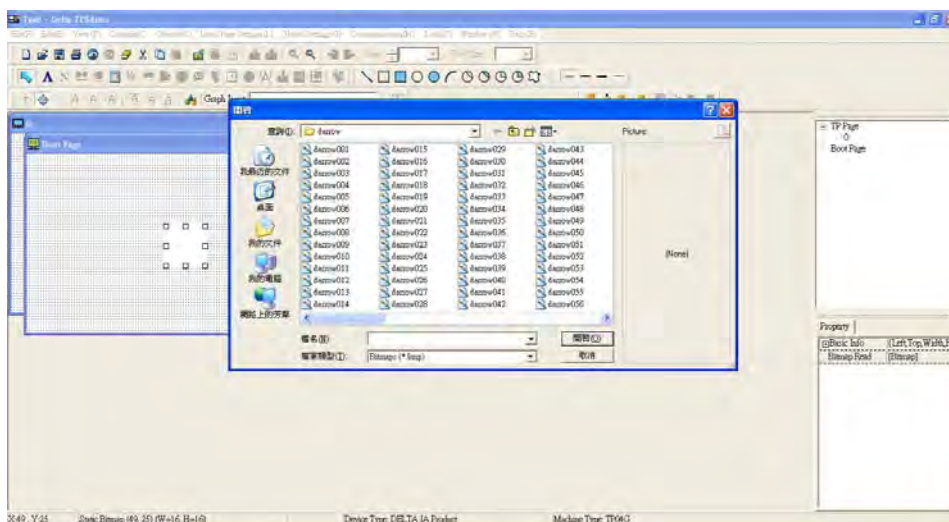

Please note that Static Bitmap setting support only images in BMP format. Now choose a image that you need and click open, then that image will appear in the Static Bitmap window.

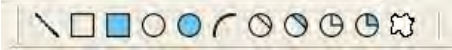7. Geometric Bitmap  → As shown in the picture on the left side, there are 11 kinds of geometric bitmap to choose. Open a new blank page then click once on a geometric bitmap icon that you need. Then drag that icon and enlarge it to the size that you need on that blank page.



- Finish editing the keypad starting screen and select **Communication>Input User Defined Keypad Starting Screen**.

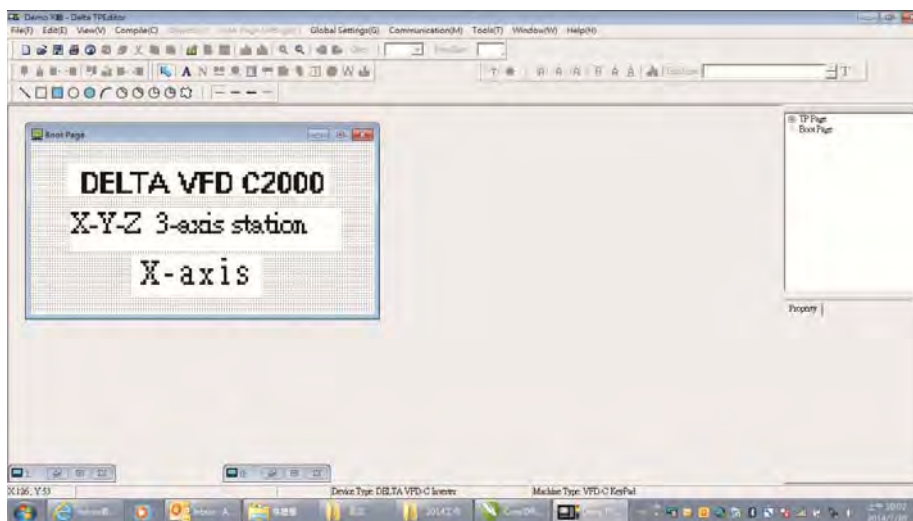

- Downloading setting: Go to Tool > Communication. Set up communication port and speed of IFD6530.
- Only three speed selections are available: 9600 bps, 19200 bps and 38400 bps.




- When a dialogue box displayed on the screen asking to confirm writing or not, press buttons on the keypad to go to MENU, select PC LINK and then press ENTER and wait for few seconds. Then select YES on the screen to start downloading.

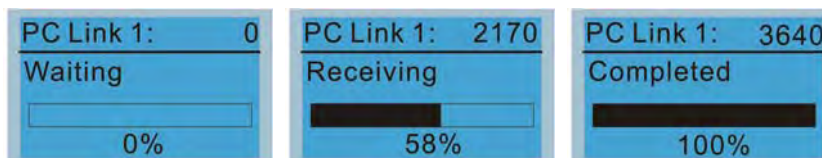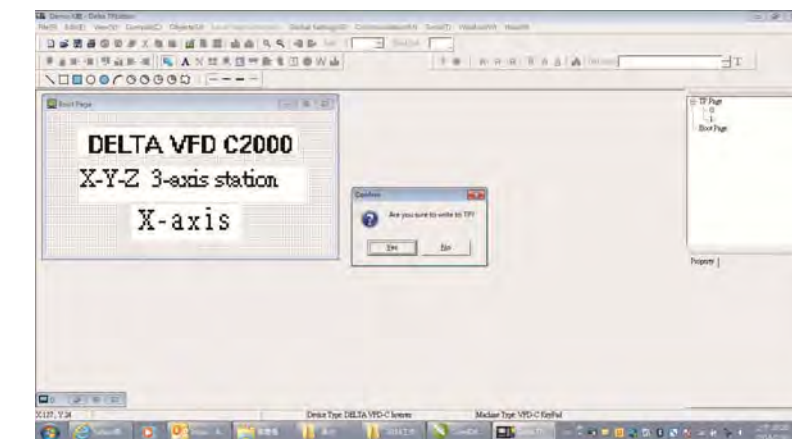

2) Edit Main Page & Example of Download


1. Go to editing page, select Edit>Add one page or press the button ADD on the right hand side of the HMI page to increase number of pages to edit. This keypad currently support up to 256 pages.

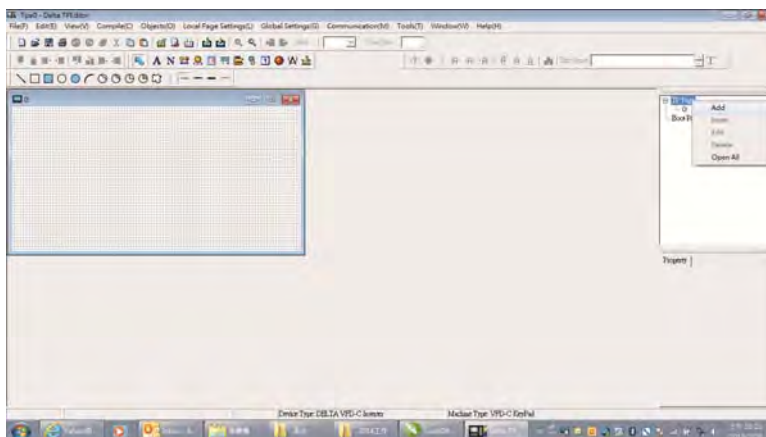

2. On the bottom right-hand corner of the HMI, click on a page number to edit or go to VIEW >HMI page to start editing main page. As shown in the image, the following objects are available. From left to right: Static Text, ASCII Display, Static Bitmap, Scale, Bar Graph, Button, Clock Display, Multi-state bit map, Units, Numeric Input and 11 geometric bitmaps and lines of different width. The application of Static Text, Static Bitmap, and geometric bitmap is the same as the editing startup page.



3. Numeric/ASCII Display : To add a Numeric/ASCII Display object to a screen, double click on the object to set up Related Devices, Frame Setting , Fonts and Alignment.

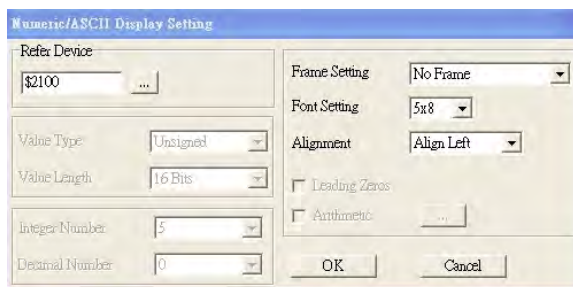

Related Device: Choose the VFD Communication Port that you need, if you want to read output frequency (H), set the VFD Communication Port to \$2202. For other values, please refer to ACMD ModBus Comm Address List.





4. Scale Setting  : On the Tool Bar, click on this  for Scale Setting. You can also edit Scale Setting in the Property Window on the right hand side of your computer screen.



- Scale Position: Click on the drop down list to choose which position that you need to place a scale.
- Scale Side: Click on the drop down list to choose if you want to number your scale from smaller number to bigger number or from big to small. Click OK to accept this setting or click Cancel to abort.
- Font Setting: Click on the drop down list to choose the Font setting that you need then click OK to accept the setting or click Cancel to abort.
- Value Length: Click on the drop down to choose 16bits or 32 bits. Then click OK to accept the setting or click Cancel to abort.
- Main Scale & Sub Scale: In order to divide the whole scale into equal parts, key in the numbers of your choices for main scale and sub scale.
- Maximum value & Minimum Value are the numbers on the two ends of a scale. They can be negative numbers. But the values allowed to be input are limited by the length of value. For example, when the length of value is set to **be hexadecimal**, the maximum and the minimum value cannot be input as -4000.


Follow the Scale setting mentioned above; you will have a scale as shown below.

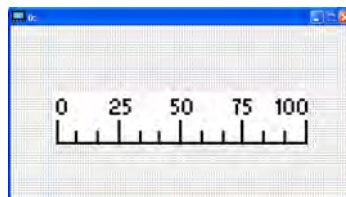


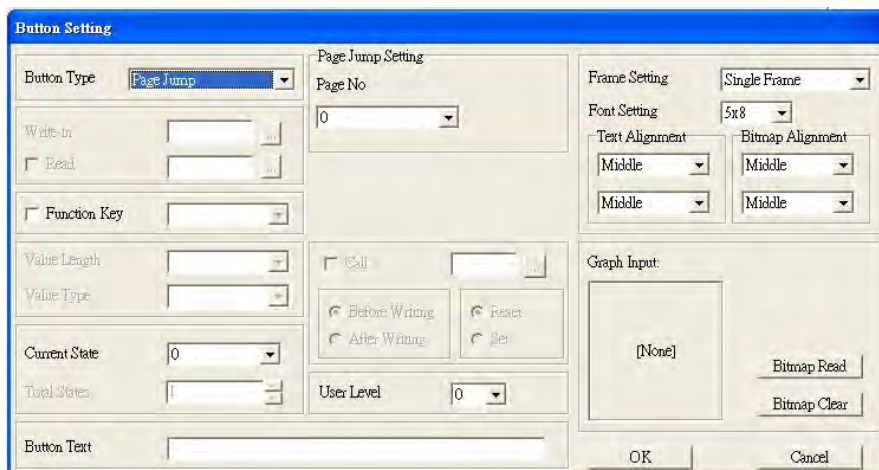
5. Bar Graph setting  :



- Related Device: Choose the VFD Communication Port that you need.
- Direction Setting: Click on the drop down menu to choose one of the following directions: From Bottom to Top, From Top to Bottom, From Left to Right or From Right to Left.
- Maximum Value & Minimum Value: They define the range covered by the maximum value and minimum value. If a value is smaller than or equal to the minimum value, then the bar graph will be blank. If a value is bigger or equal to the maximum value, then the bar graph will be full. If a value is between minimum and maximum value, then the bar graph will be filled proportionally.

6. Button  : Currently this function only allows the Keypad to switch pages, other functions are not yet available. Text input function and Image inserted functions are not yet supported.


Double click on  to open set up window.



<Button Type> allows users set up buttons' functions. <Page Jump> and <Constant Setting> are the only two currently supported functions.

A [Page Jump] function setting


- Page Jump setting: After you choose the Page Jump function in the drop down list, you will see this Page Jump Setting Menu
- <Function Key> allows you to assign functions to the following keys on the KPC-CC01 keypad: F1, F2, F3, F4, Up, Down, Left and Right. Please note that the Up and Down keys are locked by TPEditor. These two keys cannot be programmed. If you want to program Up and Down keys, go to Tool→Function Key Settings (F)→Re-Define Up/Down Key(R).

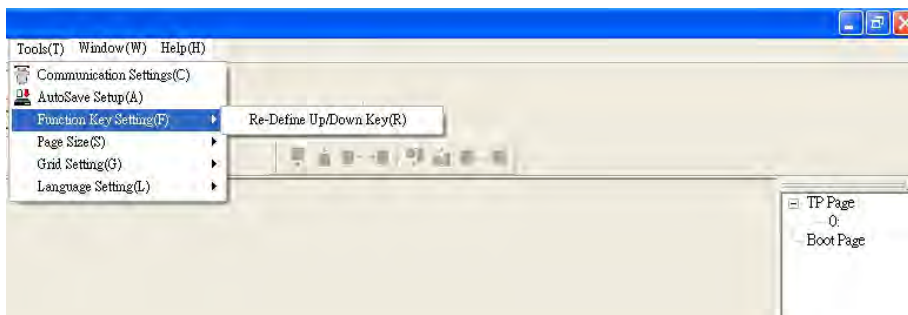


- Button Text: This function allows user to name buttons. For example, key in <Next Page> in the empty space, a button will have the wording <Next Page> displayed on it.


B [Constant setting] function


This function is to set up the memory address' value of the VFD or PLC. When pressing the <function button> set up in before, a value will be written to the memory address of the <Constant Setting>. This function can be used as initializing a variable.

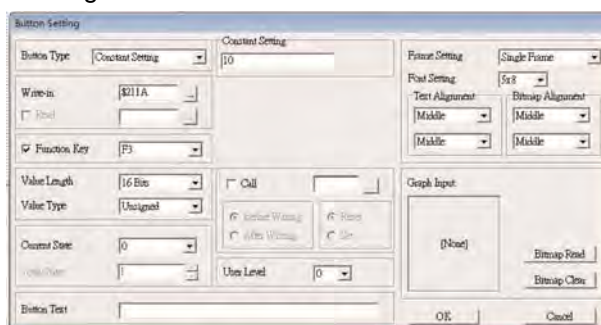


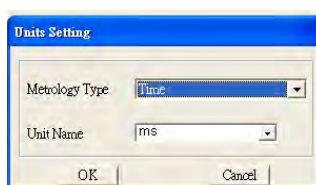
7. Clock Display Setting  : The setup window of the Clock Display is shown as the image below. Time, Day or Date can be displayed on the keypad.
Open a new file and click once in that window, you will see the following
In the clock display setting, you can choose to display Time, Day or Date on the Keypad. To adjust time, go to #9 on the Keypad's menu. You can also adjust Frame Setting, Font Setting and Alignment.



8. Multi-state bitmap  : The setup window of the multi-state is shown as the image below. This object reads the bit's property value of the PLC. It defines what image or wording is when this bit is 0 or when this bit is 1. Set the initial status to be 0 or 1 to define the displayed image or wording.

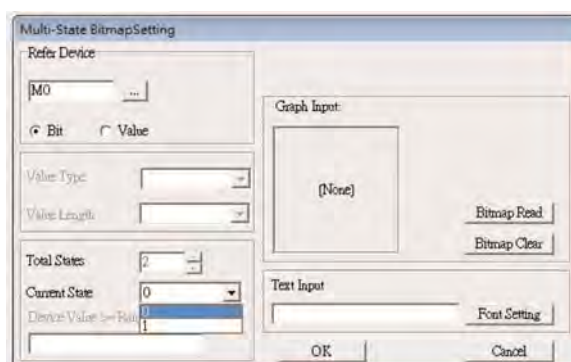


9. Unit Measurement  : Click once on this Button:
Open a new file and double click on that window, you will see the following




Choose from the drop down list the Metrology and the Unity Name that you need.
As for Metrology, you have the following choices Length, Square Measure, Volume/Solid Measure, Weight, Speed, Time and Temperature. The unit name changes automatically when you change metrology type.

10. Numeric Input Setting

This menu allows you to provide parameters or communication ports and to input numbers.

Click once on this button .

Open a new file and double click on that window, you will see the following:


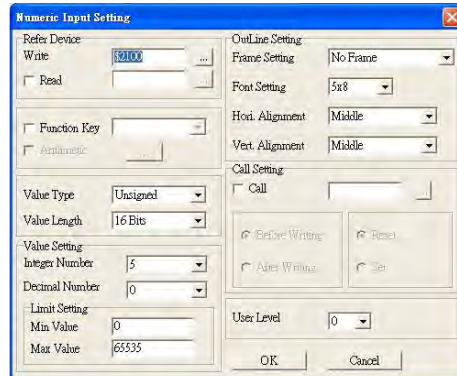


- Related Device: There are two blank spaces to fill in, one is <Write> and another one is <Read>. Input the numbers that you want to display and the corresponding numbers of a parameter and that of a communication port. For example, input 012C to Read and Write Parameter P01-44.
- OutLine Setting: The Frame setting, Font setting, Vertical Alignment and Horizontal Alignment are the same as mentioned before. Click on the drop down menu and choose the setting that you need.
- Function key: The setting here allows you to program keys on the keypad. Press the key on the menu then the corresponding key on the keypad will start to blink, then press Enter to confirm the setting.
- Value Type & Value Length: These two factors influence the range of the Minimum and Maximum Value of the Limit Setting. Please note that the corresponding supporting values for C2000 have to be 16bits. The 32bits values are not supported.
- Value Setting: This part is set automatically by the keypad itself.
- Limit Setting: Input the range the security setting here.
- For example, if you set Function Key as F1, Minimum Value as 0 and Maximum Value as 4, then press F1 on Keypad Then you can press Up and Down key on the keypad to increase or decrease the value. Press Enter Key on the keypad to confirm your setting. You can also go to parameter table 01-44 to verify if your input correctly the value.

11. Download TP Page : Press Up or Down key on the keypad until you reach #13 PC Link.


Then press Enter on the keypad and you will see the word "Waiting" on keypad's screen. Now choose a page that you have created then go to Communication (M)→Write to TP(W) to start downloading the page to the keypad

When you see the word Completed on the keypad's screen, that means the download is done. Then you can press ESC on the keypad to go back to the menu of the keypad.

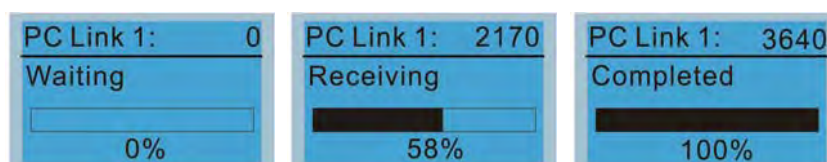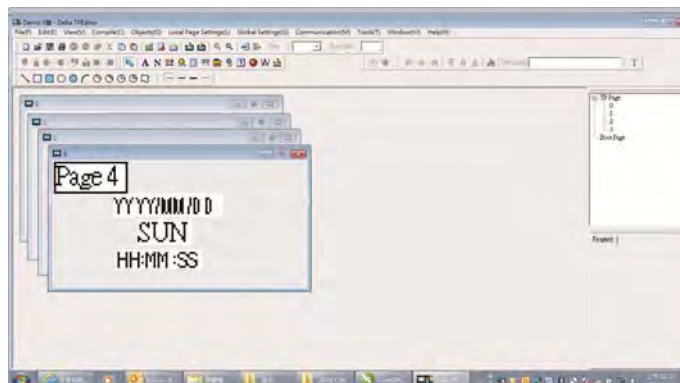


3) Edit Main Page

1. On the bottom right-hand corner of the HMI, click on a page number to edit or go to VIEW >HMI page to start editing main page. As shown in the image, the following objects are available. From left to right: Static Text, ASCII Display, Static Bitmap, Scale, Bar Graph, Button, Clock Display, Multi-state bit map, Units, Numeric Input and 11 geometric bitmaps and lines of different width. The application of Static Text, Static Bitmap, and geometric bitmap is the same as the editing startup page.

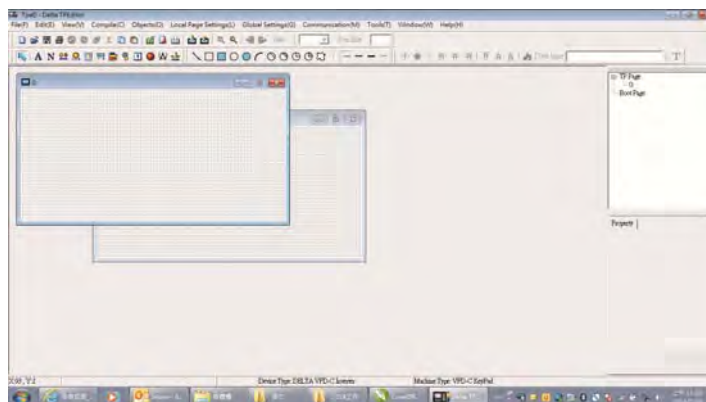

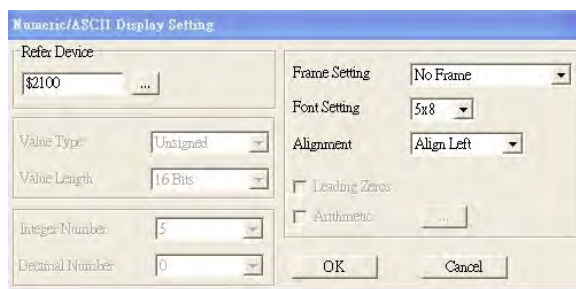

2. Numeric/ASCII Display : To add a Numeric/ASCII Display object to a screen, double click on the object to set up Related Devices, Frame Setting , Fonts and Alignment.



Related Device: Choose the VFD Communication Port that you need, if you want to read output frequency (H), set the VFD Communication Port to \$2202. For other values, please refer to ACMD ModBus Comm Address List.





3. Scale Setting  : On the Tool Bar, click on this  for Scale Setting. You can also edit Scale Setting in the Property Window on the right hand side of your computer screen.




- i. Scale Position: Click on the drop down list to choose which position that you need to place a scale.
- ii. Scale Side: Click on the drop down list to choose if you want to number your scale from smaller number to bigger number or from big to small. Click OK to accept this setting or click Cancel to abort.
- iii. Font Setting: Click on the drop down list to choose the Font setting that you need then click OK to accept the setting or click Cancel to abort.
- iv. Value Length: Click on the drop down to choose 16bits or 32 bits. Then click OK to accept the setting or click Cancel to abort.
- v. Main Scale & Sub Scale: In order to divide the whole scale into equal parts, key in the numbers of your choices for main scale and sub scale.
- vi. Maximum value & Minimum Value are the numbers on the two ends of a scale. They can be negative numbers. But the values allowed to be input are limited by the length of value. For example, when the length of value is set to **be hexadecimal**, the maximum and the minimum value cannot be input as -4000.


Follow the Scale setting mentioned above; you will have a scale as shown below.

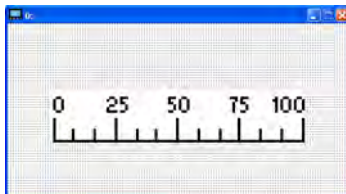


4. Bar Graph setting  :

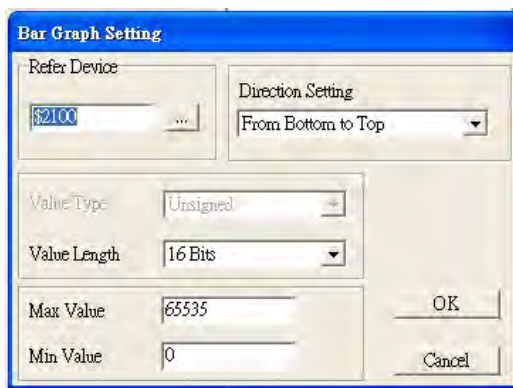

- i. Related Device: Choose the VFD Communication Port that you need.
- ii. Direction Setting: Click on the drop down menu to choose one of the following directions: From Bottom to Top, From Top to Bottom, From Left to Right or From Right to Left.
- iii. Maximum Value & Minimum Value: They define the range covered by the maximum value and minimum value. If a value is smaller than or equal to the minimum value, then the bar graph will be blank. If a value is bigger or equal to the maximum value, then the bar graph will be full. If a value is between minimum and maximum value, then the bar graph will be filled proportionally.

5. Button  : Currently this function only allows the Keypad to switch pages, other functions are not yet available. Text input function and Image inserted functions are not yet supported.


Double click on  to open set up window.



<Button Type> allows users set up buttons' functions. <Page Jump> and <Constant Setting> are the only two currently supported functions.

A [Page Jump] function setting


- Page Jump setting: After you choose the Page Jump function in the drop down list, you will see this Page Jump Setting Menu
- <Function Key> allows you to assign functions to the following keys on the KPC-CC01 keypad: F1, F2, F3, F4, Up, Down, Left and Right. Please note that the Up and Down keys are locked by TPEditor. These two keys cannot be programmed. If you want to program Up and Down keys, go to Tool→Function Key Settings (F)→Re-Define Up/Down Key(R).

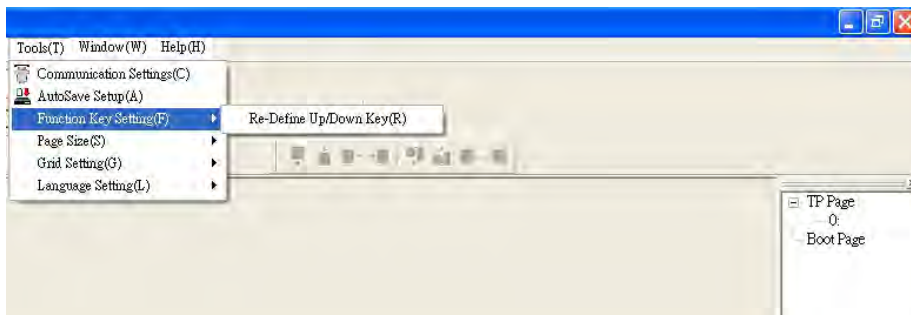

- Button Text: This function allows user to name buttons. For example, key in <Next Page> in the empty space, a button will have the wording <Next Page> displayed on it.

B [Constant setting] function

This function is to set up the memory address' value of the VFD or PLC. When pressing the <function button> set up in before, a value will be written to the memory address of the <Constant Setting>. This function can be used as initializing a variable.

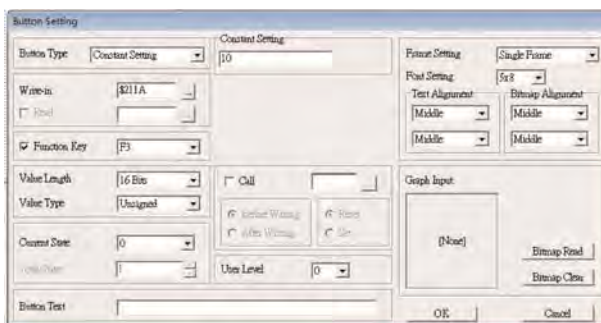


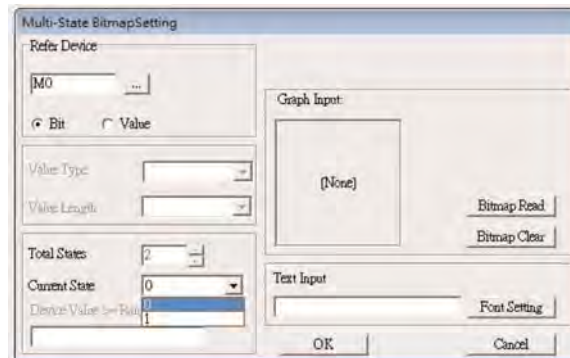
11. Clock Display Setting **1**: The setup window of the Clock Display is shown as the image below. Time, Day or Date can be displayed on the keypad.


Open a new file and click once in that window, you will see the following


In the clock display setting, you can choose to display Time, Day or Date on the Keypad. To adjust time, go to #9 on the Keypad's menu. You can also adjust Frame Setting, Font Setting and Alignment.





12. Multi-state bitmap : The setup window of the multi-state is shown as the image below. This object reads the bit's property value of the PLC. It defines what image or wording is when this bit is 0 or when this bit is 1. Set the initial status to be 0 or 1 to define the displayed image or wording.

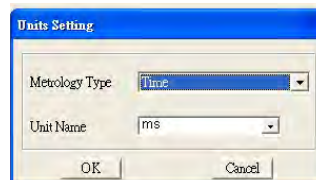


13. Unit Measurement : Click once on this Button:
Open a new file and double click on that window, you will see the following



Choose from the drop down list the Metrology and the Unity Name that you need. As for Metrology, you have the following choices Length, Square Measure, Volume/Solid Measure, Weight, Speed, Time and Temperature. The unit name changes automatically when you change metrology type.

14. Numeric Input Setting :
This menu allows you to provide parameters or communication ports and to input numbers.
Click once on this button .
Open a new file and double click on that window, you will see the following:

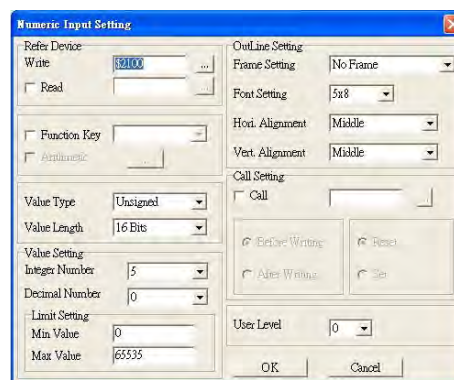





- h. Related Device: There are two blank spaces to fill in, one is <Write> and another one is <Read>. Input the numbers that you want to display and the corresponding numbers of a parameter and that of a communication port. For example, input 012C to Read and Write Parameter P01-44.
- i. OutLine Setting: The Frame setting, Font setting, Vertical Alignment and Horizontal Alignment are the same as mentioned before. Click on the drop down menu and choose the setting that you need.
- j. Function key: The setting here allows you to program keys on the keypad. Press the key on the menu then the corresponding key on the keypad will start to blink, then press Enter to confirm the setting.
- k. Value Type & Value Length: These two factors influence the range of the Minimum and Maximum Value of the Limit Setting. Please note that the corresponding supporting values for C2000 have to be 16bits. The 32bits values are not supported.
- l. Value Setting: This part is set automatically by the keypad itself.

- m. Limit Setting: Input the range the security setting here.
- n. For example, if you set Function Key as F1, Minimum Value as 0 and Maximum Value as 4, then press F1 on Keypad Then you can press Up and Down key on the keypad to increase or decrease the value. Press Enter Key on the keypad to confirm your setting. You can also go to parameter table 01-44 to verify if your input correctly the value.

15. Download TP Page : Press Up or Down key on the keypad until you reach #13 PC Link.


Then press Enter on the keypad and you will see the word "Waiting" on keypad's screen. Now choose a page that you have created then go to Communication (M)→Write to TP(W) to start downloading the page to the keypad

When you see the word Completed on the keypad's screen, that means the download is done. Then you can press ESC on the keypad to go back to the menu of the keypad.

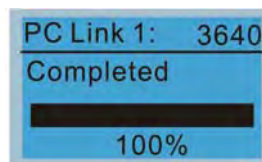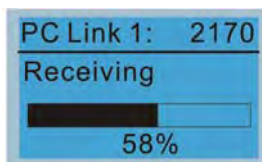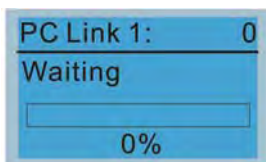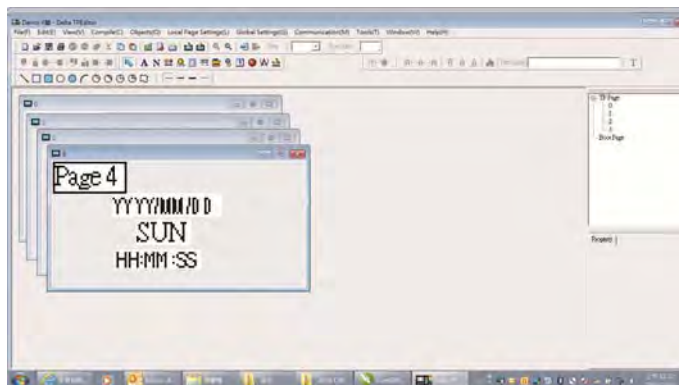

10 Auto-tuning Operations

■ Flow Chart

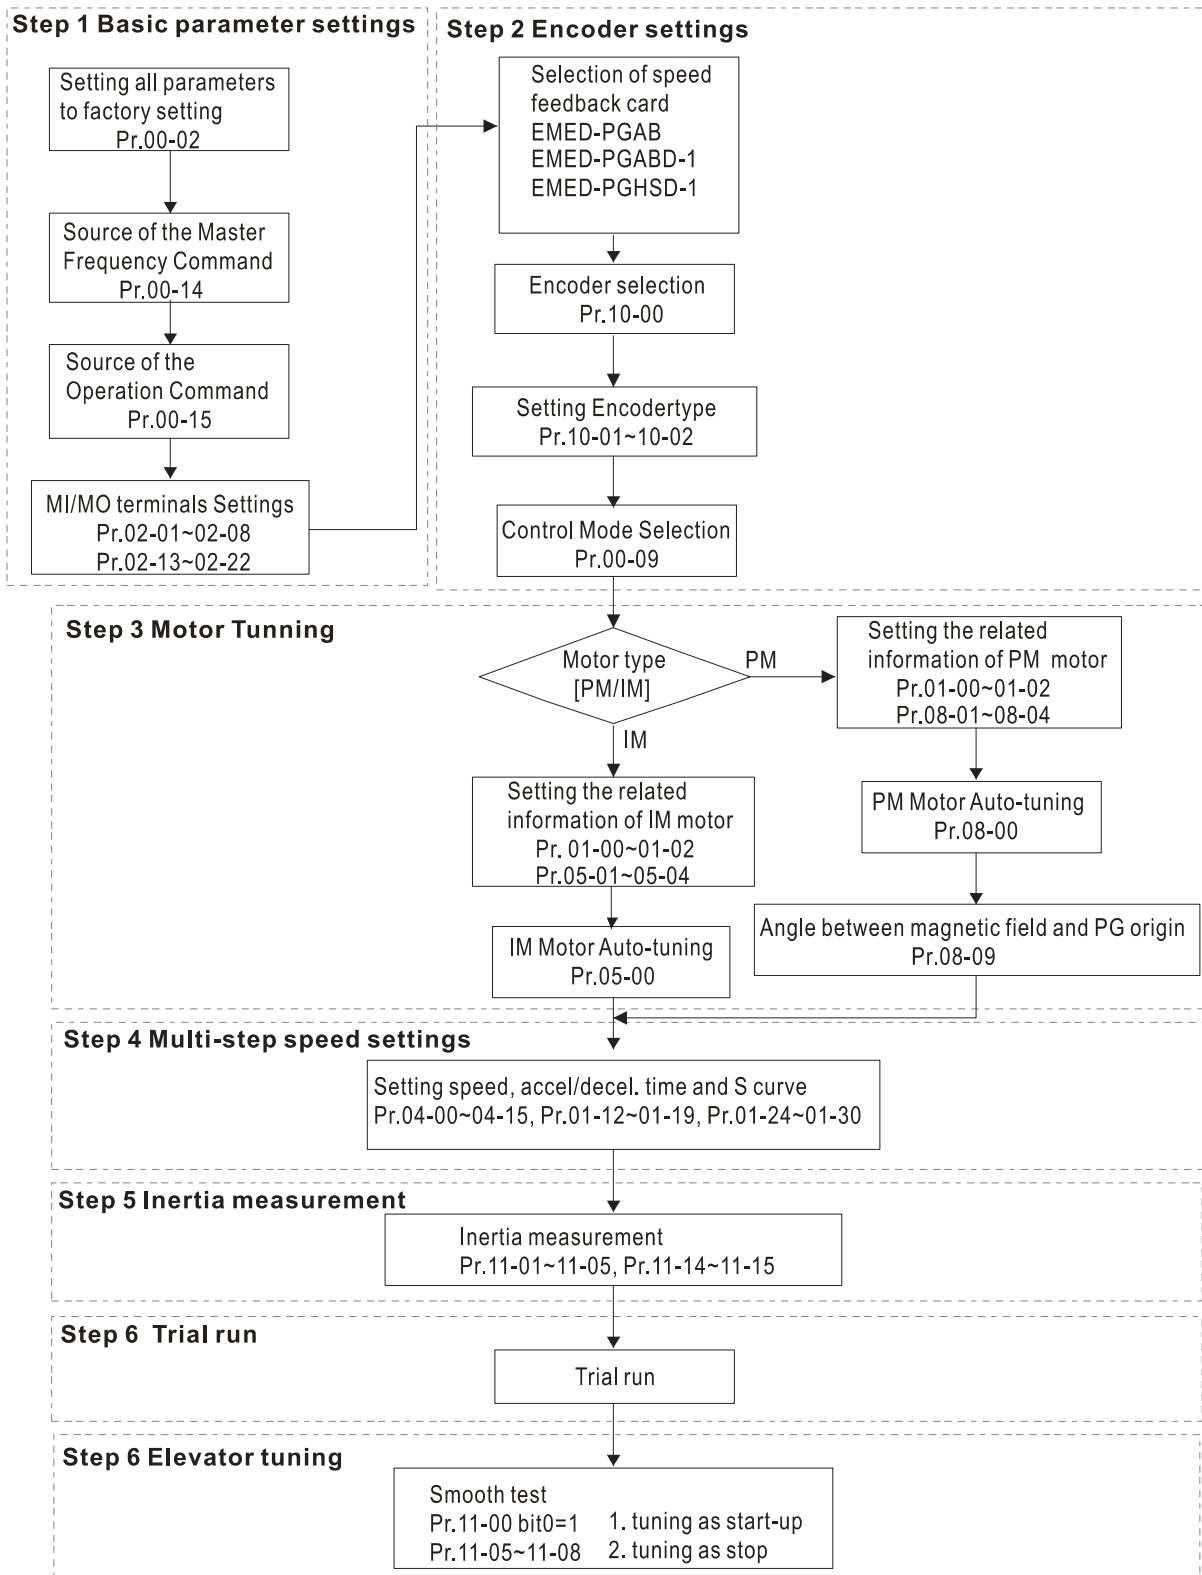

■ Explanations for the Auto-tuning Steps

Step1

Basic Parameters Settings

- Make sure that Pr.00-00 (identity code of the AC motor drive) corresponds with the nameplate indicated on the AC motor drive.
-
- Make sure that all parameters are reset to factory setting (Pr.00-02 is set to 9 or 10).

Pr00-02	0: No function
Parameter	1: Read only
Reset	8: Keypad lock
	9: All parameters are reset to factory settings (base frequency = 50Hz)
	10: All parameters are reset to factory settings (base frequency = 60Hz)

■

- Source of the Master Frequency Command: It is user-defined. (Pr.00-14)

■

Pr00-14	1: RS-485 serial communication or digital keypad (KPC-CC01)
Source of	2: External analog input (Pr. 03-00)
the Master	3: Digital terminals input (Pr04-00 ~ Pr.04-15)
Frequency	
Command	

■

- Source of the Operation Command: It is user-defined. (Pr.00-15)

■

Pr00-15	1: External terminals
Source of	2: RS-485 serial communication or digital keypad (KPC-CC01)
the operation	
frequency	

- MI/MO External Terminal Settings:

Refer to Pr.02-01~Pr02-08 for setting of the external input terminals MI1~MI8.

NOTE: The factory setting of Pr.02-08 is 40 (Enable drive function).

Disable this function, if you don't need to use it.

Settings of	0: No function
Pr02-01 to	1: multi-step speed command 1
Prp02-08	2: multi-step speed command 2
	3: multi-step speed command 3
	4: multi-step speed command 4
	5: Reset
	6: JOG command
	7: Acceleration/ Deceleration Speed inhibit
	8: the 1st, 2nd acceleration/deceleration time selection
	9: the 3rd, 4th acceleration/deceleration time selection
	10: EF input (07-28)
	11: Reserved
	12: Stop Output
	13: Reserved
	14: Reserved
	15: Operation speed command form AUI1
	16: Reserved
	17: operation speed command form AUI2
	18: Emergency stop (Pr07-28)
	19~23: Reserved
	24: FWD JOG command

25: REV JOG command
 26: Reserved
 27: ASR1/ASR2 selection
 28: Emergency stop (EF1) (Motor coasts to stop)
 29-30: Reserved
 31: High torque bias (by Pr.07-21)
 32: Middle torque bias (by Pr.07-22)
 33: Low torque bias (by Pr.07-23)
 34-37: Reserved
 38: Disable write EEPROM function
 39: Torque command direction
 40: Enable drive function
 41: Detection for magnetic contactor
 42: Mechanical brake
 43: EPS function

Refer to Pr02-15 and Pr02-16 for the settings of MO1~MO8

Pr02-15~ 0: No function
 Pr02-16 1: Operation indication
 2: Operation speed attained
 3: Desired frequency attained 1 (Pr.02-25)
 4: Desired frequency attained 2 (Pr.02-27)
 5: Zero speed (frequency command)
 6: Zero speed with stop (frequency command)
 7: Over torque (OT1) (Pr.06-05~06-07)
 8: Over torque (OT2) (Pr.06-08~06-10)
 9: Drive ready
 10: User-defined Low-voltage Detection (LV)
 11: Malfunction indication
 12: Mechanical brake release (Pr.02-29, Pr.02-30)
 13: Overheat (Pr.06-14)
 14: Brake chopper signal
 15: Motor-controlled magnetic contactor output
 16: Slip error (oSL)
 17: Malfunction indication
 18: Reserved
 19: Brake chopper output error
 20: Warning output
 21: Over voltage warning
 22: Over-current stall prevention warning
 23: Over-voltage stall prevention warning
 24: Operation mode indication (Pr.00-15≠0)
 25: Forward command
 26: Reverse command
 27: Output when current \geq Pr.02-33
 28: Output when current $<$ Pr.02-33
 29: Output when frequency \geq Pr.02-34
 30: Output when frequency $<$ Pr.02-34
 31-32: Reserved
 33: Zero speed (actual output frequency)
 34: Zero speed with Stop (actual output frequency)
 35: Error output selection 1 (Pr.06-22)
 36: Error output selection 2 (Pr.06-23)
 37: Error output selection 3 (Pr.06-24)
 38: Error output selection 4 (Pr.06-25)
 39: Reserved
 40: Speed attained (including zero speed)
 41: Reserved
 42: SO logic A output

Step2

Encoder Settings

- Selection of speed feedback cards
 - Refer to CH07 Speed Feedback Card Selection. Delta provides 2 kinds of PG card for user to choose, including EMED-PGABD-1 and EMED-PGHSD-1.

Pr10-00	0: No function
Type of PG signal	1: ABZ
	2: ABZ+Hall
	3: SIN/COS + Sinusoidal
	4: SIN/COS + Endat
	5: SIN/COS
	6: SIN/COS + Hiperface

- Encoder settings: Pr.10-01~Pr.10-02

Detection for the magnetic pole position of motor

The detection method will be different by the setting of Pr.10-00 PG Signal Type.

The detection methods: (refer to Pr.10-00)

- Setting 1 or 5: The AC motor drive will output short circuit to detect the position of the magnetic pole. At this moment, the motor will generate a little noise.
- Setting 2: The AC motor drive will detect the position of the magnetic pole by the UVW signal of PG.
- Setting 3: The AC motor drive will detect the position of the magnetic pole by the sine signal of PG.
- Setting 4: The AC motor drive will detect the position of the magnetic pole by the communication signal of PG.

Pr10-01	1~25000
Encoder Pulse	

Type of Encoder Input Setting. The setting of this parameter is normally 1, if the motor doesn't run at setting 1, change to setting 2.

Pr10-02	0: No function
Type of Encoder Input Setting	1: Phase A leads in a forward run command and phase B leads in a reverse run command
	2: Phase B leads in a forward run command and phase A leads in a reverse run command
	3: Phase A is a pulse input and phase B is a direction input. (low input=reverse direction, high input=forward direction)
	4: Phase A is a pulse input and phase B is a direction input. (low input=forward direction, high input=reverse direction)
	5: Single-phase input

Step 3

Motor tuning

- Setting the parameters according to the motor type (PM or IM)
- Motor Auto-tuning: When the Source of the Operation Command is set to digital keypad (Pr.00-15=2, refer to step 1)
- Control method: Please set Pr.00-09 to 8.

Pr00-09 Control Method	0: V/f Control
	1: V/f Control + Encoder (VFPG)
	2: Sensorless vector control (SVC)
	3: FOC vector control + Encoder (FOCPG)
	4: Torque control + Encoder (TQCPG)
	8: FOC PM control (FOCPM)

- NOTE: Setting parameter by the motor type (PM or IM).
- Inputting the nameplate information on the motor into Pr.01-00~01-02

Pr01-00 Maximum Output Frequency	10.00~400.00Hz
-------------------------------------	----------------

Pr01-01 1st Output Frequency Setting 1 (base frequency/ motor rated frequency)	0.00~400.00Hz
--------------------------------------------------------------------------------------	---------------

Pr.01-02 1st Output Voltage Setting 1 (base voltage/ motor rated voltage)	230V models: 0.0V~255.0V 460V models: 0.0V~510.0V
---------------------------------------------------------------------------------	------------------------------------------------------

【IM (Induction Motor)】

- Motor Auto-tuning: When the Source of the Operation Command is set to digital keypad (Pr.00-15=2, refer to step 1) and setting Pr.05-00=2
-

Pr05-00 Motor Auto Tuning	0: No function
	1: Rolling test (Rs, Rr, Lm, Lx, no-load current) , (Motor runs)
	2: Static Test (Motor doesn't run)

NOTE 1: It doesn't need to release the brake in this auto tuning operation. Please make sure that the electromagnetic valve is ON when it is used between the AC motor drive and motor. When Pr.05-00 is set to 2, no-load current of motor must be entered into Pr.05-05. The warning message "Auto tuning" will be displayed on the digital keypad during tuning until it is finished. Then, the measure result will be saved into Pr.05-06~Pr.05-09.

NOTE 2: It needs to finish motor auto tuning before measuring the angle between magnetic pole and PG origin.

Pr05-01 Full-load Current of Motor	(40~120%) *00-01 Amps
---------------------------------------	-------------------------

Pr05-02 Rated Power of Motor	0.00~655.35kW
---------------------------------	---------------

Pr05-03 Rated Speed of Motor(rpm)	0~65535
--------------------------------------	---------

Pr05-04 Number of Motor Poles	2~9
-------------------------------------	-----

【Permanent Magnet Motor】

- Motor Auto-tuning: When the Source of the Operation Command is set to digital keypad (Pr.00-15=2, refer to step 1) and setting Pr.08-00=2

Pr08-00 Motor Auto Tuning	0: No function 1: Only for the unloaded motor, auto measure the Angle between magnetic pole and PG origin (08-09) 2: For PM parameters 3: Auto measure the Angle between magnetic pole and PG origin (08-09)
------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

NOTE 1: It doesn't need to release the brake in this auto tuning operation. Please make sure that the electromagnetic valve is ON when it is used between the AC motor drive and motor. The warning message "Auto tuning" will be displayed on the digital keypad during tuning until it is finished. Then, the measure result will be saved into Pr.08-05 and Pr.08-07. (Pr.08-05 is Rs of Motor and Pr.08-07 is Lq of Motor)

NOTE 2: It is recommended to set Pr.08-00 to 1 (unloaded motor) for the most accurate calculation. If it needs to execute this function with loaded motor, please balance the carriage before execution.

When Pr.08-00=1, please note:

- When executing the function of auto measure the Angle between magnetic pole and PG origin, it is recommended to stop the carriage car at the middle level.
- Make sure that the electromagnetic valve and mechanical brake are OFF before executing this function.
- When Pr.08-00=1, please execute this function with unloaded motor to get the most accurate result. If it needs to execute this function with loaded motor, please balance the carriage before execution. Make sure the balance by releasing the brake manually before running. This balance will affect the accuracy and the accuracy will influence the power efficiency in driving the motor.

■
NOTE 3: If it doesn't allow balancing carriage in the measured environment, it can set Pr.08-00 to 3 for executing this function. It will have a difference of 15~30° by the different encoder type.

- When Pr.08-00 is set to 3, the driver will execute the function by the setting of Pr.10-00. The difference between Pr.08-00=3 and Pr.08-00=1 is it doesn't need to put the balanced carriage when Pr.08-00=3. Besides, the operation status of the motor will be as shown in the above table (Pr.10-00=1, 2, 3 and 5, the motor will run. Pr.10-00=4 and 6, the motor won't run)
- When Pr.08-00=3, please make sure if the setting of Pr.10-02 is correct. The incorrect setting will result in the wrong position of the magnetic pole and make the wrong angle between magnetic pole and PG origin.

■
NOTE 4: The warning message "Auto tuning" will be displayed on the digital keypad during tuning until it is finished. Then, the measure result will be saved into Pr.08-09.

NOTE 5: If the warning message "Auto Tuning Err" displayed on the digital keypad during tuning due to abnormal drive or human factor, please check if the wiring is correct. When the warning message "PG Fbk Error" displayed on the digital keypad, please change the setting of Pr.10-02 (for example: if it was set to 1, please change it to 2). When the warning message "PG Fbk Loss" is displayed on the digital keypad, please check the feedback of Z-phase pulse.

Pr.08-01 Full-load Current of Motor	(40~120%)*00-01 Amps
Pr.08-02 Rated power of Motor	0.00~655.35 kW
Pr.08-03 Rated speed of Motor (rpm)	0~65535
Pr.08-04 Number of Motor Poles	2~96

■ Measure the angle between magnetic pole and PG origin

It can execute "RUN" by keypad or digital terminals:

1. Using digital keypad: setting Pr.08-00 to 1 and press "RUN" to execute "auto measure the angle between magnetic pole and PG origin". Please note that if the electromagnetic valve and brake are not controlled by the AC motor drive, please release it by manual.
2. Using external terminals: setting Pr.00-14=3 (frequency source) and Pr.00-15=1 (operation source). Please use "inspection" function to execute "auto measure the angle between magnetic pole and PG origin".

For the IM, it doesn't need to detect the position of the magnetic pole, this function (auto measure the Angle between magnetic pole and PG origin) doesn't have to be executed.

Measure the angle between magnetic pole and PG origin: Pr.08-00=1 or 3

<p>Pr.08-00 Motor Auto tuning</p>	<p>0: No function</p> <p>1: Only for the unloaded motor, auto measure the Angle between magnetic pole and PG origin (08-09)</p> <p>2: For PM parameters</p> <p>3: Auto measure the Angle between magnetic pole and PG origin (08-09)</p>
---------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

NOTE: The function of "auto measure the angle between magnetic pole and Pg origin" only can be enabled after finishing motor auto-tuning.

Step 4**Multi-Step Speed setting or Analog setting****(Do not wire the two settings at the same time)****A. Multi-step speed settings**

- Confirm the total speed steps (high speed, middle speed, low speed, creep, inspection and level auto-learning)
- Make sure that the setting of step speeds and the action of the corresponding terminals of multi-function input commands are correct.
- Setting multi-step speeds in Pr.04-00 to Pr.04-15

■

Settings of Pr.04-00 to Pr.04-15	Zero Step Speed Frequency	0.00~400.00Hz
	1st Step Speed Frequency	0.00~400.00Hz
	2nd Step Speed Frequency	0.00~400.00Hz
	3rd Step Speed Frequency	0.00~400.00Hz
	4th Step Speed Frequency	0.00~400.00Hz
	5th Step Speed Frequency	0.00~400.00Hz
	6th Step Speed Frequency	0.00~400.00Hz
	7th Step Speed Frequency	0.00~400.00Hz
	8th Step Speed Frequency	0.00~400.00Hz
	9th Step Speed Frequency	0.00~400.00Hz
	10th Step Speed Frequency	0.00~400.00Hz
	11th Step Speed Frequency	0.00~400.00Hz
	12th Step Speed Frequency	0.00~400.00Hz
	13th Step Speed Frequency	0.00~400.00Hz
	14th Step Speed Frequency	0.00~400.00Hz
15th Step Speed Frequency	0.00~400.00Hz	

■

NOTE: It is recommended to set the max. operating frequency to the half of max. operating frequency before confirming the setting of each step speed and the action of the corresponding terminals of multi-function input commands.

- Setting the acceleration/deceleration with Pr.01-23 and the setting 08 (the 1st, 2nd acceleration/deceleration time selection) and 09 (the 3rd, 4th acceleration/deceleration time selection) of multi-function input command Pr.02-01~02-08.
- Settings of acceleration/deceleration time: Pr.01-12~Pr.01-19

Settings of Pr.01-12 to Pr.01-19	Accel Time 1	0.00~600.00 sec
	Decel Time 1	0.00~600.00 sec
	Accel Time 2	0.00~600.00 sec
	Decel Time 2	0.00~600.00 sec
	Accel Time 3	0.00~600.00 sec
	Decel Time 3	0.00~600.00 sec
	Accel Time 4	0.00~600.00 sec
	Decel Time 4	0.00~600.00 sec



NOTE: it is recommended to set the Pr.01-31 (deceleration time) to the small value in the trial run and execute smooth test after all the actions are correct.

■ Settings of S curve: Pr.01-24~Pr.01-30

Settings of Pr.01-24 to Pr.01-30	S-curve for Acceleration Departure Time S1	0.00~25.00 sec
	S-curve for Acceleration Arrival Time S2	0.00~25.00 sec
	S-curve for Deceleration Departure Time S3	0.00~25.00 sec
	S-curve for Deceleration Arrival Time S4	0.00~25.00 sec
	Mode Selection when Frequency < Fmin	0: Output waiting 1: Zero-speed operation 2: Fmin (4th output frequency setting)
	Switch Frequency for S3/S4 Changes to S5	0.00~400.00Hz
	S-curve for Deceleration Arrival Time S5	0.00~25.00 sec

NOTE: it is recommended to set the S curve time to 0 in trial run and execute smooth test after all the actions are correct.

B. Analog setting

1. Set Pr00-14=2, frequency command is assigned by the external analog signal.
2. Set Pr00-15 =1, operating command is assigned by the external terminals.
3. In order to work with the control terminal, set up Pr03-23 or Pr03-24 in accordance with the output mode of the controller
4. Set up Pr03-03, PR03-05 or Pr03-06 to work with the connecting port. Set F to display 0Hz when the motor drive is going to stop.

Step5**Inertia**

Pr.11-05 Inertial Ratio	1~300%
----------------------------	--------

Step 6**Trial run**

This step is used to trial run after finishing the settings of Step 1 to Step 5 to check if it runs normally after executing the inspection with the loaded motor. At the same time, please also check if the operations of multi-function output terminals is normal, such as the action of the brake release and electromagnetic valve correspond to the host controller.

It needs to check the switch between each step speed, current value, the noise in the carriage and noise source during operation.

Step 7

Elevator tuning

1. Setting Pr. 11-00 to bit 0=1

Pr.11-00 System control	Bit 0=0: disable Bit 0=1: ASR Auto tuning, PDFF enable Bit 7=1: When position control is enabled, it doesn't need to set Pr.07-02 (DC Brake Current Level) Bit 15=0: when power is applied, it will detect the position of magnetic pole again Bit 15=1: when power is applied, it will start from the magnetic pole position of previous power failure
----------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

NOTE: bit 15=0, it will detect the position of magnetic pole when the power is applied. (it will detect every time when the power is applied.)

Bit 15=1: when power is applied, it will start from the magnetic pole position of previous power failure. Please make sure that the motor is not manually rotated during power off. If the motor has been rotated during power off, please set Pr.08-10=1 for magnetic pole re-orientation.

2. Smooth test for general operation

- Adjust the setting of Pr.11-05

Pr.11-05 Inertial Ratio	1~300%
----------------------------	--------

- Adjust the settings of Pr.11-06 to Pr.11-08

Settings of Pr.11-06 to Pr.11-08	Zero-speed Bandwidth	0~40Hz
	Low-speed Bandwidth	0~40Hz
	High-speed Bandwidth	0~40Hz

3. Start-up adjustment (only for PM)

- Control by the zero-speed position

Setting Pr.11-00, 10-19, 10-22, 10-23, 02-29 and 10-24

Pr.11-00 System control	Bit 0=0: disable Bit 0=1: ASR Auto tuning, PDFF enable Bit 7=1: When position control is enabled, it doesn't need to set Pr.07-02 (DC Brake Current Level) Bit 15=0: when power is applied, it will detect the position of magnetic pole again Bit 15=1: when power is applied, it will start from the magnetic pole position of previous power failure
Pr.10-19 Zero Speed Gain (P)	0~655.00%

NOTE: refer to the explanations in Pr.02-32

Pr.10-22 Operation Time of Zero Speed	0.000~65.535sec
------------------------------------------	-----------------

Pr.10-23 Filter Time of Zero Speed	0.000~65.535sec
---------------------------------------	-----------------

Pr.10-24 Time for Zero Speed Execution	0: after the brake release set in Pr.02-29 1: after the brake signal input (Pr.02-01~02-08 is set to 42)
-------------------------------------------	-------------------------------------------------------------------------------------------------------------

Pr.02-29 Brake Release Delay Time when Elevator Starts	0.000~65.000 Sec
-----------------------------------------------------------	------------------

NOTE: When Pr.10-24=0, the zero speed control needs to be used with Pr.02-29. (refer to the explanations in Pr.02-32)

■ Function of the preload input

Connect the signal of the preload signal to the external terminal of the AC motor drive (AUI1) and setting Pr.03-00=11, 07-19=1, 03-03, 03-06 and 03-09.

Pr.03-00 Analog Input 1 (AUI1)	0: No function 1: Frequency command (torque limit under TQR control mode) 2: Torque command (torque limit under speed mode) 3: Torque compensation command 4-5: Reserved 6: P.T.C. thermistor input value 7: Positive torque limit 8: Negative torque limit 9: Regenerative torque limit 10: Positive/negative torque limit
-----------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Pr.07-19 Source of Torque Offset	0: Disable 1: Analog input (Pr.03-00) 2: Torque offset setting (Pr.07-20) 3: Control by external terminal (by Pr.07-21 to Pr.07-23)
-------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------


Pr.03-03 Analog Input Bias 1 (AUI1)	-100.0~100.0%
----------------------------------------	---------------

Pr.03-06 Positive/negative Bias Mode (AUI1)	0: Zero bias 1: Lower than bias=bias 2: Greater than bias=bias 3: The absolute value of the bias voltage while serving as the center 4: Serve bias as the center
------------------------------------------------	------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

Pr.03-09 Analog Input Gain 1 (AUI1)	-500.0~500.0%
----------------------------------------	---------------

NOTE: Pr.03-03, 03-06 and 03-09 are used to adjust the analog input signal.

- 07-19: Source of torque offset
- 03-00~02: Analog input selections (AUI1/ACI/AUI2)
- 03-03~05: Analog input bias (AUI1/ACI/AUI2)
- 03-06~08: AUI1/ACI/AUI2 bias mode

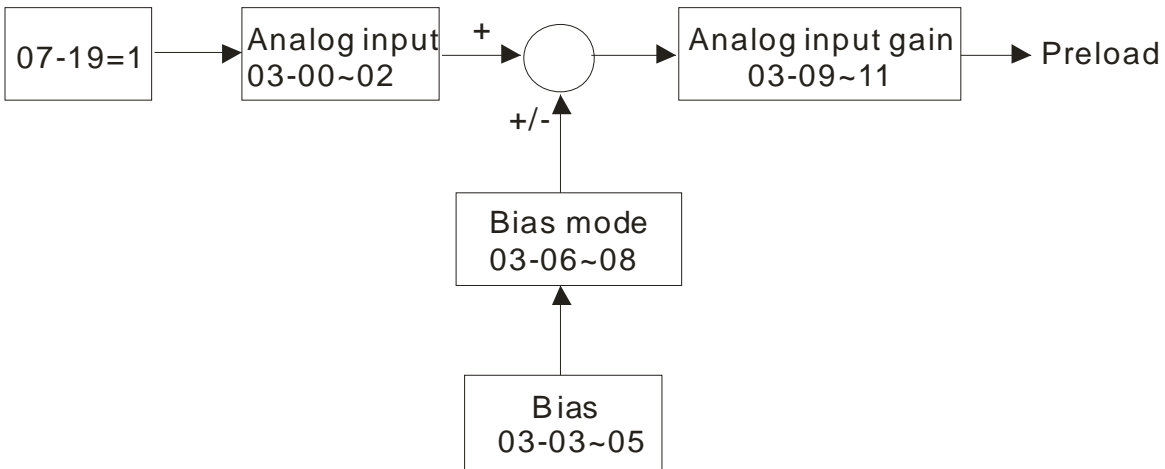

4. Setting of drive stop


Adjusting Pr.01-29, Pr.01-30, Pr.01-31 and Pr.11-06

Pr.01-29 Switch Frequency for S3/S4 Changes to S5	0.00~400.00Hz
Pr.01-30 S-curve for Deceleration Arrival Time S5	0.00~25.00 sec
Pr.11-06 Zero-speed Bandwidth	0~40Hz
Pr.01-31 Deceleration Time	0.00~600.00 sec


11 Summary of Parameter Settings

This chapter provides summary of parameter settings for user to gather the parameter setting ranges, factory settings and set parameters. The parameters can be set, changed and reset by the digital keypad.

NOTE

- 1) : the parameter can be set during operation
- 2) For more detail on parameters, please refer to Ch12 Description of Parameter Settings.

00 Drive Parameters

 NOTE IM: Induction Motor; PM: Permanent Magnet Motor

Pr.	Explanation	Setting Range	Factory Setting	VF	VFPF	SVC	FOCPG	TQCPG	FOCPM
				<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
00-00	Identity Code of the AC Motor Drive	108 : 220V · 3HP (single phase) 110 : 220V · 5HP (Single phase) 8 : 230V · 3HP 10 : 230V · 5HP 11 : 460 V · 5HP (4.0kW) 12 : 230V · 7.5HP 13 : 460 V · 7.5HP 14 : 230V, 10HP 15 : 460V, 10HP 16 : 230V, 15HP 17 : 460V, 15HP 18 : 230V, 20HP 19 : 460V, 20HP 20 : 230V, 25HP 21 : 460V, 25HP 22 : 230V, 30HP 23 : 460V, 30HP 24 : 230V, 40HP 25 : 460V, 40HP 26 : 230V, 50HP 27 : 460V, 50HP 29 : 460V, 60HP 31 : 460V, 75HP 33 : 460V, 100HP	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
00-01	Display AC Motor Drive Rated Current	Display by models	Read only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
00-02	Parameter Reset	0: No function 1: Read only 8: No function 9: All parameters are reset to factory settings(base frequency is 50Hz) 10: All parameters are reset to factory settings (base frequency is 60Hz)	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Pr.	Explanation	Setting Range	Factory Setting	VF	VFP	SVC	FOCPG	TQCPG	FOCPM
00-03	Start-up Display Selection	0: Frequency command 1: Output frequency 2: DC BUS voltage 3: Output current 4: Output voltage 5: User defined (00-04)	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
00-04	Content of Multi-function Display	0: Display output current (A) (Unit: Amps) 1: Reserved 2: Display actual output frequency (H.) (Unit: Hz) 3: Display DC-BUS voltage (v) (Unit: Vdc) 4: Display output voltage (E) (Unit: Vac) 5: Display output power angle (n) (Unit: deg) 6: Display output power in kW (P) (Unit: kW) 7: Display actual motor speed rpm (r) (Unit: rpm) 8: Display estimate output torque % (t) (Unit: %) 9: Display PG feedback (G) (refer to Pr.10-00,10-01) (Unit: PLS) 10: Display PID feedback (b) (Unit: %) 11: Display AUI1 in % (1.) (Unit: %) 12: Reserved 13: Display AUI2 in % (2.) (Unit: %) 14: Display the temperature of heat sink in °C (c.) (Unit: °C) 15: Display the temperature of IGBT in °C (c.) (Unit: °C) 16: The status of digital input (ON/OFF) (i) 17: The status of digital output (ON/OFF) (o) 18: Multi-step speed (S) 19: The corresponding CPU pin status of digital input (d)	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

		20: The corresponding CPU pin status of digital output (0.) 21~23: Reserved 24: AC output voltage when error occurred 25: DC-side voltage when error occurred 26: Motor's frequency when error occurred 27: Output current when error occurred 28: Output frequency when error occurred 29: Frequency command when error occurred 30: Output power when error occurred 31: Output torque when error occurred 32: Input terminal status when error occurred 33: Output terminal status when error occurred 34: Status of motor drive when error occurred 35: Display MI status & MO status on LED keypad.								
✓	00-05	User-Defined Coefficient K	Digit 4: decimal point number (0 to 3) Digit 3-0: 40 to 9999	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	00-06	Software Version	READ ONLY	#. #	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓	00-07	Password Input	1 to 9998 and 10000 to 65535 0 to 2: times of wrong password	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓	00-08	Password Set	1 to 9998 and 10000 to 65535 0: No password set or successful input in Pr.00-07 1: Password has been set	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	00-09	Control Method	0: V/f Control 1: V/f Control + Encoder (VFPG) 2: Sensorless vector control (SVC) 3: FOC vector control + Encoder (FOCPG) 4: Torque control + Encoder (TQCPG) 8: FOC PM control (FOCPM)	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓	00-10	Speed Unit	0: Hz 1: m/s 2: ft/s	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	00-11	Output Direction Selection	0: FWD: counterclockwise, REV: clockwise 1: FWD: clockwise, REV: counterclockwise	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓	00-12	Carrier Frequency	2~15KHz	12	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓	00-13	Auto Voltage Regulation (AVR) Function	0: Enable AVR 1: Disable AVR 2: Disable AVR when deceleration stop	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓	00-14	Source of the Master Frequency Command	1: RS-485 serial communication or digital keypad (KPC-CC01) 2: External analog input (Pr. 03-00) 3: Digital terminals input (Pr. 04-00~04-15)	1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓	00-15	Source of the Operation Command	1: External terminals 2: RS-485 serial communication or digital keypad (KPC-CC01)	1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

02 Basic Parameters

Pr.	Explanation	Setting Range	Factory Setting	V/F	V/PG	SVC	FOCPG	TQCPG	FOCPM
				<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01-00	Maximum Output Frequency	10.00~400.00Hz	60.00/ 50.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01-01	1st Output Frequency Setting 1 (base frequency /motor's rated frequency)	0.00~400.00Hz	60.00/ 50.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01-02	1st Output Voltage Setting 1 (base voltage/ motor's rated voltage)	230V serie: 0.0V~255.0V 460V serie: 0.0V~510.0V	220.0 440.0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
01-03	2 nd Output Frequency Setting 1	0.00~400.00Hz	0.50	<input type="checkbox"/>	<input type="checkbox"/>				
✓ 01-04	2 nd Output Voltage Setting 1	230V serie: 0.0V~255.0V 460V serie: 0.0V~510.0V	5.0 10.0	<input type="checkbox"/>	<input type="checkbox"/>				
01-05	3 rd Output Frequency Setting 1	0.00~400.00Hz	0.50	<input type="checkbox"/>	<input type="checkbox"/>				
✓ 01-06	3 rd Output Voltage Setting 1	230V serie: 0.0V~255.0V 460V serie: 0.0V~510.0V	5.0 10.0	<input type="checkbox"/>	<input type="checkbox"/>				
01-07	4 th Output Frequency Setting 1	0.00~400.00Hz	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
✓ 01-08	4 th Output Voltage Setting 1	230V serie: 0.0V~255.0V 460V serie: 0.0V~510.0V	5.0 10.0	<input type="checkbox"/>	<input type="checkbox"/>				
01-09	Starting Frequency	0.00~400.00Hz	0.50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		
✓ 01-10	Output Frequency Upper Limit	0.00~400.00Hz	120.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-11	Output Frequency Lower Limit	0.00~400.00Hz	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-12	Accel Time 1	0.00~600.00 sec.	3.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-13	Decel Time 1	0.00~600.00 sec	2.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-14	Accel Time 2	0.00~600.00 sec	3.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-15	Decel Time 2	0.00~600.00 sec	2.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-16	Accel Time 3	0.00~600.00 sec	3.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-17	Decel Time 3	0.00~600.00 sec	2.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-18	Accel Time 4	0.00~600.00 sec	3.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-19	Decel Time 4	0.00~600.00 sec	2.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-20	JOG Acceleration Time	0.00~600.00 sec	1.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-21	JOG Deceleration Time	0.00~600.00 sec	1.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-22	JOG Frequency	0.00~400.00Hz	6.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 01-23	Switch Frequency between 1st/4th Accel/decel	0.00~400.00Hz	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-24	S-curve for Acceleration Departure Time S1	0.00~25.00 sec	1.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-25	S-curve for Acceleration Arrival Time S2	0.00~25.00 sec	1.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-26	S-curve for Deceleration Departure Time S3	0.00~25.00sec.	1.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-27	S-curve for Deceleration Arrival Time S4	0.00~25.00sec.	1.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
01-28	Mode of Selection when Frequency < Fmin	0: Output waiting 1: Zero-speed operation 2: Fmin (4th output frequency setting)	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
✓ 01-29	Switch Frequency for S3/S4 Changes to S5	0.00~400.00Hz	0.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>
✓ 01-30	S-curve for Deceleration Arrival Time S5	0.00~25.00sec.	1.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>

↗ 01-31	Deceleration Time when Operating without RUN Command	0.00~600.00sec.	2.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
---------	------------------------------------------------------	-----------------	------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------	-----------------------

02 Digital Input/ Output Parametes

Pr.	Explanation	Setting Range	Factory Setting	VF	VFG	SVC	FOCPG	TQCPG	FOCPM
02-00	2-wire/3-wire Operation Control	0: FWD/STOP, REV/STOP 1: FWD/STOP, REV/STOP (Line Start Lockout) 2: RUN/STOP, REV/FWD 3: RUN/STOP, REV/FWD (Line Start Lockout) 4: 3-wire 5: 3-wire (Line Start Lockout)	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
02-01	Multi-Function Input Command 1 (MI1) (it is Stop terminal for 3-wire operation)	0: no function	1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		1: multi-step speed command 1		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
02-02	Multi-Function Input Command 2 (MI2)	2: multi-step speed command 2	2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
02-03	Multi-Function Input Command 3 (MI3)	3: multi-step speed command 3	3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
02-04	Multi-Function Input Command 4 (MI4)	4: multi-step speed command 4	4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
02-05	Multi-Function Input Command 5 (MI5)	5: Reset	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
02-06	Multi-Function Input Command 6 (MI6)	6: JOG command	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
02-07	Multi-Function Input Command 7 (MI7)	7: acceleration/deceleration speed inhibit	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
02-08	Multi-Function Input Command 8 (MI8)	8: the 1st, 2nd acceleration/deceleration time selection	40	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		9: the 3rd, 4th acceleration/deceleration time selection		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		10: EF input (07-28)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		11: Reserved		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		12: Stop output		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		13~14: Reserved		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		15: operation speed command form AUI1		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		16: Reserved		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		17: Operation speed command form AUI2		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		18: Emergency Stop (07-28)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		19~23: Reserved		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		24: FWD JOG command		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		25: REV JOG command		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		26: Reserved		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		27: ASR1/ASR2 selection		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		28: Emergency stop (EF1) (Motor coasts to stop)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		29-30: Reserved		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		31: High torque bias (by Pr.07-21)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		32: Middle torque bias (by Pr.07-22)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		33: Low torque bias (by Pr.07-23)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		34-37: Reserved		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		38: Disable write EEPROM function		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		39: Torque command direction		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
40: Enable drive function	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
41: Detection of magnetic contactor	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
42: Mechanical brake	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
43: EPS function	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			

↗	02-09	Digital Input Response Time	0.001~ 30.000sec.	0.005	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
↗	02-10	Digital Input Operation Direction	0~65535	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
↗	02-11	Multi-function Output 1 RA, RB, RC(Relay1)	0: No function	11	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			1: Operation indication		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
↗	02-12	Multi-function Output 2 MRA, MRC (Relay2)	2: Operation speed attained	1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			3: Desired frequency attained 1 (Pr.02-25)		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
↗	02-13	Multi-function Output 3 (Relay3)	4: Desired frequency attained 2 (Pr.02-27)	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
↗	02-14	Multi-function Output 4 (Relay4)	5: Zero speed (frequency command)	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
↗	02-15	Multi-fucntion Output 5 (MO1)	6: Zero speed with stop (frequency command)	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
↗	02-16	Multi-function Output 6 (MO2)	7: Over torque (OT1) (Pr.06-05~06-07)	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			8: Over torque (OT2) (Pr.06-08~06-10)		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			9: Drive ready	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			10: User-defined Low-voltage Detection (LV)	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			11: Malfunction indication	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			12: Mechanical brake release (Pr.02-29, Pr.02-30)	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			13: Overheat (Pr.06-14)	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			14: Brake chopper signal		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			15: Motor-controlled magnetic contactor output	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			16: Slip error (oSL)		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			17: Malfunction indication 1		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			18: Reserved		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			19: Brake chopper output error		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			20: Warning output		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			21: Over voltage warning		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			22: Over-current stall prevention warning		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			23: Over-voltage stall prevention warning		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			24: Operation mode indication (Pr.00-15≠0 and PU LED on KPC-CC01 is off)		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
			25: Forward command	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			26: Reverse command	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			27: Output when current >= Pr.02-33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			28: Output when current < Pr.02-33	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			29: Output when frequency >= Pr.02-34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			30: Output when frequency < Pr.02-34	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			31: Power generation direction and status verify	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			32: Power generation direction	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			33: Zero speed (actual output frequency)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			34: Zero speed with Stop (actual output frequency)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			35: Fault output option 1 (Pr.06-22)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			36: Fault output option 2 (Pr.06-23)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			37: Fault output option 3 (Pr.06-24)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			38: Fault output option 4 (Pr.06-25)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			39: Reserved	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			40: Speed attained (including zero speed)	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			41: Reserved	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
			42: SO Logice Output	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	
	02-17~ 02-22		Reserved		<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
↗	02-23	Multi-output Direction	0~65535	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
	02-24	Serial Start Signal Selection	0: by FWD/REV; 1: by Enable	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
↗	02-25	Desired Frequency	0.00~400.00Hz	60.00/ 50.00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

	Attained 1									
↘	02-26	The Width of the Desired Frequency Attained 1	0.00~400.00Hz	2.00	○	○	○	○		○
↘	02-27	Desired Frequency Attained 2	0.00~400.00Hz	60.00/ 50.00	○	○	○	○		○
↘	02-28	The Width of the Desired Frequency Attained 2	0.00~400.00Hz	2.00	○	○	○	○		○
	02-29	Brake Release Delay Time when Elevator Starts	0.000~65.000sec.	0.250	○	○	○	○	○	○
	02-30	Brake Engage Delay Time when Elevator Stops	0.000~65.000sec.	0.250	○	○	○	○	○	○
↘	02-31	Turn On Delay of Magnetic Contactor between Drive and Motor	0.000~65.000sec.	0.200	○	○	○	○	○	○
↘	02-32	Turn Off Delay of Magnetic Contactor between Drive and Motor	0.000~65.000sec.	0.200	○	○	○	○	○	○
↘	02-33	Output Current Level Setting for External Terminals	0~100%	0	○	○	○	○	○	○
↘	02-34	Output Boundary for External Terminals	0.00~+-400.00Hz (it is motor speed when using with PG)	0.00	○	○	○	○	○	○
↘	02-35	Detection Time of Mechanical Brake	0.00~10.00sec.	0.00	○	○	○	○	○	○
↘	02-36	Detection Time of Contactor	0.00~10.00sec.	0.00	○	○	○	○	○	○
	02-37	Check Torque Output Function	0: Enable 1: Disable	0	○	○	○	○	○	○

03 Analog Input/Output Parameter

Pr.	Explanation	Setting Range	Factory Setting	VF	VFG	SVC	FOCPG	TQCPG	FOCPM		
03-00	Analog Input 1 (AUI1)	0: No function	1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
03-01	Reserved	1: Frequency command (torque limit under TQR control mode)									
03-02	Analog Input 3 (AUI2)	2: Torque command (torque limit under speed mode)	0					<input type="radio"/>			
		3: Preload Input		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		4-5: Reserved									
		6: P.T.C. thermistor input value		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		7: Positive torque limit					<input type="radio"/>		<input type="radio"/>		
		8: Negative torque limit					<input type="radio"/>		<input type="radio"/>		
		9: Regenerative torque limit					<input type="radio"/>		<input type="radio"/>		
		10: Positive/negative torque limit					<input type="radio"/>		<input type="radio"/>		
		03-03		Analog Input Bias 1 (AUI1)	-100.0~100.0%	0.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
		03-04		Reserved							
03-05	Analog Input Bias 3 (AUI2)	-100.0~100.0%	0.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
03-06	Positive/negative Bias Mode (AUI1)	0: Zero bias	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
03-07	Reserved	1: Serve bias as the center, lower than bias=bias									
03-08	Positive/negative Bias Mode (AUI2)	2: Serve bias as the center, greater than bias=bias 3: The absolute value of the bias voltage while serving as the center (single polar) 4: Serve bias as the center (single polar)	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
03-09	Analog Input Gain 1 (AUI1)	0.0~500.0%	100.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
03-10	Reserved										
03-11	Analog Input Gain 3 (AUI2)	0.0~500.0%	100.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
03-12	Analog Input Delay Time (AUI1)	0.00~2.00sec.	0.01	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
03-13	Reserved										
03-14	AUI2 模擬輸入濾波時間	0.00~2.00sec.	0.01	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
03-15	Reserved										
03-16	Reserved										
03-17	Analog Output Selection 1	0: Output frequency (Hz)	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		1: Frequency command (Hz)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		2: Motor speed (RPM)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		3: Output current (rms)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		4: Output voltage		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		5: DC Bus Voltage		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		6: Power factor		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		7: Power		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		8: Output torque		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		9: AUI1		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		10: ACI									
		11: AUI2		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		12: q-axis current		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		13: q-axis feedback value		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		14: d-axis current		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		15: d-axis feedback value		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		16: q-axis voltage		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		17: d-axis voltage		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
18: Torque command	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>					

		19-20: Reserved									
↗	03-18	Analog Output Gain 1	0~200.0%	100.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
↗	03-19	Analog Output Value in REV Direction 1	0: Absolute value in REV direction 1: Output 0V in REV direction 2: Enable output voltage in REV direction	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
↗	03-20	Analog Output Selection 2	0: Output frequency (Hz)	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
			1: Frequency command (Hz)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			2: Motor speed (RPM)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			3: Output current (rms)		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			4: Output voltage		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			5: DC Bus Voltage		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			6: Power factor		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			7: Power		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			8: Output torque		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			9: AVI		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			10: ACI		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			11: AUI		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			12: q-axis current		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			13: q-axis feedback value		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
			14: d-axis current		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	15: d-axis feedback value	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
		16: q-axis voltage		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		17: d-axis voltage		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		18: Torque command		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
		19-20: Reserved									
↗	03-21	Analog Output Gain 2	0~200.0%	100.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
↗	03-22	Analog Output Value in REV Direction 2	0: Absolute value in REV direction 1: Output 0V in REV direction 2: Enable output voltage in REV direction	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
	03-23	Analog Input Type (AUI1)	0: Bipolar (±10V) 1: Unipolar (0-10V)	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
	03-24	Analog Input Type (AUI2)	0: Bipolar (±10V) 1: Unipolar (0-10V)	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	

04 Multi-Step Speed Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFG	SVC	FOCPG	TQCPG	FOCPM
				<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-00	Zero Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-01	1st Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-02	2nd Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-03	3rd Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-04	4th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-05	5th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-06	6th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-07	7th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-08	8th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-09	9th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-10	10th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-11	11th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-12	12th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-13	13th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-14	14th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↗ 04-15	15th Step Speed Frequency	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

05 IM Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFG	SVC	FOCPG	TQCPG	FOCPM
05-00	Motor Auto Tuning	0: No function 1: Rolling test (Rs, Rr, Lm, Lx, no-load current) 2: Static test	0	<input type="radio"/>					
05-01	Full-load Current of Motor	(40~120%) *00-01 Amps	###	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
05-02	Rated power of Motor	0.00~655.35kW	###			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
05-03	Rated speed of Motor (rpm)	0~65535	1710		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
05-04	Number of Motor Poles	2~48	4	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
05-05	No-load Current of Motor	0~ Pr05-01 <factory setting>	###		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
05-06	Rs of Motor	0.000~65.535Ω	0.000			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
05-07	Rr of Motor	0.000~65.535Ω	0.000			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
05-08	Lm of Motor	0.0~6553.5mH	0.0			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
05-09	Lx of Motor	0.0~6553.5mH	0.0			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
✓ 05-10	Torque Compensation Time Constant	0.001~10.000sec.	0.020			<input type="radio"/>			
✓ 05-11	Slip Compensation Time Constant	0.001~10.000sec.	0.100			<input type="radio"/>			
✓ 05-12	Torque Compensation Gain	0~10	0	<input type="radio"/>	<input type="radio"/>				
✓ 05-13	Slip Compensation Gain	0.00~10.00	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
✓ 05-14	Slip Deviation Level	0~1000% (0: disable)	0		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
✓ 05-15	Detection Time of Slip Deviation	0.0~10.0sec.	1.0		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
✓ 05-16	Over Slip Treatment	0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop	0		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
✓ 05-17	Hunting Gain	0~10000 (0: disable)	2000	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
05-18	Accumulative Motor Operation Time (Min.)	00~1439	00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
05-19	Accumulative Motor Operation Time (day)	00~65535	00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 05-20	Core Loss Compensation	0~250%	10			<input type="radio"/>			
05-21	Accumulative Drive Power-on Time (Min.)	00~1439	00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
05-22	Accumulative Drive Power-on Time (day)	00~65535	00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

06 Protection Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFP	SVC	FOCPG	TQCPG	FOCPM
				<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-00	Low Voltage Level	160.0~220.0Vdc 320.0~440.0Vdc	180.0 360.0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-01		0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop	2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-02	Phase-loss Protection	00: disable 00~250%	00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
06-03	Over-current Stall Prevention during Acceleration	00: disable 00~250%	00	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
06-04	Over-current Stall Prevention during Operation	0: by current accel/decel time 1: by the 1st accel/decel time 2: by the 2nd accel/decel time 3: by the 3rd accel/decel time 4: by the 4th accel/decel time 5: by auto accel/decel time	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
06-05	Accel./Decel. Time Selection of Stall Prevention at constant speed	0: disable 1: over-torque detection during constant speed operation, continue to operate after detection 2: over-torque detection during constant speed operation, stop operation after detection 3: over-torque detection during operation, continue to operate after detection 4: over-torque detection during operation, stop operation after detection	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-06	Over-torque Detection Selection (OT1)	10~250%	150	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-07	Over-torque Detection Level (OT1)	0.0~60.0sec.	0.1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-08	Over-torque Detection Time (OT1)	0: disable 1: over-torque detection during constant speed operation, continue to operate after detection 2: over-torque detection during constant speed operation, stop operation after detection 3: over-torque detection during operation, continue to operate after detection 4: over-torque detection during operation, stop operation after detection	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-09	Over-torque Detection Selection (OT2)	10~250%	150	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-10	Over-torque Detection Level (OT2)	0.0~60.0sec.	0.1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-11	Over-torque Detection Time (OT2)	0~250%	200				<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-12	Current Limit	0: Inverter motor 1: Standard motor 2: Disable	2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-13	Electronic Thermal Relay Selection	30.0~600.0sec.	60.0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-14	Electronic Thermal Characteristic	0.0~110.0°C	85.0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
06-15	Heat Sink Over-heat (OH) Warning	0~100% (Refer to Pr06-02, Pr06-03)	50	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>			
06-16	Stall Prevention Limit	0: No fault	0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Level									
06-17	Present Fault Record	1: Over-current during acceleration (ocA)	0	○	○	○	○	○	○
06-18	Second Most Recent Fault Record	2: Over-current during deceleration (ocd)	0	○	○	○	○	○	○
06-19	Third Most Recent Fault Record	3: Over-current during constant speed (ocn)	0	○	○	○	○	○	○
06-20	Fourth Most Recent Fault Record	4: Ground fault (GFF)	0	○	○	○	○	○	○
06-21	Fifth Most Recent Fault Record	5: IGBT short-circuit (occ) 6: Over-current at stop (ocS) 7: Over-voltage during acceleration (ovA) 8: Over-voltage during deceleration (ovd) 9: Over-voltage during constant speed (ovn) 10: Over-voltage at stop (ovS) 11: Low-voltage during acceleration (LvA) 12: Low-voltage during deceleration (Lvd) 13: Low-voltage during constant speed (Lvn) 14: Low-voltage at stop (LvS) 15: Phase loss (PHL) 16: IGBT heat sink over-heat (oH1) 17: Heat sink over-heat (oH2)(for 40HP above) 18: TH1 open loop error (tH1o) 19: TH2 open loop error (tH2o) 20: Fan error signal output	0	○	○	○	○	○	○
		21: over-load (150% 1Min) 22: Motor over-load (EoL1) 23: Reserved 24: Motor PTC overheat (oH3) 25: Reserved 26: over-torque 1 (ot1) 27: over-torque 1 (ot2) 28: Reserved 29: Reserved 30: Memory write-in error (cF1) 31: Memory read-out error (cF2) 32: Isum current detection error (cd0) 33: U-phase current detection error (cd1) 34: V-phase current detection error (cd2) 35: W-phase current detection error (cd3) 36: Clamp current detection error (Hd0) 37: Over-current detection error (Hd1) 38: Over-voltage detection error (Hd2) 39: Ground current detection error (Hd3) 40: Auto tuning error (AuE) 41: PID feedback loss (AFE) 42: PG feedback error (PGF1) 43: PG feedback loss (PGF2) 44: PG feedback stall (PGF3) 45: PG slip error (PGF4) 46: PG ref input error (PGr1) 47: PG ref loss (PGr2) 48: Analog current input error (ACE) 49: External fault input (EF) 50: Emergency stop (EF1) 51: Reserved 52: Password error (PcodE) 53: Reserved 54: Communication error (cE1) 55: Communication error (cE2) 56L Communication error (cE3) 57: Communication error (cE4) 58: Communication Time-out (cE10) 59: PU time-out (cP10) 60: Brake chopper error (bF)							

		61-62: Reserved 63: Safety loop error (Sry) 64: Mechanical brake error (MBF) 65: PGF5 hardware error 66: Magnetic contactor error 67: Phase loss of drive output (MPHL) 68: CAN Bus disconnected 69: Safety Torque Off (STO) 70: Channel 1(STO1~SCM1) abnormal safety circuit 71: Channel 2(STO2~SCM2) abnormal safety circuit 72: Abnormal internal circuit									
✓	06-22	Fault Output Option 1	0~65535 (refer to bit table for fault code)	0							
✓	06-23	Fault Output Option 2	0~65535 (refer to bit table for fault code)	0							
✓	06-24	Fault Output Option 3	0~65535 (refer to bit table for fault code)	0							
✓	06-25	Fault Output Option 4	0~65535 (refer to bit table for fault code)	0							
✓	06-26	PTC (Positive Temperature Coefficient) Detection Selection	0: Warn and keep operation 1: Warn and ramp to stop	0							
✓	06-27	PTC Level	0.0~100.0%	50.0							
✓	06-28	Filter Time for PTC Detection	0.00~10.00sec.	0.20							
	06-29	Voltage of Emergency Power	48.0~375.0Vdc 96.0~750.0Vdc	48.0 96.0							
✓	06-30	Setting Method of Fault Output	0: By settings of Pr.06-22~06-25 1: By the binary setting	0							
	06-31	Phase Loss Detection of Drive Output at Start up(MPHL)	0: Disable 1: Enable	0							
	06-32	Accumulative Drive Power-on Time at the First Fault (min.)	00~1439	00							
	06-33	Accumulative Drive Power-on Time at the First Fault (day)	00-65535	00							
	06-34	Accumulative Drive Power-on Time at the Second Fault (min.)	00~1439	00							
	06-35	Accumulative Drive Power-on Time at the Second Fault (day)	00-65535	00							
	06-36	Accumulative Drive Power-on Time at the Third Fault (min.)	00~1439	00							
	06-37	Accumulative Drive Power-on Time at the Third Fault (day)	00-65535	00							
	06-38	Accumulative Drive Power-on Time at the Fourth Fault (min.)	00~1439	00							
	06-39	Accumulative Drive Power-on Time at the Fourth Fault (day)	00-65535	00							
	06-40	Accumulative Drive Power-on Time at the Fifth Fault (min.)	00~1439	00							
	06-41	Accumulative Drive Power-on Time at the Fifth Fault (day)	00-65535	00							
	06-42	Accumulative Drive Power-on Time at the Sixth Fault (min.)	00~1439	00							
	06-43	Accumulative Drive Power-on Time at the	00-65535	00							

Sixth Fault (day)										
↘	06-44	Operation Speed of Emergency Power Mode	0.00~400.00Hz	Read Only	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↘	06-45	Low-voltage Protection	Bit0 = 0: Display Lv fault and coast to stop Bit0 = 1: Display Lv warn and coast to stop Bit1 = 0: Fan lock, fault and coast to stop Bit1 = 1: Fan lock, warn and coast to stop	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↘	06-46	Operation Direction for Emergency Power ON	0: Run by following the current command 1: Run by following the direction of power generating mode. 2: After determining the direction of power generating, the host computer sends the operating direction command. (When at STOP mode determine the direction of power generating mode (MO =32) but do not retain the direction of the power generating.) 3. After determining the direction of power generating, the host computer send the operating direction command. (When at STOP mode, determine the direction of power generating mode (MO =32) and retain the direction of the power generating.)	1	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
↘	06-47	Power Generation Direction Searching Time	0.0 ~ 5.0sec.	1.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	06-48	Power Capacity of Emergency Power	0.0 ~ 100.0 kVA	0.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
	06-49	STO Latch Selection	0: STO Latch 1: STO No Latch	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

07 Speical Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFP	SVC	FOCPG	TQCPG	FOCPM
✓ 07-00	Brake Chopper Level	230V serie: 350.0~450.0Vdc 460V serie: 700.0~900.0Vdc	380.0 760.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
07-01	Reserved								
✓ 07-02	Brake Chopper Level	0~100%	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
✓ 07-03	Brake Chopper Level	0.0~60.0sec.	0.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
✓ 07-04	Brake Chopper Level	0.0~60.0sec.	0.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
✓ 07-05	Brake Chopper Level	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		
✓ 07-06	Brake Chopper Level	1~500	50	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
✓ 07-07	Brake Chopper Level	0.00~600.00sec.	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
✓ 07-08	Brake Chopper Level	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
✓ 07-09	Brake Chopper Level	0.00~600.00sec.	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
✓ 07-10	Brake Chopper Level	0.00~400.00Hz	0.00	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
✓ 07-11	Cooling Fan Control	0: Coolign fan always ON 1: 1 minute after AC motor drive stops, cooling fan will be OFF 2: AC motor drive runs and cooling fan ON, AC motor drive stops and cooling fan OFF 3: Cooling fan ON to run when preliminary heat sink temperature attained 4: Cooling always OFF	2	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 07-12	Torque command	-100.0~100.0% (Pr07-14 setting =100%)	0.0					<input type="radio"/>	
✓ 07-13	Source of Torque Command	0: Digital keypad (KPC-CC01) 1: RS485 serial communication (RJ-11) 2: Analog signal (Pr.03-00)	2					<input type="radio"/>	
✓ 07-14	Maximum Torque Command	0~300%	100	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 07-15	Filter Time of Torque Command	0.000~1.000sec.	0.000					<input type="radio"/>	
07-16	Speed Limit Selection	0: By Pr.07-17 and Pr.07-18 1: Frequency command source (Pr.00-14)	0					<input type="radio"/>	
✓ 07-17	Torque Mode +Speed Limit	0~120%	10					<input type="radio"/>	
✓ 07-18	Torque Mode-Speed Limit	0~120%	10					<input type="radio"/>	
✓ 07-19	Source of Torque Offset	0: Disable 1: Analog input (Pr.03-00) 2: Torque offset setting (Pr.07-20) 3: Control by external terminal (by Pr.07-21 to Pr.07-23)	0			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 07-20	Torque Offset Setting	0.0~100.0%	0.0			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 07-21	High Torque Offset	0.0~100.0%	30.0			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 07-22	Middle Torque Offset	0.0~100.0%	20.0			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 07-23	Low Torque Offset	0.0~100.0%	10.0			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 07-24	Forward Motor Torque Limit	0~300%	200				<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 07-25	Forward Regenerative Torque Limit	0~300%	200				<input type="radio"/>	<input type="radio"/>	<input type="radio"/>


↘	07-26	Reverse Motor Torque Limit	0~300%	200					○	○	○
↘	07-27	Reverse Regenerative Torque Limit	0~300%	200					○	○	○
↘	07-28	Emergency Stop (EF) & Forced Stop Selection	0: Coast to stop 1: By deceleration Time 1 2: By deceleration Time 2 3: By deceleration Time 3 4: By deceleration Time 4 5: By Pr.01-31	0	○	○	○	○	○	○	○
↘	07-29	Time for Decreasing Torque at Stop	0.000~1.000sec.	0.000					○	○	○

08 PM Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFP	SVC	FOCPG	TQCPG	FOCPM
08-00	Motor Auto Tuning	0: No function 1: Only for the unloaded motor, auto measure the angle between magnetic pole and PG origin (08-09) 2: For PM parameters 3: Auto measure the angle between magnetic pole and PG origin (08-09)	0						<input type="radio"/>
08-01	Full-load Current of Motor	(40~120%) *00-01 Amps	###						<input type="radio"/>
08-02	Rated power of Motor	0.00~655.35kW	###						<input type="radio"/>
08-03	Rated speed of Motor (rpm)	0~65535	1710						<input type="radio"/>
08-04	Number of Motor Poles	2~96	4						<input type="radio"/>
08-05	Rs of Motor	0.000~65.535Ω	0.000						<input type="radio"/>
08-06	Ld of Motor	0.0~6553.5mH	0.0						<input type="radio"/>
08-07	Lq of Motor	0.0~6553.5mH	0.0						<input type="radio"/>
08-08	Back Electromotive Force	0.0~6553.5Vrms	0.0						<input type="radio"/>
08-09	Angle between Magnetic Pole and PG Origin	0.0~360.0°	360.0						<input type="radio"/>
08-10	Magnetic Pole Re-orientation	0: Disable 1: Enable	0						<input type="radio"/>

09 Communication Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
✓ 09-00	Communication Address	1~254	1						
✓ 09-01	Transmission Speed	4.8~115.2Kbps	9.6	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 09-02	Transmission Fault Treatment	0: Warn and keep operation 1: Warn and ramp to stop 2: Reserved 3: No action and no display	3	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 09-03	Time-out Detection	0.0~100.0sec.	0.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 09-04	Communication Protocol	0: 7N1 (ASCII) 1: 7N2 (ASCII) 2: 7E1 (ASCII) 3: 7O1 (ASCII) 4: 7E2 (ASCII) 5: 7O2 (ASCII) 6: 8N1 (ASCII) 7: 8N2 (ASCII) 8: 8E1 (ASCII) 9: 8O1 (ASCII) 10: 8E2 (ASCII) 11: 8O2 (ASCII) 12: 8N1 (RTU) 13: 8N2 (RTU) 14: 8E1 (RTU) 15: 8O1 (RTU) 16: 8E2 (RTU) 17: 8O2 (RTU)	13	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 09-05	Response Delay Time	0.0~200.0ms	2.0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

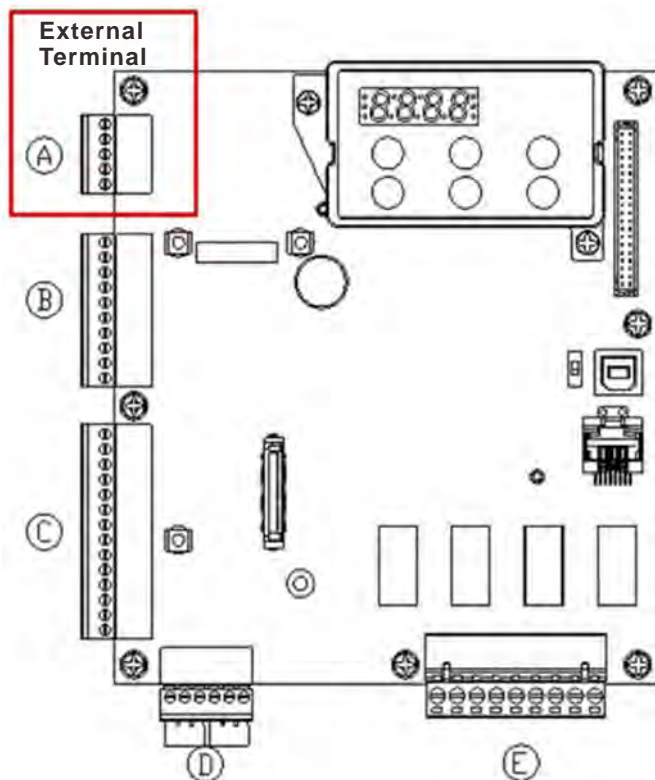

10 Speed Feedback Control Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFP	SVC	FOCPG	TQCPG	FOCPM
10-00	Selection of Encoder	0: No function 1: ABZ 2: ABZ+Hall 3: SIN/COS + Sinusoidal 4: SIN/COS + Endat 5: SIN/COS 6: SIN/COS + Hiperface	0		<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
10-01	Encoder Pulse	1~25000	600		<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
10-02	Encoder Input Type Setting	0: Disable 1: Phase A leads in a forward run command and phase B leads in a reverse run command 2: Phase B leads in a forward run command and phase A leads in a reverse run command 3: Phase A is a pulse input and phase B is a direction input. (low input=reverse direction, high input=forward direction) 4: Phase A is a pulse input and phase B is a direction input. (low input=forward direction, high input=reverse direction) 5: Single-phase input	0		<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 10-03	Encoder Feedback Fault Treatment (PGF1, PGF2)	0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and stop operation	2		<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 10-04	Detection Time for Encoder Feedback Fault	0.0~10.0sec.	1.0		<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 10-05	Encoder Stall Level (PGF3)	0~120% (0: Disable)	115		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
✓ 10-06	Encoder Stall Detection Time	0.0~2.0sec.	0.1		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
✓ 10-07	Encoder Slip Range (PGF4)	0~50% (0: Disable)	50		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
✓ 10-08	Encoder Slip Detection Time	0.0~10.0sec.	0.5		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
✓ 10-09	Encoder Stall and Slip Error Treatment	0: Warn and keep operation 1: Warn and ramp to stop 2: Warn and coast to stop	2		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>		<input type="radio"/>
10-10	Mode Selection for UVW Input	0: Z signal is at the falling edge of U-phase 1: Z signal is at the rising edge of U-phase	0		<input type="radio"/>		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 10-11	ASR (Auto Speed Regulation) Control (P) of Zero Speed	0.0~500.0%	100.0		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 10-12	ASR (Auto Speed Regulation) Control (I) of Zero Speed	0.000~10.000sec.	0.100		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 10-13	ASR (Auto Speed Regulation) Control (P) 1	0.0~500.0%	100.0		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 10-14	ASR (Auto Speed Regulation) Control (I) 1	0.000~10.000sec.	0.100		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 10-15	ASR (Auto Speed Regulation) Control (P) 2	0.0~500.0%	100.0		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 10-16	ASR (Auto Speed	0.000~10.000sec.	0.100		<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

Regulation) Control (I) 2									
✓	10-17	ASR 1/ASR2 Switch Frequency	0.00~400.00Hz (0: Disable)	7.00	○	○	○	○	○
✓	10-18	ASR Primary Low Pass Filter Gain	0.000~0.350sec.	0.008	○	○	○	○	○
✓	10-19	Zero Speed Gain (P)	0~655.00%	80.00					○
✓	10-20	Zero Speed/ASR1 Width Adjustment	0.00~400.00Hz	5.00		○		○	○
✓	10-21	ASR1/ASR2 Width Adjustment	0.00~400.00Hz	5.00		○		○	○
✓	10-22	Zero speed Position Holding Time	0.000~65.535s	0.250					○
✓	10-23	Filter Time at Zero Speed	0.000~65.535s	0.004					○
✓	10-24	Time for Executing Zero Speed	0: after the brake release set in Pr.02-29 1: after the brake signal input (Pr.02-01~02-08 is set to 42)	0					○
✓	10-25	Elevator Leveling (Zero Speed Gain P)	0~1000.0%	100.0	○	○	○	○	○
✓	10-26	Elevator Leveling (Zero Speed Integral I)	0~10.000sec.	0.100	○	○	○	○	○
✓	10-27	Elevator Starts (Zero Speed Gain P)	0~1000.0%	100.0	○	○	○	○	○
✓	10-28	Elevator Starts (Zero Speed Integral I)	0~10.000sec.	0.100	○	○	○	○	○
✓	10-29	Setting of PG card frequency division output	0~32	0		○		○	○
✓	10-30	Setting of PG card frequency division output	0x00~0x02	0		○		○	○

11 Advanced Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFG	SVC	FOCPG	TQCPG	FOCPM
11-00	System Control	Bit 0=0: no function Bit 0=1: ASR Auto tuning, PDFF enable Bit 7=0: no function Bit 7=1: When position control is enabled, it doesn't need to set Pr.07-02 (DC Brake Current Level) Bit 15=0: when power is applied, it will detect the position of magnetic pole again Bit 15=1: when power is applied, it will start from the magnetic pole position of previous power failure	0				<input type="radio"/>		<input type="radio"/>
✓ 11-01	Elevator Speed	0.10~4.00 m/s	1				<input type="radio"/>		<input type="radio"/>
✓ 11-02	Sheave Diameter	100~2000mm	400				<input type="radio"/>		<input type="radio"/>
✓ 11-03	Mechanical Gear Ratio	1~100	1				<input type="radio"/>		<input type="radio"/>
✓ 11-04	Suspension Ratio	0= 1:1 1= 2:1	1				<input type="radio"/>		<input type="radio"/>
✓ 11-05	Inertial Ratio	1~300%	40				<input type="radio"/>		<input type="radio"/>
✓ 11-06	Zero-speed Bandwidth	0~40Hz	10				<input type="radio"/>		<input type="radio"/>
✓ 11-07	Low-speed Bandwidth	0~40Hz	10				<input type="radio"/>		<input type="radio"/>
✓ 11-08	High-speed Bandwidth	0~40Hz	10				<input type="radio"/>		<input type="radio"/>
✓ 11-09	PDFF Gain Value	0~200%	30				<input type="radio"/>		<input type="radio"/>
✓ 11-10	Gain for Speed Feed Forward	0~500	0				<input type="radio"/>		<input type="radio"/>
✓ 11-11	Notch Filter Depth	0~20db	0				<input type="radio"/>		<input type="radio"/>
✓ 11-12	Notch Filter Frequency	0.00~200.00Hz	0.00				<input type="radio"/>		<input type="radio"/>
✓ 11-13	Low-pass Filter Time of Keypad Display	0.001~65.535s	0.500	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
✓ 11-14	Motor Current at Accel.	50~200%	150						<input type="radio"/>
✓ 11-15	Elevator Acceleration	0.20~2.00m/s ²	0.75						<input type="radio"/>
11-16	Reserved	0X0000~0XFFFF	0	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
11--17	Reserved	Read Only	###	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
11-18	Reserved	0X0000~0XFFFF	###	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

12 User Defined Parameters

User-defined Parameters with range from Group 00 to Group 11

Pr.	Explanation (Default Function)	Address	Factory setting	VF	VFP	SVC	FOCPG	TQCPG	FOCPM
				<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-00	Present Fault Record	0610	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-01	Present Fault Time of Motor Operation (min.)	0620	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-02	Present Fault Time of Motor Operation (day)	0621	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-03	Frequency Command at Present Fault	2120	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-04	Output Frequency at Preset Fault	2121	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-05	Output Current at Present Fault	2122	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-06	Motor Frequency at Present Fault	2123	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-07	Output Voltage at Present Fault	2124	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-08	DC-Bus Voltage at Present Fault	2125	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-09	Output Power at Present Fault	2126	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-10	Output Torque at Present Fault	2127	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-11	IGBT Temperature of Power Module at Present Fault	2128	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-12	Multi-function Terminal Input Status at Present Fault	2129	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-13	Multi-function Terminal Output Status at Present Fault	212A	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-14	Drive Status at Present Fault	212B	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-15	Second Most Recent Fault Record	0611	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-16	Second Most Recent Fault Time of Motor Operation (min.)	0622	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-17	Second Most Recent Fault Time of Motor Operation (day)	0623	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-18	Third Most Recent Fault Record	0612	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-19	Third Most Recent Fault Time of Motor Operation (min.)	0624	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-20	Third Most Recent Fault Time of Motor Operation (day)	0625	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-21	Fourth Most Recent Fault Record	0613	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-22	Fourth Most Recent Fault Time of Motor Operation (min.)	0626	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-23	Fourth Most Recent Fault Time of Motor Operation (day)	0627	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-24	Fifth Most Recent Fault Record	0614	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-25	Fifth Most Recent Fault Time of Motor Operation (min.)	0628	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-26	Fifth Most Recent Fault Time of Motor Operation (day)	0629	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-27	Sixth Most Recent Fault Record	0615	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-28	Sixth Most Recent Fault Time of Motor Operation (min.)	062A	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-29	Sixth Most Recent Fault Time of Motor Operation (day)	062B	Read Only	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
✓ 12-30	No factory setting								
✓ 12-31	No factory setting								

13 View User-defind Parameters

Pr.	Explanation	Setting Range	Factory Setting	VF	VFPG	SVC	FOCPG	TQCPG	FOCPM
13-00 ~ 13-31	View User-defined Parameters	Pr00-00~ Pr11-17	-	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>